

FAA APPROVED
AIRPLANE FLIGHT MANUAL

for the CIRRUS SR22
with
Cirrus Perspective Touch+ Avionics System



FAA Approved in Normal Category based on 14 CFR 23. This document must be carried in the airplane at all times and be kept within the reach of the pilot during all flight operations.

THIS MANUAL INCLUDES THE MATERIAL REQUIRED TO BE FURNISHED TO THE PILOT BY 14 CFR 23 AND ADDITIONAL INFORMATION PROVIDED BY CIRRUS AIRCRAFT AND CONSTITUTES THE FAA APPROVED AIRPLANE FLIGHT MANUAL.

Model - Serial #:

Registration #:

**MONICA M
MERRITT**

Digitally signed by
MONICA M MERRITT
Date: 2023.08.25 09:39:16
-05'00'

Monica Merritt, Manager, AIR-712, for

Manager, Flight Test & Human Factors Branch, AIR-710
Federal Aviation Administration

25 Aug 2023

Approved Date



Copyright © 2023 - All Rights Reserved
Cirrus Aircraft
4515 Taylor Circle
Duluth, MN 55811

List of Effective Pages

Use this page to determine the current effective date for each page in the AFM. Supplements are issued individually and are controlled by the Log of Supplements Page in Section 9.

Log of Revisions

REV NO	FAA APPROVAL	DATE	SUMMARY DESCRIPTION
Original Issue	Monica Merritt Mgr., AIR-712 25 Aug 2023	01 Aug 2023	Original Issue

Page	Status	Page	Status	Page	Status
CoverPage-i	Original Issue	2-11	Original Issue	3-7	Original Issue
CoverPage-ii	Original Issue	2-12	Original Issue	3-8	Original Issue
LOEP-1	Original Issue	2-13	Original Issue	3-9	Original Issue
LOEP-2	Original Issue	2-14	Original Issue	3-10	Original Issue
LOEP-3	Original Issue	2-15	Original Issue	3-11	Original Issue
LOEP-4	Original Issue	2-16	Original Issue	3-12	Original Issue
Frontmatter-1	Original Issue	2-17	Original Issue	3-13	Original Issue
Frontmatter-2	Original Issue	2-18	Original Issue	3-14	Original Issue
Frontmatter-3	Original Issue	2-19	Original Issue	3-15	Original Issue
Frontmatter-4	Original Issue	2-20	Original Issue	3-16	Original Issue
1-1	Original Issue	2-21	Original Issue	3-17	Original Issue
1-2	Original Issue	2-22	Original Issue	3-18	Original Issue
1-3	Original Issue	2-23	Original Issue	3-19	Original Issue
1-4	Original Issue	2-24	Original Issue	3-20	Original Issue
1-5	Original Issue	2-25	Original Issue	3-21	Original Issue
1-6	Original Issue	2-26	Original Issue	3-22	Original Issue
1-7	Original Issue	2-27	Original Issue	3-23	Original Issue
1-8	Original Issue	2-28	Original Issue	3-24	Original Issue
1-9	Original Issue	2-29	Original Issue	3-25	Original Issue
1-10	Original Issue	2-30	Original Issue	3-26	Original Issue
1-11	Original Issue	2-31	Original Issue	3-27	Original Issue
1-12	Original Issue	2-32	Original Issue	3-28	Original Issue
1-13	Original Issue	2-33	Original Issue	3-29	Original Issue
1-14	Original Issue	2-34	Original Issue	3-30	Original Issue
2-1	Original Issue	2-35	Original Issue	3-31	Original Issue
2-2	Original Issue	2-36	Original Issue	3-32	Original Issue
2-3	Original Issue	2-37	Original Issue	3-33	Original Issue
2-4	Original Issue	2-38	Original Issue	3-34	Original Issue
2-5	Original Issue	3-1	Original Issue	3-35	Original Issue
2-6	Original Issue	3-2	Original Issue	3-36	Original Issue
2-7	Original Issue	3-3	Original Issue	3-37	Original Issue
2-8	Original Issue	3-4	Original Issue	3-38	Original Issue
2-9	Original Issue	3-5	Original Issue	3-39	Original Issue
2-10	Original Issue	3-6	Original Issue	3-40	Original Issue

List of Effective Pages (Cont.)

Page	Status	Page	Status	Page	Status
3-41	Original Issue	4-8	Original Issue	5-25	Original Issue
3-42	Original Issue	4-9	Original Issue	5-26	Original Issue
3-43	Original Issue	4-10	Original Issue	5-27	Original Issue
3-44	Original Issue	4-11	Original Issue	5-28	Original Issue
3-45	Original Issue	4-12	Original Issue	5-29	Original Issue
3-46	Original Issue	4-13	Original Issue	5-30	Original Issue
3A-1	Original Issue	4-14	Original Issue	5-31	Original Issue
3A-2	Original Issue	4-15	Original Issue	5-32	Original Issue
3A-3	Original Issue	4-16	Original Issue	5-33	Original Issue
3A-4	Original Issue	4-17	Original Issue	5-34	Original Issue
3A-5	Original Issue	4-18	Original Issue	5-35	Original Issue
3A-6	Original Issue	4-19	Original Issue	5-36	Original Issue
3A-7	Original Issue	4-20	Original Issue	5-37	Original Issue
3A-8	Original Issue	4-21	Original Issue	5-38	Original Issue
3A-9	Original Issue	4-22	Original Issue	5-39	Original Issue
3A-10	Original Issue	4-23	Original Issue	5-40	Original Issue
3A-11	Original Issue	4-24	Original Issue	5-41	Original Issue
3A-12	Original Issue	4-25	Original Issue	5-42	Original Issue
3A-13	Original Issue	4-26	Original Issue	5-43	Original Issue
3A-14	Original Issue	4-27	Original Issue	5-44	Original Issue
3A-15	Original Issue	4-28	Original Issue	5-45	Original Issue
3A-16	Original Issue	4-29	Original Issue	5-46	Original Issue
3A-17	Original Issue	4-30	Original Issue	5-47	Original Issue
3A-18	Original Issue	4-31	Original Issue	5-48	Original Issue
3A-19	Original Issue	4-32	Original Issue	5-49	Original Issue
3A-20	Original Issue	4-33	Original Issue	5-50	Original Issue
3A-21	Original Issue	4-34	Original Issue	5-51	Original Issue
3A-22	Original Issue	4-35	Original Issue	5-52	Original Issue
3A-23	Original Issue	4-36	Original Issue	5-53	Original Issue
3A-24	Original Issue	4-37	Original Issue	5-54	Original Issue
3A-25	Original Issue	4-38	Original Issue	5-55	Original Issue
3A-26	Original Issue	5-1	Original Issue	5-56	Original Issue
3A-27	Original Issue	5-2	Original Issue	5-57	Original Issue
3A-28	Original Issue	5-3	Original Issue	5-58	Original Issue
3A-29	Original Issue	5-4	Original Issue	6-1	Original Issue
3A-30	Original Issue	5-5	Original Issue	6-2	Original Issue
3A-31	Original Issue	5-6	Original Issue	6-3	Original Issue
3A-32	Original Issue	5-7	Original Issue	6-4	Original Issue
3A-33	Original Issue	5-8	Original Issue	6-5	Original Issue
3A-34	Original Issue	5-9	Original Issue	6-6	Original Issue
3A-35	Original Issue	5-10	Original Issue	6-7	Original Issue
3A-36	Original Issue	5-11	Original Issue	6-8	Original Issue
3A-37	Original Issue	5-12	Original Issue	6-9	Original Issue
3A-38	Original Issue	5-13	Original Issue	6-10	Original Issue
3A-39	Original Issue	5-14	Original Issue	6-11	Original Issue
3A-40	Original Issue	5-15	Original Issue	6-12	Original Issue
3A-41	Original Issue	5-16	Original Issue	7-1	Original Issue
3A-42	Original Issue	5-17	Original Issue	7-2	Original Issue
4-1	Original Issue	5-18	Original Issue	8-1	Original Issue
4-2	Original Issue	5-19	Original Issue	8-2	Original Issue
4-3	Original Issue	5-20	Original Issue	8-3	Original Issue
4-4	Original Issue	5-21	Original Issue	8-4	Original Issue
4-5	Original Issue	5-22	Original Issue	8-5	Original Issue
4-6	Original Issue	5-23	Original Issue	8-6	Original Issue
4-7	Original Issue	5-24	Original Issue	8-7	Original Issue

List of Effective Pages (Cont.)

Page	Status	Page	Status	Page	Status
8-8	Original Issue				
8-9	Original Issue				
8-10	Original Issue				
8-11	Original Issue				
8-12	Original Issue				
8-13	Original Issue				
8-14	Original Issue				
8-15	Original Issue				
8-16	Original Issue				
8-17	Original Issue				
8-18	Original Issue				
8-19	Original Issue				
8-20	Original Issue				
8-21	Original Issue				
8-22	Original Issue				
8-23	Original Issue				
8-24	Original Issue				
8-25	Original Issue				
8-26	Original Issue				
8-27	Original Issue				
8-28	Original Issue				
8-29	Original Issue				
8-30	Original Issue				
8-31	Original Issue				
8-32	Original Issue				
8-33	Original Issue				
8-34	Original Issue				
9-1	Original Issue				
9-2	Original Issue				
10-1	Original Issue				
10-2	Original Issue				
10-3	Original Issue				
10-4	Original Issue				
10-5	Original Issue				
10-6	Original Issue				
10-7	Original Issue				
10-8	Original Issue				

List of Effective Pages (Cont.)

Page	Status	Page	Status	Page	Status
------	--------	------	--------	------	--------

		Intentionally Left Blank			
--	--	--------------------------	--	--	--

Foreword

This Airplane Flight Manual (AFM) has been prepared by Cirrus to familiarize operators with the aircraft. Read this AFM carefully. It provides operational procedures that will ensure the operator obtains the performance published in the manual, data ed to allow the most efficient and safe use of the airplane, and basic information to assist in maintaining the airplane in airworthy condition.

• NOTE •

All limitations, procedures, maintenance & servicing requirements, and performance data contained in this AFM are mandatory for compliance with FAA operating rules and for continued airworthiness of the airplane.

This AFM includes the material required to be furnished to the pilot by the Code of Federal Regulations (CFRs) and additional information provided by Cirrus and constitutes the FAA Approved Airplane Flight Manual for the aircraft.

The Airplane Flight Manual

This AFM has been prepared using GAMA Specification #1 for Airplane Flight Manual, Revision 2, dated 18 October 1996 as the content model and format guide. However, some deviations from this specification were made for clarity. The AFM is presented in loose-leaf form for ease in inserting revisions and is sized for convenient storage. Tabbed dividers throughout the AFM allow quick reference to each section. Logical and convenient Tables of Contents are located at the beginning of each section to aid in locating specific data within that section. The AFM is divided into ten sections as follows:

Section 1	General
Section 2	Limitations
Section 3	Emergency Procedures
Section 3A	Abnormal Procedures
Section 4	Normal Procedures
Section 5	Performance Data
Section 6	Weight and Balance
Section 7	Systems Description
Section 8	Handling and Servicing
Section 9	Log of Supplements
Section 10	Safety Information

The data presented in this AFM is the result of extensive flight tests and is approved by the Federal Aviation Administration. However, as new procedures or performance data are developed, the AFM will be revised.

• NOTE •

It is the responsibility of the owner to ensure that the Airplane Flight Manual is current at all times. Therefore, it is very important that all revisions be properly incorporated into this AFM as soon as they become available.

Revising the Airplane Flight Manual

Two types of revisions may be issued for this Handbook: Temporary and Numbered.

Temporary revisions are printed on yellow paper, normally cover only one topic or procedure, and are issued to provide safety related information in a timely manner. All the information needed to properly file a temporary revision is included on the revision itself. Typically, a temporary revision is superseded and replaced by the next numbered revision.

Numbered revisions are printed on white paper, normally cover several subjects, and are issued as general updates to the AFM. Each numbered revision includes an “Instruction Sheet”, a “List of Effective Pages”, and a “Revision Highlights” page. The “Instruction Sheet” is intended to assist the manual holder in removing superseded pages and inserting new or superseding pages. The “List of Effective Pages” shows the issue or revision status of all pages in the AFM. The “Revision Highlights” page gives a brief description of changes made to each page in the current revision.

Identifying Revised Material

Each page in the AFM has the issue date at the lower inside corner opposite the page number and the revision level under the part number. Issue dates will correspond to the issue dates of the Original Issue, any revisions, or reissues on the List of Effective Pages. The Original Issue and its issue date will be listed on the List of Effective Pages. In the event that the majority of pages in the AFM are revised, Cirrus may determine that it is more effective to reissue the AFM. Reissues will be identified by the word “Reissue” followed by a letter indicating the reissue level; for example, “Reissue A” on the List of Effective Pages along with its issue date. Revisions will be identified by the word “Revision” followed by the revision number on the List of Effective Pages; for example, “Revision 2” (Original Issue, Revision 2) or “Revision B1” (Reissue B, Revision 1).

Revised material on a page can be identified by a change bar located at the outside page margin.

Revisions to the Airplane Flight Manual

AFM revisions, temporary revisions, and supplements can be downloaded from Cirrus at www.cirrusaircraft.com, or from the Authorized Service Center website.

Paper copies of AFM revisions and supplements can be purchased from Cirrus Connection at www.cirrusconnection.com.

Supplements

The Supplements section (Section 9) of this AFM contains FAA Approved Supplements necessary to safely and efficiently operate the airplane when equipped with optional equipment not provided with the standard airplane or not included in the AFM. Supplements are essentially “mini-hand-books” and may contain data corresponding to most sections of the AFM. Data in a supplement either adds to, supersedes, or replaces similar data in the basic AFM.

Section 9 includes a “Log of Supplements” page preceding all Cirrus Supplements produced for this airplane. The “Log of Supplements” page can be utilized as a “Table of Contents” for Section 9. If the airplane is modified at a non-Cirrus facility through an STC or other approval method, it is the owner’s responsibility to ensure that the proper supplement, if applicable, is installed in the AFM and that the supplement is properly recorded on the “Log of Supplements” page.

FAA Approved AFM Supplements must be in the airplane for flight operations when the subject optional equipment is installed or the special operations are to be performed.

Retention of Data

In the event a new title page is issued, the weight and balance data changes, the equipment list changes, or the “Log of Supplements” is replaced, the owner must ensure that all information applicable to the airplane is transferred to the new pages and the aircraft records are current. It is not a requirement that owners retain information, such as supplements, that is not applicable to their airplane.

In the event a new AFM is purchased, the owner must ensure that all information applicable to the airplane is transferred to the new AFM and the aircraft records are current.

Warnings, Cautions, and Notes

Warnings, Cautions, and Notes are used throughout this AFM to focus attention on special conditions or procedures as follows:

• **WARNING** •

Warnings are used to call attention to operating procedures which, if not strictly observed, may result in personal injury or loss of life.

• **CAUTION** •

Cautions are used to call attention to operating procedures which, if not strictly observed, may result in damage to equipment.

• **NOTE** •

Notes are used to highlight specific operating conditions or steps of a procedure.

Airplane Serial Number Effectivity

For aircraft serial numbers with an alphabetical suffix, the letter designation should be ignored when reading effectivity notes in service and operating documents.

For example, "2491H" is the same as "2491" when referencing effectivity to determine applicable operation for this aircraft.

Section 1: General

Table of Contents

Introduction.....	3
The Airplane	7
Engine	7
Propeller	7
Hartzell	7
McCauley	7
MT	7
Fuel	7
Approved Fuel Grades	7
Oil	8
Maximum Certificated Weights.....	8
Specific Loadings	8
Noise Characteristic	8
Terminology.....	9

Intentionally Left Blank

Introduction

This section contains information of general interest to pilots and owners. You will find the information useful in acquainting yourself with the airplane, as well as in loading, fueling, sheltering, and handling the airplane during ground operations. Additionally, this section contains definitions or explanations of symbols, abbreviations, and terminology used throughout this Handbook.

• NOTE •

For specific information regarding the organization of this Handbook, revisions, supplements, and procedures to be used to obtain publications, see the “Foreword” section.

All liquid volumes referenced in this publication are expressed in United States Customary Units, e.g., U.S. Gallons.

Figure 1-1: Airplane Three View


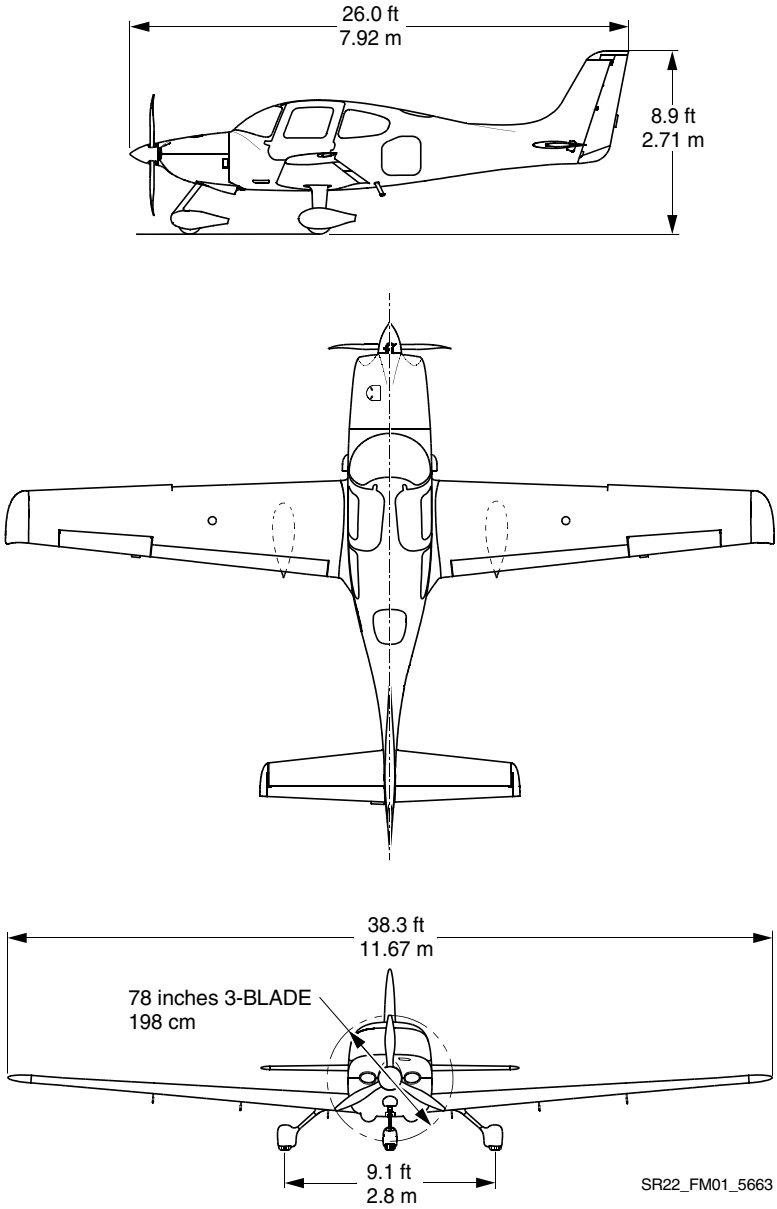



Figure 1-2: Airplane Interior Dimensions

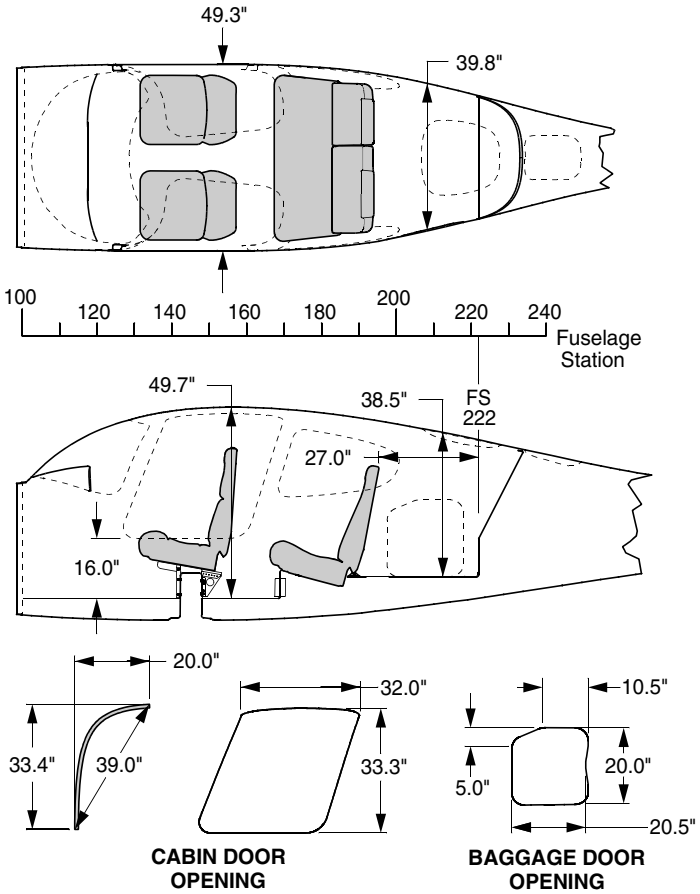

SR22_FM01_5636

Location	Length	Width	Height	Volume
Cabin	122"	49.3"	49.7"	137 cu ft
Baggage Compartment	36"	39.8"	38.5"	32 cu ft

Figure 1-3: Turning Radius

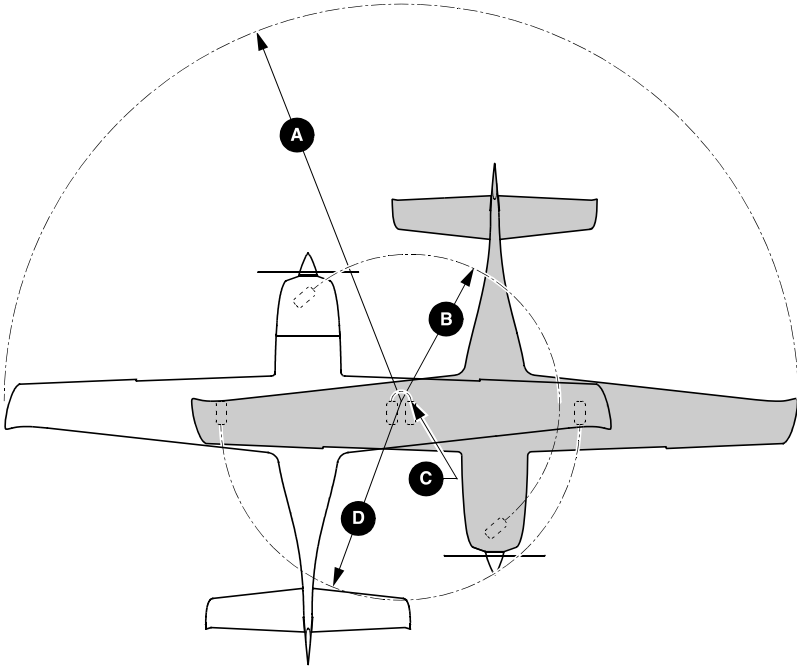

GROUND TURNING CLEARANCE

- A** RADIUS FOR WING TIP 24.3 ft. (7.41 m)
- B** RADIUS FOR NOSE GEAR 7.0 ft. (2.16 m)
- C** RADIUS FOR INSIDE GEAR 0.5 ft. (0.15 m)
- D** RADIUS FOR OUTSIDE GEAR 9.1 ft. (2.77 m)

TURNING RADII ARE CALCULATED USING ONE BRAKE AND PARTIAL POWER. ACTUAL TURNING RADIUS MAY VARY AS MUCH AS THREE FEET.

SR22_FM01_5399

The Airplane

Engine

Number of Engines 1
Number of Cylinders 6
Engine ManufacturerContinental Aerospace Technologies
Engine Model IO-550-N
Fuel MeteringFuel Injected
Engine Cooling Air Cooled
Engine Type..... Horizontally Opposed, Direct Drive
Horsepower Rating..... 310 hp @ 2700 RPM

Propeller

Hartzell

Propeller Type.....Constant Speed, Three Blade
Model Number..... PHC-J3YF-1RF/F7694(B)
Diameter 78.0” (76.0” Minimum)
Model Number..... PHC-J3YF-1RF/F7693DF(B)
Diameter78.0" (76.0" Minimum)
or

McCaughey

Propeller Type.....Constant Speed, Three Blade
Model Number..... D3A34C443/78CYA-0
Diameter 78.0” (76.0” Minimum)
or

MT

Propeller Type.....Constant Speed, Three Blade
Model Number..... MTV-9-D/198-52
Diameter 78.0” (76.0” Minimum)

Fuel

Total Capacity94.5 U.S. Gallons (358.0 L)
Total Usable92.0 U.S. Gallons (348.0 L)

Approved Fuel Grades

100 LL Grade Aviation Fuel (Blue)
100 (Formerly 100/130) Grade Aviation Fuel (Green)

Oil

Oil Capacity (Sump)..... 8 U.S. Quarts (7.6 L)

Refer to Section 2, Powerplant Limitations, for approved oil grades.

Maximum Certificated Weights

Maximum Takeoff Gross Weight..... 3600 lb (1633 Kg)

Maximum Zero Fuel Weight..... 3400 lb (1542 Kg)

Maximum Baggage Compartment Loading..... 130 lb (59 kg)

Specific Loadings

Wing Loading..... 24.8 lb per square foot

Power Loading..... 11.61 lb per hp

Noise Characteristic

The certificated noise levels for the aircraft established in accordance with CFR 36 Appendix G are:

Configuration	Actual	Maximum Allowable
Hartzell 3-blade Propeller, PHC-J3YF-1RF/F7693DF	84.7 dB(A)	88.0 dB(A)
Hartzell 3-blade Propeller, PHC-J3YF-1RF/F7693DF(B)	84.7 dB(A)	88.0 dB(A)
Hartzel 3-blade Propeller PHC-J3YF-1N/N7605(B)	84.7 dB(A)	88.0 dB(A)
Hartzel 3-blade Propeller PHC-J3Y1F-1N/N7605(B)	84.7 dB(A)	88.0 dB(A)
Hartzel 3-blade Propeller PHC-J3Y1F-1N/N7605C(B)	84.7 dB(A)	88.0 dB(A)

No determination has been made by the Federal Aviation Administration that the noise levels of this airplane are or should be acceptable or unacceptable for operation at, into, or out of, any airport. The above noise levels were established at 3600 pounds takeoff weight and 2700 RPM.

Terminology

Table 1: General Airspeed Terminology

General Airspeed Terminology	
Terminology	Definition
KCAS	Knots Calibrated Airspeed is the indicated airspeed corrected for position and instrument error.
KIAS	Knots Indicated Airspeed is the speed shown on the airspeed indicator. The IAS values published in this handbook assume no instrument error.
KTAS	Knots True Airspeed is the airspeed expressed in knots relative to undisturbed air which is KCAS corrected for altitude and temperature.
V_G	Best Glide Speed is the speed at which the greatest flight distance is attained per unit of altitude lost with power off.
V_O	Operating Maneuvering Speed is the maximum speed at which application of full control movement will not overstress the airplane.
$V_{FE_{50\%}}$	Maximum Flap Extended Speed (50%) is the highest speed permissible with wing flaps extended to the 50% position (typical of takeoff and approach)
$V_{FE_{100\%}}$	Maximum Flap Extended Speed (100%) is the highest speed permissible with wing flaps extended to the 100% position (typical of landing).
V_{NO}	Maximum Structural Cruising Speed is the speed that should not be exceeded except in smooth air, and then only with caution.
V_{NE}	Never Exceed Speed is the speed that may not be exceeded at any time.
V_{PD}	Maximum Demonstrated Parachute Deployment Speed is the maximum speed at which parachute deployment has been demonstrated.

General Airspeed Terminology (Continued)	
Terminology	Definition
V_{REF}	Landing reference speed or threshold crossing speed.
V_S	Stalling Speed is the minimum steady flight speed at which the aircraft is controllable.
V_{SO}	Stalling Speed is the minimum steady flight speed at which the aircraft is controllable in the landing configuration (100% flaps) at the most unfavorable weight and balance.
V_X	Best Angle of Climb Speed is the speed at which the airplane will obtain the highest altitude in a given horizontal distance. The best angle-of-climb speed normally increases slightly with altitude.
V_Y	Best Rate of Climb Speed is the speed at which the airplane will obtain the maximum increase in altitude per unit of time. The best rate-of-climb speed decreases slightly with altitude.

Table 2: Meteorological Terminology

Meteorological Terminology	
Terminology	Definition
IMC	Instrument Meteorological Conditions are meteorological conditions expressed in terms of visibility, distance from cloud, and ceiling less than the minima for visual flight defined in 14 CFR 91.155.
ISA	International Standard Atmosphere (standard day) is an atmosphere where (1) the air is a dry perfect gas, (2) the temperature at sea level is 15 °C, (3) the pressure at sea level is 29.92 in.Hg (1013.2 millibars).
MSL	Mean Sea Level is the average height of the surface of the sea for all stages of tide. In this Handbook, altitude given as MSL is the altitude above the mean sea level. It is the altitude read from the altimeter when the altimeter's barometric adjustment has been set to the altimeter setting obtained from ground meteorological sources.

Meteorological Terminology (Continued)	
Terminology	Definition
OAT	Outside Air Temperature is the free air static temperature obtained from in-flight temperature indications or from ground meteorological sources. It is expressed in either °C or °F.
PA	Pressure Altitude is the altitude read from the altimeter when the altimeter's barometric adjustment has been set to 29.92 in.Hg (1013.21 mb) corrected for position and instrument error. In this Handbook, altimeter instrument errors are assumed to be zero.
Standard Temperature	Standard Temperature is the temperature that would be found at a given pressure altitude in the standard atmosphere. It is 59 °F (15 °C) at sea level pressure altitude and decreases approximately 4 °F (2 °C) for each 1000 feet of altitude increase. See ISA definition.

Table 3: Engine Power Terminology

Engine Power Terminology	
Terminology	Definition
HP	Horsepower is the power developed by the engine.
MCP	Maximum Continuous Power is the maximum power that can be used continuously.
MAP	Manifold Pressure is the pressure measured in the engine's induction system expressed as in.Hg.
RPM	Revolutions Per Minute is engine rotational speed.
Static RPM	Static RPM is RPM attained during a full-throttle engine runup when the airplane is on the ground and stationary.

Table 4: Performance and Flight Planning Terminology

Performance and Flight Planning Terminology	
Terminology	Definition
g	One “g” is a quantity of acceleration equal to that of earth’s gravity.
Demonstrated Crosswind Velocity	Demonstrated Crosswind Velocity is the velocity of the crosswind component for which adequate control of the airplane during taxi, takeoff, and landing was demonstrated during certification testing. Demonstrated crosswind is not considered to be limiting.
Service Ceiling	Service Ceiling is the maximum altitude at which the aircraft at maximum weight has the capability of climbing at a rate of 100 feet per minute.
GPH	Gallons Per Hour is the amount of fuel (in gallons) consumed by the aircraft per hour.
NMPG	Nautical Miles Per Gallon is the distance (in nautical miles) which can be expected per gallon of fuel consumed at a specific engine power setting and/or flight configuration.
Unusable Fuel	Unusable Fuel is the quantity of fuel that cannot be safely used in flight.
Usable Fuel	Usable Fuel is the fuel available for flight planning.

Table 5: Weight and Balance Terminology

Weight and Balance Terminology	
Terminology	Definition
Reference Datum	Reference Datum is an imaginary vertical plane from which all horizontal distances are measured for balance purposes.
Fuselage Station	Fuselage Station (FS) is a location along the airplane fuselage measured in inches from the reference datum and expressed as a number. For example: A point 123 inches aft of the reference datum is FS 123.
CG	Center of Gravity is the point at which an airplane would balance if suspended. Its distance from the reference datum is found by dividing the total moment by the total weight of the airplane.
Arm	Arm is the horizontal distance from the reference datum to the center of gravity (CG) of an item. The airplane's arm is obtained by adding the airplane's individual moments and dividing the sum by the total weight.
Moment	Moment is the product of the weight of an item multiplied by its arm.
Basic Empty Weight	Basic Empty Weight is the actual weight of the airplane including all operating equipment that has a fixed location in the airplane. The basic empty weight includes the weight of unusable fuel and full oil.
MAC	Mean Aerodynamic Chord is the chord drawn through the centroid of the wing plan area.
LEMAC	Leading Edge of Mean Aerodynamic Chord is the forward edge of MAC given in inches aft of the reference datum (fuselage station).
Maximum Gross Weight	Maximum Gross Weight is the maximum permissible weight of the airplane and its contents as listed in the aircraft specifications.
Maximum Takeoff Weight	Maximum Takeoff Weight is the maximum weight approved for the start of the takeoff run.

Weight and Balance Terminology (Continued)	
Terminology	Definition
Maximum Zero Fuel Weight	Maximum Zero Fuel Weight is the maximum permissible weight of the airplane and its contents minus the total weight of the fuel onboard.
Useful Load	Useful Load is the basic empty weight subtracted from the maximum takeoff weight. It is the maximum allowable combined weight of pilot, passengers, fuel, and baggage.

Section 2: Limitations

Table of Contents

Introduction.....	3
Certification Status	3
Taxiing, Takeoff, and Landing Limitations	4
Operational Limits	4
Airspeed Limitations	4
Operating Speeds	4
Flap Speeds	4
Airspeed Indicator Markings	5
Powerplant Limitations	6
Engine	6
Fuel	6
Oil	6
Propeller	8
Hartzell	8
McCauley	8
MT	8
Engine Instrument Markings & Annunciations.....	9
Powerplant	9
Fuel	10
Electrical.....	11
Weight Limits.....	12
Center of Gravity Limits.....	13
Maneuver Limits	15
Flight Load Factor Limits	15
Minimum Crew Requirements	15
Kinds of Operation.....	15
Kinds of Operation Equipment List.....	15
Altitude Limits	19
Outside Air Temperature Limit	19
Takeoff Temperature	19
Maximum Occupancy.....	20
Child Restraint System Limits	20
Systems and Equipment Limits	21
Flap Limitations	21
Icing Conditions	21
Kinds of Operation.....	21

Severe Icing.....	23
Operation.....	24
Ice Protection System (IPS) Fluid.....	24
Use of Autopilot in Icing Conditions.....	24
Probe Heat.....	24
Autopilot.....	25
Minimum Autopilot Speed.....	25
Maximum Autopilot Speed.....	25
Minimum-Use-Height.....	25
Engagement Limits.....	25
Navigation and Communication Equipment.....	27
Attitude and Heading Reference System (AHRS).....	27
Cirrus Perspective Touch+ Integrated Avionics System.....	27
Traffic Avoidance System (TAS).....	29
Navigation Map and Weather Map.....	29
Safe Taxi, Taxiway Routing and Chartview.....	30
Terrain Proximity Map.....	30
Synthetic Vision System (SVS).....	30
Terrain Awareness Warning System (Optional).....	30
Max Viz Enhanced Vision System (Optional).....	31
Stormscope Weather Information System (Optional).....	31
Air Conditioning System.....	31
Inflatable Restraint System.....	31
Cirrus Airframe Parachute System (CAPS).....	31
Other Limitations.....	31
Smoking.....	31
Crew Communication.....	31
Placards.....	32
Exterior Placards.....	32
Interior Placards.....	34
Electronic Placards.....	37

Introduction

The limitations included in this Section of the AFM are approved by the Federal Aviation Administration.

This section provides operating limitations, instrument markings, and basic placards required by regulation and necessary for the safe operation of the aircraft and its standard systems and equipment.

• Note •

Compliance with the operating limitations in this section and in Section 9 is required by the Code of Federal Regulations.

For installed equipment described in an FAA Approved AFM Supplement, refer to [Section 9: Log of Supplements](#) of this AFM for amended operating limits.

Certification Status

The aircraft is certificated under the requirements of 14 CFR, Part 23 Airworthiness Standards: Normal Category, Part 36, Noise Standards, and Special Conditions prescribed by the Administrator.

Taxiing, Takeoff, and Landing Limitations

Operational Limits

This airplane may be operated on any smooth runway surface.

Maximum Tailwind for Takeoff and Landing..... 10 knots

Airspeed Limitations

Operating Speeds

Operating Maneuvering Speed (V_O) 3600lbs 140 KIAS

Never Exceed Speed (V_{NE}) 205 KIAS

Max. Structural Cruising Speed (V_{NO}) 176 KIAS

Flap Speeds

Maximum flap extended speed, 50% ($V_{FE_{50\%}}$) 150 KIAS

Maximum flap extended speed, 100% ($V_{FE_{100\%}}$) 110 KIAS

Airspeed Indicator Markings

The airspeed indicator markings are based on Section 5, [Airspeed Calibration](#) - Normal Static Source Table. When using the alternate static source, allow for the airspeed calibration variations between the normal and alternate static sources.

Marking	Value (KIAS)	Remarks
White Arc	64 to 110	Full Flap Operating Range. Lower limit is the most adverse stall speed in the landing configuration. Upper limit is the maximum speed permissible with flaps extended.
Green Arc	74 to 176	Normal Operating Range. Lower limit is the maximum weight stall at most forward C.G. with flaps retracted. Upper limit is the maximum structural cruising speed (V_{NO}).
Yellow Arc	176 to 205	Caution Range. Operations must be conducted with caution and only in smooth air.
Red Arc	205	Never Exceed Speed (V_{NE}). Maximum speed for all operations.

Powerplant Limitations

Engine

Continental Aerospace Technologies	IO-550-N
Power Rating	310 HP @ 2700 RPM
Maximum RPM	2700 RPM

Fuel

Approved Fuel.....	Aviation Grade 100 LL (Blue) or 100 (Green)
Total Fuel Capacity.....	94.5 U.S. gallons (358.0 L)
Total Fuel Each Tank	47.25 U.S. gallons (179.0 L)
Total Usable Fuel (all flight conditions)	92.0 U.S. gallons (348.0 L)
Maximum Allowable Fuel Imbalance.....	10.0 U.S. gallons (37.9 L)

The fuel pump must be set to BOOST for takeoff, climb, and landing.

Oil

Maximum Oil Temperature	240 °F (116 °C)
Minimum Oil Temperature for Takeoff.....	100 °F (37.8 °C)
Minimum Oil Pressure	10 psi
Maximum Oil Pressure	100 psi

Approved Oils:

Engine Break-In: For first 25 hours of operation or until oil consumption stabilizes, use straight mineral oil conforming to MIL-C-6529. If engine oil must be added to the factory installed oil, add only MIL-C-6529 straight mineral oil.

• NOTE •

Mineral oil conforming to MIL-C-6529 Type II contains a corrosion preventive additive and must not be used for more than 25 hours or six months, whichever occurs first. If oil consumption has not stabilized in this time, drain the mineral oil, replace the oil filter and replace the discarded mineral oil with SAE J1966 aviation oil.

After Engine Break-In: Use only oils conforming to SAE J 1899 (Ashless Dispersant Lubrication Oil).

Recommended Oil Grades^a		
Ambient Air Temperature (SL)	Single Viscosity	Multi-Viscosity
All Temperatures	-	15W-50 20W-50 20W-60
Above 40 °F (4 °C)	SAE 50	20W-50 20W-60
Below 40 °F (4 °C)	SAE 30	10W-30 15W-50 20W-50

- a. For additional qualified oil grades and viscosities, refer to the Continental Motors M-0 Maintenance Manual.

• NOTE •

The correct grade of oil to be used is based on environmental conditions. If the aircraft is going to be flown into an area that is much warmer or colder than the aircraft is usually operated in, use a different viscosity of oil.

During operation, if the oil inlet temperatures are near the maximum permitted temperatures, then a higher viscosity oil can help to decrease the temperatures.

Propeller

Hartzell

Propeller Type Constant Speed, Three Blade
Model NumberPHC-J3YF-1RF/F7694(B)
Diameter.....78.0” (76.0” Minimum)
Model Number PHC-J3YF-1RF/F7693DF(B)
Diameter.....78.0" (76.0" Minimum)

or

McCauley

Propeller Type Constant Speed, Three Blade
Model Number D3A34C443/78CYA-0
Diameter.....78.0” (76.0” Minimum)

or

MT

Propeller Type Constant Speed, Three Blade
Model Number MTV-9-D/198-52
Diameter.....78.0” (76.0” Minimum)

Engine Instrument Markings & Annunciations

The following describes the engine instrument markings. Associated Warning and Caution Annunciations are shown in capitalized text.

Powerplant

Instrument (Range & Units)	Red Arc/Bar	Yellow Arc/Bar	Green Arc/Bar	Yellow Arc/Bar	Red Arc/Bar
	Lower Warning Range	Min. Caution Range	Normal Range	Max. Caution Range	Upper Warning Range
Cylinder Head Temperature (100 °F to 500 °F)	--	--	240 to 420	420 to 460 CHT	> 460 CHT
Engine Speed (0 to 3000 RPM)	--	--	500 to 2700	--	> 2700 ^a RPM
Exhaust Gas Temperature (1000 °F to 1600 °F)	--	--	1000 to 1600	--	--
Manifold Pressure (10 to 35 Inch Hg)	--	--	15 to 29.5	--	--
Oil Pressure (0 to 100 PSI)	0 to 10 ^b OIL PRESS	10 to 30 ^b OIL PRESS	30 to 60	60 to 100	> 100 ^b OIL PRESS
Oil Temperature (75 °F to 250 °F)	--	--	100 to 240	--	> 240 OIL TEMP
Percent Power (0 to 100%)	--	--	0 to 100	--	--

- a. Engine Speed Warning when RPM between 2710 and 2730 for more than 10 seconds OR when RPM greater than 2730 for more than 5 seconds.
- b. Oil Pressure Caution when oil pressure is between 10 and 29 psi and RPM is greater than 1000. Oil Pressure Warning when oil pressure is below 10 psi, OR oil pressure is above 100 psi.

Fuel

Instrument (Range & Units)	Red Arc/Bar	Yellow Arc/Bar	Green Arc/Bar	Yellow Arc/Bar	Red Arc/Bar
	Minimum	Minimum Caution Range	Normal Range	Maximum Caution Range	Maximum
Fuel Flow (0 to 30 U.S. Gal/Hr)	--	--	0 to 25 ^a	--	--
Fuel Quantity (0 to 46 U.S. Gallon)	0	0 to 14	14 to 46	--	--

- a. Top of green arc dynamically changes based on altitude. A gap in the fuel flow band is displayed when power settings are less than or equal to 75% to aid in leaning operations. Refer to Section 4, Cruise Leaning for details.

Electrical

Instrument (Range & Units)	Red Arc/Bar	Yellow Arc/Bar	Green Arc/Bar	Yellow Arc/Bar	Red Arc/Bar
	Minimum	Minimum Caution Range	Normal Range	Maximum Caution Range	Maximum
Essential Bus Volts (0 to 36 Volts)	0 to 24.4	--	24.5 to 32	--	> 32
Main Bus 1 Voltage (0 to 36 Volts)	--	0 to 24.4	24.5 to 32	--	> 32
Main Bus 2 Voltage (0 to 36 Volts)	--	0 to 24.4	24.5 to 32	--	> 32
Alternator 1 Current (0 to 100 Amps)	--	0 to 1 ^a	2 to 100	--	--
Alternator 2 Current (0 – 100 Amps)	--	0 – 1 ^a ALT 2	2 – 100	--	--
Battery 1 Current (-80 to 80 Amps)	--	-80 to -5 ^b	-4 – 80	--	--

- a. 20 second delay of Caution CAS message.
b. 30 second delay of Caution CAS message.

Weight Limits

Maximum Takeoff Weight 3600 lb (1633 kg)


Maximum Zero Fuel Weight..... 3400 lb (1542 kg)

Maximum Weight in Baggage Compartment 130 lb (59 kg)

Center of Gravity Limits

CG Envelope	Weight (lb)	FS (inches)
Forward Light	2100	137.8
Forward Intermediate	2700	139.1
Forward Gross	3600	143.2
Aft Gross	3600	148.1
Aft Light	2100	148.1

Figure 2-1: Center of Gravity Envelope

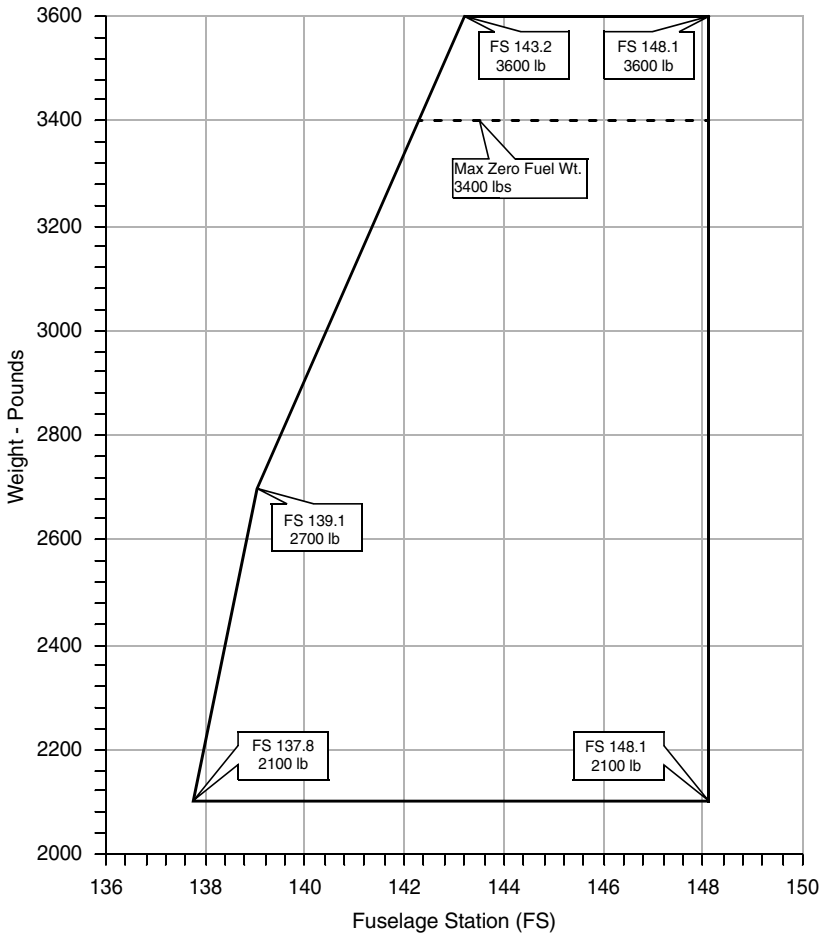

SR22_FM02_5676

Maneuver Limits

Acrobatic maneuvers are strictly prohibited.

Spins are prohibited.

This airplane is certified in the Normal category.

• NOTE •

Because the aircraft has not been certified for spin recovery, the Cirrus Airframe Parachute System (CAPS) must be deployed if the airplane departs controlled flight. Refer to Section 3, [Inadvertent Spin Entry](#).

Flight Load Factor Limits

Flaps UP (0%), any weight+3.8g, -1.9g

Flaps 50%, any weight+1.9g, 0g

Flaps 100% (Down), any weight+1.9g, 0g

Minimum Crew Requirements

The minimum flight crew is one pilot.

Kinds of Operation

The aircraft is equipped and approved for the following type operations:

- VFR day and night
- IFR day and night
- Serials w/ IPS: Flight into known icing. See in this section for more information

Kinds of Operation Equipment List

The following listing summarizes the equipment required under 14 Code of Federal Regulations (CFR) Part 23 for airworthiness under the “listed kind of operation”. Those minimum items of equipment necessary under the operating rules are defined in 14 CFR Part 91.

• NOTE •

All references to types of flight operations on the operating limitations placards are based upon equipment installed at the time of Airworthiness Certificate issuance.

System, Instrument and/or Equipment	Kinds of Operation				Remarks, Notes, and/or Exceptions
	VFR Day	VFR Night	IFR Day	IFR Night	
PLACARDS AND MARKINGS					
Airplane Flight Manual	1	1	1	1	
Garmin Cockpit Reference Guide	1	1	1	1	
COMMUNICATIONS					
VHF COM	A/R	A/R	1	1	
ELECTRICAL POWER					
Battery 1	1	1	1	1	
Battery 2	-	-	1	1	
Alternator 1	1	1	1	1	
Alternator 2	-	-	1	1	
Electrical Indications	1	1	1	1	
ALT 1 Annunciator	1	1	1	1	
ALT 2 Annunciator	-	-	1	1	
Circuit Breakers	A/R	A/R	A/R	A/R	As required.
EQUIPMENT & FURNISHINGS					
Emergency Locator Transmitter	1	1	1	1	
Egress Hammer	1	1	1	1	
Restraint System	A/R	A/R	A/R	A/R	One seat belt for each occupant.
Inflatable Restraints					
FIRE PROTECTION					
Fire Extinguisher	1	1	1	1	

System, Instrument and/or Equipment	Kinds of Operation				Remarks, Notes, and/or Exceptions
	VFR Day	VFR Night	IFR Day	IFR Night	
FLIGHT CONTROLS					
Flap Position Indicator	1	1	1	1	
Flap System	1	1	1	1	
Pitch Trim Indicator	1	1	1	1	
Pitch Trim System	1	1	1	1	
Roll Trim Indicator	1	1	1	1	
Roll Trim System	1	1	1	1	
Stall Warning System	1	1	1	1	
Stick Shaker	-	-	-	-	
FUEL					
Auxiliary Fuel Pump	1	1	1	1	
Fuel Quantity Indicators	2	2	2	2	
Fuel Selector Valve	1	1	1	1	
Automatic Fuel Selection	-	-	-	-	
ICE & RAIN PROTECTION					
Alternate Engine Air Induction System	1	1	1	1	
Alternate Static Air Source	1	1	1	1	
Pitot Heat	-	-	1	1	
LANDING GEAR					
Wheel Pants	-	-	-	-	May be removed.
LIGHTS					
Anticollision Lights	2	2	2	2	

System, Instrument and/or Equipment	Kinds of Operation				Remarks, Notes, and/or Exceptions
	VFR Day	VFR Night	IFR Day	IFR Night	
Instrument Lights	-	1	-	1	
Navigation Lights	-	2	-	2	
Landing Light	-	1	-	1	For hire operations.
Flash Light	-	1	-	1	
Ice Inspection Light	-	-	-	1	
NAVIGATION & PITOT STATIC					
Primary ADAHRS	1	1	2	2	
Standby ADARS	-	-	1	1	
Magnetic Compass	A/R	A/R	A/R	A/R	
Pitot System	1	1	1	1	
Static System, Normal	1	1	1	1	
VHF NAV	-	-	A/R	A/R	
GPS	-	-	A/R	A/R	
PF/D/MFD	1	1	2	2	
Touchscreen Controller	1	1	2	2	
Marker Beacon Receiver	-	-	A/R	A/R	
Remote Audio Panel	A/R	A/R	1	1	
Transponder	1	1	1	1	
ENGINE INDICATING					
Cylinder Head Temperature	-	-	-	-	
Exhaust Gas Temperature	-	-	-	-	
Fuel Flow	1	1	1	1	

System, Instrument and/or Equipment	Kinds of Operation				Remarks, Notes, and/or Exceptions
	VFR Day	VFR Night	IFR Day	IFR Night	
Manifold Pressure	1	1	1	1	
Oil Pressure	1	1	1	1	
Oil Quantity (Dipstick)	1	1	1	1	
Oil Temperature	1	1	1	1	
Engine Speed	1	1	1	1	
SPECIAL EQUIPMENT					
Cirrus Airframe Parachute (CAPS)	1	1	1	1	

Altitude Limits

Maximum Airport Elevation 10,000 ft MSL

Maximum Operating Altitude..... 17,500 ft MSL

Outside Air Temperature Limit

For operation of the airplane below an outside air temperature of -10°F (-23°C), use of cowl inlet covers approved by Cirrus and listed in the Winterization Kit AFM Supplement P/N 13772-118 is required.


Maximum Occupancy

Occupancy of this airplane is limited to “4+1” persons, the pilot and four passengers. If carrying three rear seat passengers, occupants must be wearing a seat belt and shoulder harness with their hips and back firmly against the seat back as shown in the following illustration. If three rear seat passengers cannot meet these requirements, occupancy is limited to four persons.

Child Restraint System Limits

1. Rear seat configuration for LATCH / ISOFIX compliant child seats is limited to two seats in the outboard positions.
2. A single non-LATCH / ISOFIX compliant seat may be installed in the center seat position.
3. Installation of three child seats in the rear seat is prohibited.

Figure 2-2: Rear Passenger Seat Arrangement

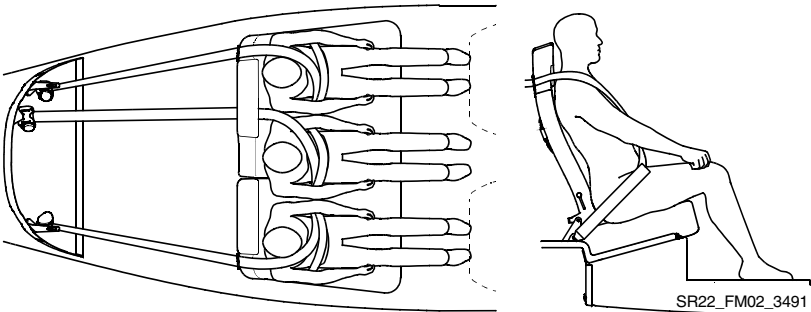

Systems and Equipment Limits

The appropriate revision of the Cirrus Perspective Touch+ Cockpit Reference Guide (P/N 190-02954-XX, where X can be any digit from 0 to 9) must be immediately available to the pilot during flight. The system software version stated in the reference guide must be appropriate for the system software version displayed on the equipment.

Flap Limitations

Approved Takeoff Settings..... 50%
Approved Landing Settings..... UP, 50%, or 100%

Icing Conditions

Serials w/o IPS: Flight into known icing conditions is prohibited.

Serials w/ IPS:

In icing conditions the airplane must be operated as described in the operating procedures section of this manual. Where specific operational speeds and performance information have been established for such conditions, this information must be used.

• WARNING •

At the first sign of IPS malfunction, the aircraft must immediately exit icing conditions.

Kinds of Operation

The IPS allows flight into known icing as defined by Title 14 of the Code of Federal Regulations (CFR) Part 25, Appendix C - Envelopes for Continuous Maximum and Intermittent Maximum Icing.

This airplane is approved for flight into known icing conditions only if all the following conditions are met.

- The airplane is equipped with all of the IFR Day/Night equipment in the previous [Kinds of Operation Equipment List](#) in this section
- The airplane is equipped with all of the additional Cirrus and FAA approved equipment in the Kinds of Operation Equipment List within [Icing Conditions](#)

System, Instrument and/or Equipment	Kinds of Operation		Remarks, Notes, and/or Exceptions
	FIKI IFR Day	FIKI IFR Night	
FLIGHT CONTROLS			
AOA Vane Heat	1	1	
ICE & RAIN PROTECTION			
Windshield Spray Nozzles	1	1	
Wing LH and RH Inboard Panel	1	1	
Wing LH and RH Outboard Panel	1	1	
Horizontal Stabilizer LH and RH Panel	1	1	
Elevator Tip LH and RH Panel	1	1	
Vertical Stabilizer Panel	1	1	
Propeller Slinger Ring	1	1	
IPS Controller and Annunciation	1	1	
LANDING GEAR			
Wheel Pants	1	1	

Severe Icing

The airplane is prohibited from operating in severe icing conditions. Severe icing conditions are defined as any freezing drizzle, any freezing rain, Supercooled Large Droplets (SLD), or any icing conditions that overwhelm the ice protection systems. If the airplane encounters such conditions, the pilot must (i) immediately exit icing conditions by changing altitude or course, and (ii) remain clear of icing conditions for the remainder of the flight.

Severe icing conditions may be identified by the following:

- Unusually extensive ice accumulation on the airframe or windshield in areas not normally observed to collect ice
- Ice on or behind the wing or horizontal tail panels that cannot be removed with IPS HIGH flow
- Unusually extensive ice accreted on the airframe in areas not normally observed to collect ice
- Accumulation of ice on the upper or lower surface of the wing aft of the protected area
- Accumulation of ice on the propeller farther back than normally observed
- Inability of the airplane to maintain the published ice-contaminated performance specifications listed in Section 5: Performance Data

The following weather conditions may be conducive to severe icing:

- Visible rain at temperatures colder than 32 °F (0 °C) static air temperature.
- Droplets that splash or splatter at temperatures colder than 32 °F (0 °C) static air temperature.

Operation

Takeoff is prohibited with any frost (polished or not), ice, snow, or slush adhering to the wings, stabilizers, control surfaces, or engine inlet.

Minimum Airspeed for Flight into Known Icing Conditions.....95 KIAS*

*Includes all phases of flight, including approach, except as required for takeoff and landing.

Maximum Airspeed IPS operation.....177 KIAS AND 204 KTAS

Minimum Operating Temperature for IPS..... -30 °F (-34 °C)

Maximum Flap Deflection with Ice Accretions50%

When holding in icing conditions the flaps must be UP (0%).

Limit ground operations of Lift Transducer Heat (PROBE HEAT) to 45 seconds.

Ice Protection System (IPS) Fluid

Minimum Dispatch Fluid Quantity

IPS Fluid Minimum Dispatch Quantity5.0 U.S. gal (19 L)

Deicing Fluid Limits

Usable Tank Capacity..... 8 Gallons (30 L)

Tank Capacity..... 8.5 gallons (32 L)

Use of Autopilot in Icing Conditions

In light-to-moderate icing conditions, autopilot use with periodic checks (disconnect and hand fly) is permitted. However, autopilot use is prohibited in the following conditions:

- Severe Icing
- Any unusually small or large control forces, or control deflections, to move flight controls when the autopilot is disconnected periodically for checking purposes

Flap Setting in Flight into Known Icing	Minimum Autopilot Speed
100%	Prohibited
50%	85 KIAS
UP	90 KIAS

Probe Heat

Limit probe heat operation on ground to five minutes or less when OAT is above 41 °F (5 °C). Extended use in warmer temperatures may damage the composite structure adjacent to probe(s).

Autopilot

The Garmin GFC 700 Automatic Flight Control System (AFCS) has the following limitations:

Minimum Autopilot Speed

Flap Configuration	Minimum Autopilot Speed
100%	75 KIAS
50%	80 KIAS
UP	85 KIAS

Serials w/ IPS during flight into known icing conditions see the preceding [Icing Conditions](#) section for minimum autopilot speeds w/ IPS.

Maximum Autopilot Speed

Flap Configuration	Maximum Autopilot Speed
100%	110 KIAS
50%	150 KIAS
UP	185 KIAS

Minimum-Use-Height

Takeoff and Climb..... 400 feet AGL
 Enroute and Descent..... 1,000 feet AGL
 Approach (GP or GS Mode) ...Higher of 200 feet AGL or Approach MDA, DA, DH
 Approach (FLC, VS, PIT or ALT Mode)..... Higher of 400 feet AGL or Approach MDA)

Engagement Limits

The Autopilot may not be engaged beyond the Engagement Limits. If the Autopilot is engaged beyond the command limits (up to engagement limits), it will be rolled or pitched to within the command limits and an altitude loss of 1000 feet or more can be expected while attitude is established in the selected mode.

Axis	Autopilot Engagement Limit
Pitch	±50°
Roll	±75°

The Autopilot and Flight Director will not command pitch or roll beyond the Command Limits.

Axis	Autopilot Command Limit
FD Pitch Command Limits	+20°, -15°
FD Roll Command Limits	30°

Use of VNAV is not supported during an approach with a teardrop course reversal. VNAV will be disabled at the beginning of the teardrop.

Navigation and Communication Equipment

Attitude and Heading Reference System (AHRs)

Navigation using the Cirrus Perspective Touch+ Integrated Avionics System is prohibited in the following geographic areas.

Magnetic Cut-out Regions	Latitude	Longitude
North	North of 72° N	All longitudes
	North of 65° N	Between 75° W and 120° W. (Northern Canada)
	North of 70° N	Between 70° W and 128° W. (Northern Canada)
	North of 70° N	Between 85° E and 114° E. (Northern Russia)
South	South of 70° S	All longitudes
	South of 55° S	Between 120° E and 165° E. (Region south of Australia and New Zealand)

Cirrus Perspective Touch+ Integrated Avionics System

1. IFR enroute and terminal navigation is prohibited unless the pilot verifies the currency of the database or verifies each selected waypoint for accuracy by reference to current approved data.
2. Instrument approach navigation predicated upon the GPS Receiver must be accomplished in accordance with approved instrument approach procedures that are retrieved from the GPS equipment database. The GPS equipment database must incorporate the current update cycle.
 - a) Receiver Autonomous Integrity Monitoring (RAIM) must be available at the Final Approach Fix for instrument approach procedures that do not use the integrity information from Satellite Based Augmentation Systems (SBAS). For flight planning purposes, in areas where SBAS coverage is not available, the pilot must check RAIM availability.
 - b) Accomplishment of ILS, LOC, LOC-BC, LDA, SDF, MLS or any other type of approach not approved for GPS overlay with the GPS receiver is not authorized.

- c) Use of the VOR/ILS receiver to fly approaches not approved for GPS requires VOR/ILS navigation data to be present on the display.
- d) Vertical Navigation information for approach procedures that do not meet the ICAO Annex 10 requirements for precision approaches may be utilized for advisory information only. Use of Vertical Navigation information for Instrument Approach Procedures does not guarantee step-down fix altitude protection, or arrival at approach minimums in normal position to land.
- e) IFR non-precision approach approval is limited to published approaches within the U.S. National Airspace System. Approaches to airports in other airspace are not approved unless authorized by the appropriate governing authority.
- f) RNAV approaches must be conducted utilizing the GPS sensor.
- g) The Cirrus Perspective Touch+ Integrated Avionics System is compliant with AC 90-100A. As such, the Cirrus Perspective Touch+ system is eligible to fly RNAV 'Q' or 'T' routes, RNAV SID/STAR/ODPs and eligible to use RNAV substitution or RNAV alternate means of navigation (US Only). Refer to AC 90-100A for additional operator requirements and limitations.
- h) The Cirrus Perspective Touch+ Integrated Avionics System includes navigation sensors that meet the standards set forth in TSOC145a/ETSO-C145 (Sensors) for Class 3 systems.
- i) The Cirrus Perspective Touch+ Integrated Avionics System has been installed in accordance with AC 20-138A and is approved for navigation using GPS and SBAS (within the coverage of a Satellite Based Augmentation System complying with ICAO annex 10) for IFR enroute, terminal and approach operations.
- j) The Cirrus Perspective Touch+ Integrated Avionics System complies with the standards set forth in AC 90-96A and JAA TGL-10 (rev 1) for BRNAV and PRNAV operations.
- k) The navigation databases employed by the Cirrus Perspective Touch+ Integrated Avionics System meet the requirements set forth in AC 20-153 for database integrity, quality and database management practices. The data in the navigation databases are referenced to the WGS-84 reference system.
- l) The Cirrus Perspective Touch+ Integrated Avionics System complies with the standards set forth in AMC 20-27 and NPA

2009-04 (AMC 20-28) for RNAV operations including LNAV/VNAV and LPV approach operations.

- m) Barometric vertical navigation (Baro-VNAV) operations may be conducted if SBAS is unavailable or disabled. The Cirrus Perspective Touch+ Integrated Avionics System will provide automatic, temperature-compensated glidepath vertical guidance and has been shown to meet the accuracy requirements of VFR/IFR enroute, terminal, and approach Baro-VNAV operations within the conterminous US and Alaska in accordance with the criteria in AC 20-138D.
- 3. The installed ADS-B OUT system, including GTX 335 Mode S Transponder and GTX 345 Mode S UAT in Transponder (optional), has been shown to meet the equipment requirements of 14 CFR 91.227.
- 4. FIS-B Receiver Equipment, including GTX 345 Mode S UAT in Transponder (optional):
 - a) Flight Information Services - Broadcast (FIS-B) information is intended to enhance pilot awareness of weather and airspace conditions. It does not replace positive two way communication when making safety critical weather or routing decisions. Use FIS-B weather and National Airspace System (NAS) status information as follows:
 - (1) To aid pilot awareness of hazardous meteorological conditions and awareness of the regulatory status of the airspace.
 - (2) FIS-B information is meant to enhance flight planning only. It lacks sufficient resolution and updating necessary for tactical maneuvering.

Traffic Advisory System (TAS)

Use of the Traffic Advisory System (TAS) to maneuver the airplane to avoid traffic is prohibited. The TAS is intended for advisory use only. TAS is intended only to help the pilot to visually locate traffic. It is the responsibility of the pilot to see and maneuver to avoid traffic.

Navigation Map and Weather Map

The Navigation Map is intended only to enhance situational awareness. Use of the Navigation Map page for pilotage navigation is prohibited.

LTNG information on the Navigation Map or Weather Map is approved only as an aid to hazardous weather avoidance. Use of the Weather Map for hazardous weather penetration is prohibited.

Safe Taxi, Taxiway Routing and Chartview

Do not use Safetaxi, Taxiway Routing, or Chartview functions as the basis for ground maneuvering. Safetaxi, Taxiway Routing, and Chartview functions have not been qualified to be used as an Airport Moving Map Display (AMMD). Safetaxi, Taxiway Routing, and Chartview are to be used by the flight crew to orient themselves on the airport surface to improve pilot situational awareness during ground operations.

Terrain Proximity Map

The Terrain Proximity Map is intended only to enhance situational awareness. Use of the Terrain Proximity information for primary terrain avoidance is prohibited.

Synthetic Vision System (SVS)

Use of the Synthetic Vision System (SVS) for flight guidance, navigation, traffic avoidance, or terrain avoidance is prohibited. Maneuvering the airplane in any phase of flight such as taxi, takeoff, approach, landing, or roll out should not be predicated on SVS imagery. The synthetic vision system is not intended to be used independently of traditional attitude instrumentation. Consequently, SVS is disabled when traditional attitude instrumentation is not available. Otherwise, the traditional attitude instrumentation will always be visible in the foreground with SVS features in the background.

Terrain Awareness Warning System (Optional)

Use of the Terrain Awareness and Warning System for navigation and terrain avoidance is prohibited. The TAWS is intended to serve as a situational awareness tool only and may not provide the accuracy fidelity on which to solely base terrain or obstacle avoidance maneuvering decisions. To avoid getting unwanted alerts, TAWS must be inhibited when landing at an airport that is not included in the airport database.

• NOTE •

Only vertical maneuvers are recommended responses to warnings and cautions unless operating in VMC or the pilot determines, using all available information and instruments, that a turn, in addition to the vertical escape maneuver, is the safest course of action. During certain operations, warning thresholds may be exceeded due to specific terrain or operating procedures. During day VFR flight, these warnings may be considered as cautionary.

Max Viz Enhanced Vision System (Optional)

1. Use of the Enhanced Vision System (EVS) for flight guidance, navigation, traffic avoidance, or terrain avoidance is prohibited. Maneuvering the airplane in any phase of flight such as taxi, takeoff, approach, landing, or roll out must not be predicated on EVS imagery.
2. The appropriate revision of the Max Viz Enhanced Vision System Information Manual, (p/n 309100024) must be available to the pilot during flight.

Stormscope Weather Information System (Optional)

1. Use of the Weather Information System for hazardous weather penetration is prohibited.
2. When option installed, the appropriate revision of the L-3 Avionics Systems WX500 Stormscope Series II Weather Mapping Sensor User's Guide, (p/n 009-11501-001) must be available to the pilot during flight.

Air Conditioning System

The use of Recirculation Mode during flight is prohibited.

Inflatable Restraint System

Use of a child safety seat with inflatable restraint system is prohibited.

Cirrus Airframe Parachute System (CAPS)

V_{PD} Maximum Demonstrated Deployment Speed.....140 KIAS

• NOTE •

Refer to Section 10, [Cirrus Airframe Parachute System \(CAPS\)](#) for additional CAPS guidance.

Other Limitations

Smoking

Smoking is prohibited in this airplane.

Crew Communication


One headset which satisfies the requirements of TSO C139() or a microphone which satisfies the requirements of TSO C58 must be available for pilot use when operations require two-way communications.

Placards


Exterior Placards

Figure 2-3: Placards (1 of 5)


Engine compartment, inside oil filler access:

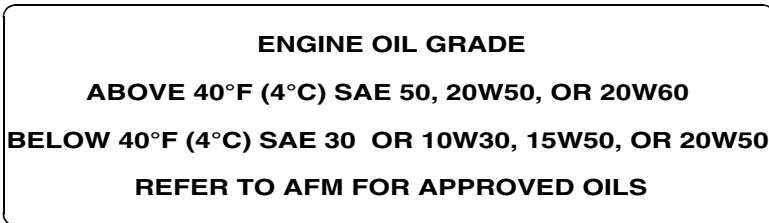

Wing, adjacent to fuel filler caps:

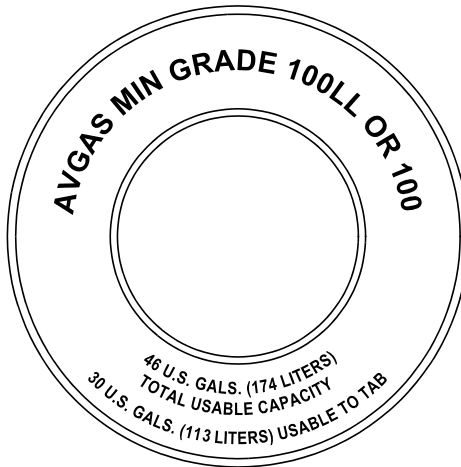


Upper fuselage, either side of CAPS rocket cover:

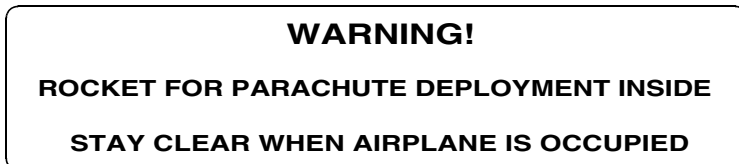


SR22_FM02_5321A

Figure 2-3: Placards (2 of 5)


Left fuselage, on external power supply door:

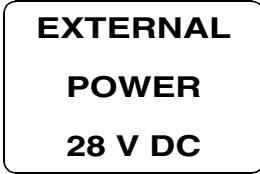


Doors, adjacent to latch:

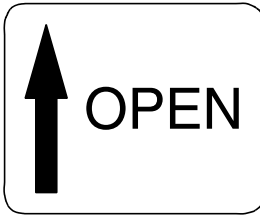

Wing, adjacent to fluid filler cap:

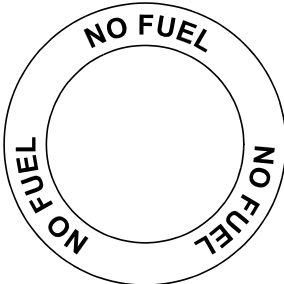

Serials w/ Ice Protection.

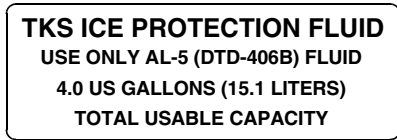


SR22_FM02_5329A

Interior Placards

Figure 2-3: Placards (3 of 5)


Engine control panel:

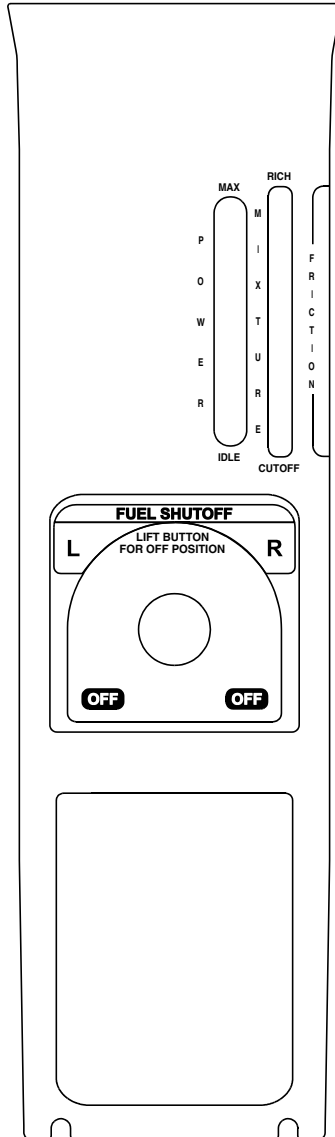


SR22_FM02_5677

Figure 2-4: Placards (4 of 5)

CAPS Overhead Placard:

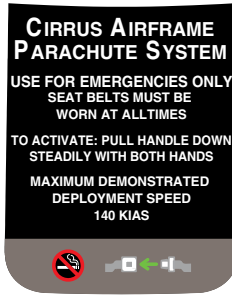

Flag, CAPS Pin:

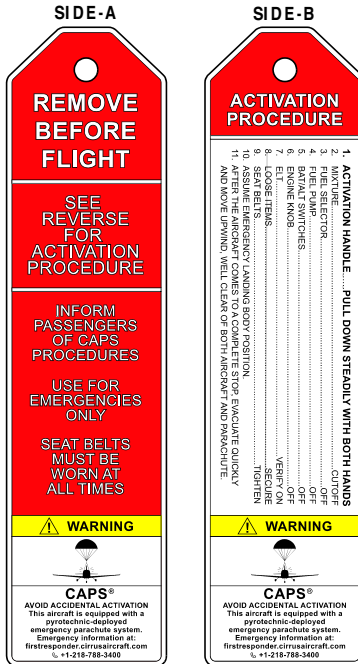

SR22_FM02_5703

Figure 2-4: Placards (5 of 5)

Baggage Compartment, aft edge:

**ELT LOCATED BEHIND BULKHEAD
REMOVE CARPET AND ACCESS PANEL**

Cabin Door Window, lower edge, centered, applied upside down:

RESCUE: FRACTURE AND REMOVE WINDOW

Cabin Window, above door latch:

**EMERGENCY EXIT
REMOVE EGRESS HAMMER FROM WITHIN
CENTER ARMREST LID. STRIKE CORNER OF
WINDOW. KICK OR PUSH OUT AFTER FRACTURING**

Baggage Compartment Door, inside:

**DISTRIBUTED FLOOR LIMIT 130 LBS
BAGGAGE STRAP CAPACITY IS 35 LBS EACH MAXIMUM
SEE AIRPLANE FLIGHT MANUAL FOR BAGGAGE TIE-DOWN
AND WEIGHT AND BALANCE INFORMATION**

SR22_FM02_5704

Electronic Placards

This aircraft is certified for the following flight operations: DAY- NIGHT
- VFR- IFR, Flight in known icing (with required equipment).

Operate per Airplane Flight Manual

Maximum flap position 50% if airframe is ice contaminated.

Maneuvering Speed: V_o 140 KIAS

Normal Category Airplane

No Acrobatic Maneuvers including spins, approved.

Crew seats must be locked in position and control handles fully down
before flight.

Aircraft is equipped with: Cirrus Airframe Parachute System (CAPS) and
Garmin Electronic Stability and Protection (ESP)

Intentionally Left Blank

Section 3: Emergency Procedures

Table of Contents

Introduction.....	3
Crew Alert System (CAS) Messaging	3
Warnings	3
CAPS Guidance	3
Preflight Planning	4
Preflight Inspections/Maintenance	4
Methodology.....	4
Maintain Aircraft Control.....	4
Analyze the Situation.....	4
Take Appropriate Action.....	4
Land as Soon as Conditions Permit	5
Circuit Breakers.....	5
Memory Items.....	5
Procedure Division Symbols	6
Landing Guidance	6
Land as Soon as Practicable	6
Land as Soon as Possible.....	6
Airspeeds for Emergency Operations	7
Maneuvering Speed.....	7
Best Glide (Flaps: UP).....	7
Emergency Landing	7
Glide.....	8
Best Glide Speed	8
Serials w/ Hartzell Propeller w/ Composite Blades	9
Best Glide Speed	9
Emergency Procedures.....	10
Automatic Flight Control Malfunction (Autopilot, ESP, Trim, Flaps).....	10
Cabin Fire In Flight	10
CAPS Deployment	12
Ditching	14
Emergency Descent.....	14
Emergency Engine Shutdown On Ground	15
Emergency Ground Egress	15
Emergency Landing w/o Power.....	16
Engine Failure In Flight	17
Engine Failure On Takeoff - Low Altitude.....	18

Engine Fire During Start	19
Engine Fire In Flight	19
Engine Partial Power Loss	20
Ice Protection System Failure/ Excessive Ice Accumulation.....	22
Inadvertent Spin Entry	23
Landing Without Elevator Control.....	24
Power Lever Linkage Failure	25
Propeller Governor Failure	26
Rejected Takeoff	26
Smoke and Fume Elimination.....	27
Wing Fire In Flight	28
Emergency CAS Procedures.....	29
AOA OVERHEAT Warning.....	29
APPROACH SPEED Warning.....	29
AUTO DESCENT Warning.....	30
CHT Warning.....	31
CO LEVEL HIGH Warning.....	32
ESSENTIAL BUS VOLTS Warning	33
FLAPS ICE Warning.....	34
FUEL FLOW Warning.....	35
FUEL IMBALANCE Warning	36
FUEL LOW LEFT Warning	36
FUEL LOW RIGHT Warning.....	37
FUEL LOW TOTAL Warning	37
IPS CONTROL FAIL Warning	37
IPS FLUID LOW Warning.....	38
IPS QUANTITY FAIL Warning.....	38
MAIN BUS 1 VOLTS Warning	38
MAIN BUS 2 VOLTS Warning	39
OIL PRESSURE Warning.....	40
OIL TEMP Warning	40
OXYGEN FAULT Warning	41
OXYGEN QTY LOW Warning	42
OXYGEN REQUIRED Warning.....	42
RPM Warning	43
SPIN SPIN SPIN Warning	44
STALL Warning	45
STALL WARNING FAIL Warning	45
STARTER ENGAGED Warning	46

Introduction

This section provides procedures for handling emergencies and critical flight situations that may occur while operating the aircraft. Although emergencies caused by airplane, systems, or engine malfunctions are rare, the guidelines described in this section should be considered and applied as necessary should an emergency arise.

Emergency procedures associated with optional equipment are not described in this section.

Although this section provides procedures for handling most emergencies and critical flight situations that could arise in the aircraft, it is not a substitute for proper flight training, thorough knowledge of the airplane, and recognized piloting techniques and standards. A thorough study of the information in this handbook while on the ground will help you prepare for time-critical situations in the air.

• NOTE •

Refer to [Section 9: Log of Supplements](#) for optional equipment Emergency Procedures.

Crew Alert System (CAS) Messaging

Warnings

Displayed in red against a black background, Warning CAS messages arise during emergency situations that require immediate flight crew awareness and immediate flight crew response.

- A flashing Warning CAS message with an accompanying aural alert requires immediate action.
- A Warning CAS message with no accompanying aural alert requires attention, dependent on workload. It may also require performing maintenance or taking corrective action prior to next flight. Warnings with no aural alert typically occur while on ground.

CAPS Guidance

All Cirrus aircraft are equipped with a pilot or passenger activated ballistic airframe parachute system. The system is capable of lowering the aircraft and occupants safely to the ground for life threatening emergencies. CAPS provides pilots and passengers an alternative means of handling various life threatening emergency situations. In many cases CAPS may offer a safer option for occupants as compared to continued flight or traditional countermeasures. Pilots flying Cirrus aircraft must be properly trained and familiar with CAPS guidance, limitations, and operating procedures. Refer to Section 10, [Cirrus Airframe Parachute System \(CAPS\)](#), for CAPS deployment and guidance information.

Preflight Planning

Inroute emergencies caused by weather can be minimized or eliminated by careful flight planning and good judgment when unexpected weather is encountered.

Preflight Inspections/Maintenance

In-flight mechanical problems in the aircraft will be extremely rare if proper preflight inspections and maintenance are practiced. Always perform a thorough walk-around inspection before any flight to ensure that no damage occurred during the previous flight or while the airplane was on the ground. Pay special attention to any oil leaks or fuel stains that could indicate engine problems.

• NOTE •

Refer to [Section 4: Normal Procedures, "Preflight Inspection"](#) for more information.

Methodology

Aircraft emergencies are dynamic events. Because of this, it is impossible to enumerate every action a pilot should properly undertake in response to a particular situation. However, four basic actions can be applied to any emergency. They are:

Maintain Aircraft Control

Many minor aircraft emergencies turn into major ones when the pilot fails to maintain aircraft control. Do not panic and do not fixate on a particular problem. Over-attention to a warning light during an instrument approach can lead to a pilot-induced unusual attitude, and possibly worse. To avoid this, even in an emergency: always aviate, navigate, and communicate, in that order. Never let anything interfere with your control of the airplane. Never stop flying.

Analyze the Situation

Once you are able to maintain control of the aircraft, assess the situation. Read all warning and caution messages. Evaluate the engine parameters. Consider all aircraft operational information at your disposal.

Take Appropriate Action

In many situations, the procedures listed in this section will either correct or mitigate the aircraft problem or allow safe recovery of the aircraft. Follow them and use good pilot judgment.

The Cirrus Airframe Parachute System (CAPS) should be activated in the event of a life-threatening emergency where CAPS deployment is determined to be safer than continued flight and landing.

• NOTE •

Refer to Section 10, [Cirrus Airframe Parachute System \(CAPS\)](#) for CAPS deployment information and landing considerations.

Land as Soon as Conditions Permit

Once you have evaluated and responded to the emergency, assess your next move. Perform any non-critical “clean-up” items in the checklist and land as soon as practicable. Even if the airplane appears to be in sound condition, it may not be.

• NOTE •

Refer to [Landing Guidance](#) in this section for factors that determine landing criticality.

Circuit Breakers

Some procedures involve manipulating circuit breakers (CBs). The following criteria should be followed during “Circuit Breaker” steps:

- Intentional pulling of circuit breakers during flight, other than as required in specific procedures, may cause abnormal or unexpected system behavior and is not recommended.
- When instructed to “SET”, the appropriate circuit breaker should be checked for normal condition. If the circuit breaker is not “SET”, it may be reset only once. If the circuit breaker opens again, do not reset.
- When instructed to “PULL”, the appropriate circuit breaker should only be pulled and not reset.
- When instructed to “CYCLE”, the appropriate circuit breaker should be pulled, delayed for several seconds, and reset only once. Allow sufficient cooling time for circuit breakers that are reset through a “CYCLE” procedure.

Memory Items

Checklist steps emphasized by a rectangular enclosure, such as the example below, should be memorized for accomplishment without reference to the procedure, due to the nature of their urgency.

1. Mixture CUTOFF

Procedure Division Symbols

For procedures requiring pilot decision, conditional steps are indented with a symbol to ate sub-sections within the procedure. On condition, the pilot makes a decision to identify the applicable sub-section.

Following the initial decision, a further sub-division of the procedure may occur. In that event, one or more additional conditions guides the pilot through the remaining decisions. Once the applicable condition(s) are identified, the pilot follows the remaining steps until the indication "Procedure Complete" is reached.

The procedure symbol levels are:

- ◆ First Level
- Second Level
- Third Level

Landing Guidance

Land as Soon as Practicable

The pilot may consider the convenience of future maintenance when selecting an airport to land as soon as practicable. Pilots must not overfly a suitable and practicable airport for other ground conveniences.

Land as Soon as Possible

The pilot must identify and land at the first available airport that allows for a safe approach and landing considering the approach procedures available, ceilings, visibility, winds and runway lengths

Airspeeds for Emergency Operations

Maneuvering Speed

3600 lb (1633 kg) 140 KIAS

Best Glide (Flaps: UP)

All Weights 92 KIAS

Emergency Landing

Flaps UP 90 KIAS

Flaps 50% 85 KIAS

Flaps 100% 80 KIAS


Glide

Conditions		Example	
Power	OFF	Altitude	10,000 ft. AGL
Propeller	Windmilling	Airspeed	Best Glide
Flaps	0% (UP)	Glide Distance Normal Conditions	14.2 NM
Wind	Zero	Glide Distance w/ Ice Accumulation	10.5 NM

Best Glide Speed

3600 lb (1633 kg)..... 92 KIAS

Figure 3-1: Maximum Glide Ratio
Normal Conditions ~ 8.8 : 1
w/ Ice Accumulation ~ 6.4 : 1

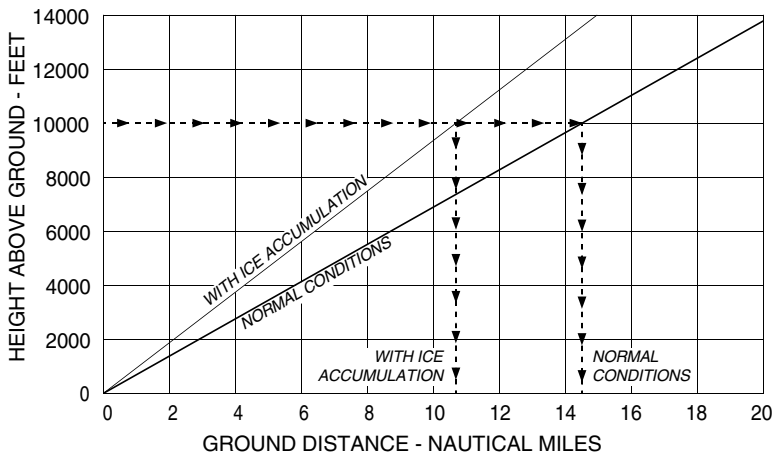

SR22_FM03_5782


Serials w/ Hartzell Propeller w/ Composite Blades

Conditions		Example	
Power	OFF	Altitude	10,000 ft. AGL
Propeller	Windmilling	Airspeed	Best Glide
Flaps	0% (UP)	Glide Distance	13.4 NM
Wind	Zero	Glide Distance w/ Ice Accumulation	10.5 NM

Best Glide Speed

3600 lb (1633 kg)92 KIAS

Figure 3-2: Normal Conditions ~ 8.1 : 1
w/ Ice Accumulation ~ 6.4 : 1

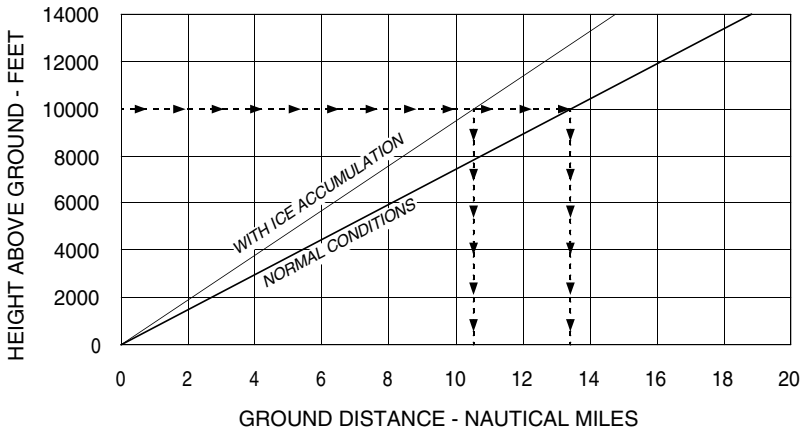

SR22_FM03_5783

Emergency Procedures

Automatic Flight Control Malfunction (Autopilot, ESP, Trim, Flaps)

- | | |
|-------------------------|----------------|
| 1. AP DISC Button | PRESS AND HOLD |
|-------------------------|----------------|
2. AP SERVO (A1), PITCH TRIM (B1), ROLL TRIM (B2), FLAPS (D3) CBs..... PULL, AS REQUIRED
 3. AP DISC Button
 4. Land as soon as practicable.

Procedure Complete

Cabin Fire In Flight

- | | |
|------------------------------------------|----------------------|
| 1. BAT 1, ALT 1, and ALT 2 Switches..... | OFF |
| 2. Fire Extinguisher | ACTIVATE AS REQUIRED |
3. All other switches
 4. Land as soon as possible.

◆ If setting BAT/ALT off eliminated source of fire or fumes and airplane is in night or IFR conditions:

- a. Airflow Selector.....
- b. BAT 1, ALT 1, and ALT 2 Switches.....
- c. Required Systems.....
- d. Temperature Selector
- e. Vent Selector.....
- f. Airflow Selector.....
- g. Panel Vents
- h. Land as soon as possible.

Procedure Complete

• NOTE •

With both BAT and both ALT switches OFF, engine will continue to run. However, no electrical power will be available.

(Continued on next page)

(Continued)

• NOTE •

If the airplane is in IMC conditions, turn ALT 1, ALT 2, and BAT 1 switches OFF. Power from battery 2 will keep the PFD and GTC's operational for approximately 30 minutes. If airplane is in day VFR conditions and turning off the BAT/ALT switches eliminated the fire situation, leave the BAT/ALT switches OFF. Do not attempt to isolate the source of the fire by checking each individual electrical component.

If the cause of the fire is readily apparent and accessible, use the fire extinguisher to extinguish flames and land as soon as possible. Opening the vents or doors may feed the fire, but to avoid incapacitating the crew from smoke inhalation, it may be necessary to rid cabin of smoke or fire extinguishant.

If required to re-activate systems, pause several seconds between activating each system to isolate malfunctioning system. Continue flight to earliest possible landing with malfunctioning system off. Activate only the minimum amount of equipment necessary to complete a safe landing.

CAPS Deployment

• **WARNING** •

The maximum demonstrated deployment speed is 140 KIAS. Jerking or rapidly pulling the activation handle will greatly increase the pull forces required to activate the rocket. Use a firm and steady pulling motion – a “chin-up” type pull ensures successful activation.

1. Activation Handle**PULL DOWN STEADILY WITH BOTH HANDS**

• **NOTE** •

Wait for aircraft to stabilize beneath canopy before proceeding.

2. MixtureCUTOFF
3. Fuel SelectorOFF
4. Fuel PumpOFF
5. BAT /ALT SwitchesOFF
Turn the BAT/ALT switches off after completing any necessary radio communications.
6. Engine KnobOFF
7. ELT VERIFY ON
8. Loose ItemsSECURE
9. Seat Belts..... TIGHTEN
10. Assume emergency landing body position.
11. After the aircraft comes to a complete stop, evacuate quickly and move upwind well clear of both aircraft and parachute.

Procedure Complete

• **NOTE** •

The Cirrus Airframe Parachute System (CAPS) should be activated immediately in the event of a spin. It should also be used in other life threatening emergencies where CAPS deployment is determined to be safer than continued flight and landing.

Expected impact in a fully stabilized deployment is equivalent to a drop from approximately 13 feet.

(Continued on next page)

(Continued)

• **CAUTION** •

CAPS deployment will likely result in damage or loss to the airframe.

• **NOTE** •

Several possible scenarios in which the activation of the CAPS would be appropriate are discussed in

[Section 10: Safety Information](#) of this Manual. These include:

- Mid-air collision
- Structural failure
- Loss of control
- Landing in inhospitable terrain
- Pilot incapacitation

All pilots should carefully review the information on CAPS activation and deployment in Section 10 before operating the aircraft.

CAPS Deployment at High Altitudes

For any indicated airspeed, as altitudes increase the true airspeed of the deployment increases. Higher true airspeeds increase the parachute inflation loads. Therefore, it is important the operator takes all reasonable efforts to slow to the minimum possible airspeed prior to deploying the CAPS.

Ditching

1. Radio TRANSMIT (121.5 MHz) MAYDAY WITH LOCATION AND INTENTIONS
2. Transponder..... SQUAWK 7700
3. CAPS ACTIVATE
4. AirplaneEVACUATE
5. Flotation Devices (if available) INFLATE WHEN CLEAR OF AIRPLANE

Procedure Complete

• **WARNING** •

Consider unlatching a door prior to assuming the emergency landing body position in order to provide a ready escape path.

It may be necessary to allow some cabin flooding to equalize pressure on the doors. If the doors cannot be opened, break out the windows with the egress hammer and crawl through the opening.

• **NOTE** •

If available, life preservers should be donned and life raft should be prepared for immediate evacuation upon touchdown.

Emergency Descent

- | | |
|-------------------------|----------------------|
| 1. AP DISC Button | PRESS AND RELEASE |
| 2. Power Lever | IDLE |
| 3. Mixture | RICH (AS REQ'D) |
| 4. Airspeed..... | INCREASE TO V_{NE} |

Procedure Complete

• **CAUTION** •

If significant turbulence is expected, do not descend at indicated airspeeds greater than V_{NO} .

Emergency Engine Shutdown On Ground

- | | |
|--------------------------|--------|
| 1. Mixture..... | CUTOFF |
| 2. Fuel Pump..... | OFF |
| 3. Fuel Selector..... | OFF |
| 4. Engine Knob..... | OFF |
| 5. BAT/ALT Switches..... | OFF |

Procedure Complete

Emergency Ground Egress

- | | |
|----------------------------------|--------|
| 1. Mixture..... | CUTOFF |
| 2. Fuel Pump..... | OFF |
| 3. BAT 1 and BAT 2 Switches..... | OFF |
| 4. Parking Brake..... | SET |
| 5. Egress aircraft. | |

Procedure Complete

• WARNING •

While exiting the airplane, make sure evacuation path is clear of other aircraft, spinning propellers, and other hazards.

If the engine is left running, set the Parking Brake prior to evacuating the airplane.

If the doors cannot be opened, break out the windows with egress hammer, located in the console between the front seats, and crawl through the opening.

Emergency Landing w/o Power

1. Pitch for best glide.
2. Turn towards nearest practical landing site.
3. Radio TRANSMIT (ATC OR 121.5 MHz) MAYDAY WITH LOCATION AND INTENTIONS
4. Transponder..... SQUAWK 7700
5. Mixture CUTOFF
6. Fuel Pump OFF
7. Fuel Selector OFF
8. Engine Knob OFF

◆ If landing site is improved:

- a. Flaps AS REQUIRED
- b. Seat Belt(s) SECURED
- c. Touchdown..... NORMAL TECHNIQUE

• WARNING •

If a safe landing is not assured, consider CAPS Deployment. Refer to Section 10, [Cirrus Airframe Parachute System \(CAPS\)](#) for CAPS deployment scenarios and landing considerations.

After landing:

- a. BAT 1 and BAT 2 Switches OFF
- b. Evacuate airplane.

Procedure Complete

• WARNING •

If all attempts to restart the engine fail and a forced landing is imminent, select a suitable field and prepare for the landing. If flight conditions or terrain does not permit a safe landing, CAPS deployment may be required. Refer to Section 10, [Cirrus Airframe Parachute System \(CAPS\)](#) for CAPS deployment scenarios and landing considerations. A suitable field should be chosen as early as possible so that maximum time will be available to plan and execute the forced landing. For forced landings on unprepared surfaces, use full flaps if possible. Be aware that use of full (100%) flaps will reduce glide distance. Full flaps should not be selected until landing is assured. Land on the main gear and hold the nose wheel off the ground as long as possible.

Engine Failure In Flight

1. Fuel Pump BOOST
2. Fuel Selector SWITCH TANKS
3. Engine KnobCHECK L, R, THEN BOTH (AS REQ'D)
4. Alternate Induction Air ON
5. Power Lever HALF OPEN
6. MixtureIDLE CUTOFF THEN SLOWLY ADVANCE UNTIL ENGINE STARTS

7. Starter (Propeller not windmilling) ENGAGE
8. Mixture TOP OF GREEN ARC

◆ If engine start is successful:

- a. CHTs and Oil Temperature WARM ENGINE AT PARTIAL POWER UNTIL IN GREEN ARC
- b. Land as soon as practicable.

Procedure Complete

◆ If engine does not start:

- a. Perform [Emergency Landing w/o Power](#) Checklist.

Procedure Complete

• **WARNING** •

If engine failure is accompanied by fuel fumes in the cockpit, or if internal engine damage is suspected, move Mixture Control to CUTOFF, Fuel Selector to OFF, and do not attempt a restart.

If a turn back to the runway is elected, be very careful not to stall the airplane.

• **NOTE** •

If the engine fails at altitude, pitch as necessary to establish best glide speed. While gliding toward a suitable landing area, attempt to identify the cause of the failure and correct it. If altitude or terrain does not permit a safe landing, CAPS deployment may be required. Refer to Section 10, [Cirrus Airframe Parachute System \(CAPS\)](#) for CAPS deployment scenarios and landing considerations.

Engine Failure On Takeoff - Low Altitude

- | | |
|-------------------------------------|-------------|
| 1. Best Glide or Landing Speed..... | ESTABLISH |
| 2. Fuel Selector | OFF |
| 3. Flaps | AS REQUIRED |
| 4. Land straight ahead. | |

◆ If time permits:

- a. Power Lever IDLE
- b. Mixture CUTOFF
- c. Fuel Pump OFF
- d. Seat Belts..... SECURED
- e. BAT/ALT Switches OFF

Procedure Complete

• **WARNING** •

If engine failure is accompanied by fuel fumes in the cockpit, or if internal engine damage is suspected, move Mixture Control to CUTOFF, Fuel Selector to OFF, and do not attempt a restart.

If a turn back to the runway is elected, be very careful not to stall the airplane.

• **NOTE** •

If the engine fails immediately after becoming airborne, abort on the runway if possible. In most cases, when the engine fails below 600 feet AGL, the landing should be made straight ahead, turning only to avoid obstructions. In such a case, lower the nose to maintain airspeed and establish a glide attitude. If the engine fails between 600 feet and 2000 feet AGL, CAPS activation most likely is the safest option. After establishing a glide for landing or activating CAPS, perform as many of the checklist items as time permits.

Delay turning off BAT 2 until immediately before impact. BAT 2 will provide power to the PFD and essential bus for continued display of flight instrumentation.

Engine Fire During Start

- | | |
|-----------------------|---------|
| 1. Mixture..... | CUTOFF |
| 2. Fuel Pump..... | OFF |
| 3. Fuel Selector..... | OFF |
| 4. Power Lever..... | FORWARD |
| 5. Starter..... | ENGAGE |
- ◆ If flames persist:
- Evacuate aircraft.

Procedure Complete

• NOTE •

A fire during engine start may be caused by fuel igniting in the fuel induction system. If this occurs, attempt to draw the fire back into the engine by continuing to crank the engine.

Engine Fire In Flight

- | | |
|--------------------------|--------|
| 1. Mixture..... | CUTOFF |
| 2. Fuel Pump..... | OFF |
| 3. Fuel Selector..... | OFF |
| 4. Airflow Selector..... | OFF |
| 5. Power Lever..... | IDLE |
| 6. Engine Knob..... | OFF |

- Perform [Emergency Landing w/o Power](#) Checklist.

Procedure Complete

• WARNING •

If an engine fire occurs during flight, do not attempt to restart the engine.

• NOTE •

In the event of sustained engine fire in flight, airspeed and altitude indication may become unreliable.

Engine Partial Power Loss

1. Air Conditioner (if installed).....OFF
2. Fuel PumpBOOST
3. Fuel Selector SWITCH TANKS, LEAVE COVER OPEN
4. Mixture CHECK APPROPRIATE FOR FLIGHT CONDITIONS
5. Power Lever.....SWEEP
6. Alternate Induction Air..... ON
7. Engine KnobCHECK L, R, THEN BOTH AS REQ'D
8. Land as soon as practicable.

Procedure Complete

• **WARNING** •

If there is a strong smell of fuel in the cockpit, divert to the nearest suitable landing field. Fly a forced landing pattern and shut down the engine fuel supply once a safe landing is assured.

• **NOTE** •

Indications of a partial power loss include fluctuating RPM, reduced or fluctuating manifold pressure, low oil pressure, high oil temperature, and a rough-sounding or rough-running engine. Mild engine roughness in flight may be caused by one or more spark plugs becoming fouled. A sudden engine roughness or misfiring is usually evidence of a magneto malfunction.

A gradual loss of manifold pressure and eventual engine roughness may result from the formation of intake ice. Opening the alternate engine air will provide air for engine operation if the normal source is blocked or the air filter is iced over.

(Continued on next page)

(Continued)**• NOTE •**

Low oil pressure may be indicative of an imminent engine failure. See [OIL PRESSURE Warning Checklist](#) in this Section for special procedures with low oil pressure.

A damaged (out-of-balance) propeller may cause extremely rough operation. If an out-of-balance propeller is suspected, immediately shut down engine and perform [Emergency Landing, Ditching, or Emergency Landing w/o Power Checklist](#) as appropriate.

If the power loss is due to a fuel leak in the injector system, fuel sprayed over the engine may be cooled by the slipstream airflow which may prevent a fire at altitude. However, as the Power Lever is reduced during descent and approach to landing the cooling air may not be sufficient to prevent an engine fire.

Selecting BOOST may clear the problem if vapor in the injection lines is the problem or if the engine-driven fuel pump has partially failed. The electric fuel pump will not provide sufficient fuel pressure to supply the engine if the engine-driven fuel pump completely fails.

Selecting the opposite fuel tank may resolve the problem if fuel starvation or contamination in one tank was the problem. Leave the fuel selector cover open and operate the tank selector manually, if needed.

Cycling the Engine Knob momentarily from BOTH to L and then to R may help identify the problem. An obvious power loss in single ignition operation indicates magneto or spark plug trouble. Lean the mixture to the recommended cruise setting. If engine does not smooth out in several minutes, try a richer mixture setting. Return Engine Knob to the BOTH position unless extreme roughness dictates the use of a single magneto.

If a partial engine failure permits level flight, land at a suitable airfield as soon as conditions permit. If conditions do not permit safe level flight, use partial power as necessary to set up a forced landing pattern over a suitable landing field. Always be prepared for a complete engine failure and consider CAPS deployment if a suitable landing site is not available. Refer to Section 10, [Cirrus Airframe Parachute System \(CAPS\)](#) for CAPS deployment scenarios and landing considerations.

Ice Protection System Failure/ Excessive Ice Accumulation

1. ICE PROTECT 1 (A4) and 2 (B4) Circuit Breakers SET
2. IPS Tank Select SWITCH TO FULLER TANK
3. W/S Push-ButtonPRESS
 - a. Repeat operation of windshield pump to verify metering pumps are primed properly as evidenced by deicing fluid exiting windshield nozzles.
4. ICE PROTECT Mode Switch VERIFY HIGH
5. BKUP Switch..... ON

◆ If determined windshield pump is not priming:

- a. Exit icing conditions immediately.
- b. Airspeed 95 KIAS OR GREATER
 - (1) Maintain a minimum airspeed of 95 KIAS or higher to stay above pre-stall buffet. If unable to maintain this airspeed, allow altitude to decrease in order to maintain 95 KIAS.
- c. Minimum Approach Speed w/ Residual Ice (Flaps 50%)88 KIAS

• **WARNING** •

In severe icing conditions, it may not be possible to maintain altitude or proper glide path on approach; in this case, it is imperative that a safe airspeed be maintained, the stall warning system may not function and there may be little or no pre-stall buffet with heavy ice loads on the wing.

- d. Flaps.....MINIMUM REQUIRED

• **CAUTION** •

When landing is assured, select the minimum flap setting required, not to exceed 50%, and maintain extra airspeed consistent with available field length. Do not retract the flaps once they have been extended unless required for go-around.

Procedure Complete

Inadvertent Spin Entry

1. CAPS..... ACTIVATE

Procedure Complete

• WARNING •

In all cases, if the aircraft enters an unusual attitude following or in connection with a stall, a spin condition should be assumed and, immediate deployment of the CAPS is required. Under no circumstances should spin recovery other than CAPS deployment be attempted.

• NOTE •

The aircraft is not approved for spins, and has not been certified for traditional spin recovery characteristics. The only approved and demonstrated method of spin recovery is activation of the Cirrus Airframe Parachute System (see [CAPS Deployment Checklist](#), this section). Because of this, if the aircraft enters a spin, CAPS must be deployed immediately.

While the stall characteristics of the aircraft make inadvertent entry into a spin extremely unlikely, it is possible. Spin entry can be avoided by using good airmanship: coordinated use of controls in turns, proper airspeed control following the recommendations of this Handbook, and never abusing the flight controls with accelerated inputs when close to the stall (see Section 4, [Stalls](#) discussion).

If, at the stall, the controls are misapplied and abused aggressive inputs are made to the elevator, rudder and/or ailerons, an abrupt wing drop may be felt and a spin may be entered.

Landing Without Elevator Control

1. Flaps 50%
2. Trim 80 KIAS
3. Power AS REQUIRED FOR GLIDE ANGLE

Procedure Complete

• CAUTION •

The pitch trim spring cartridge is attached directly to the elevator and provides a backup should you lose the primary elevator control system. Set elevator trim for a 80 KIAS approach to landing. Thereafter, do not change the trim setting until in the landing flare. During the flare, the nose-down moment resulting from a power reduction may cause the airplane to hit on the nose-wheel. At touchdown, bring the power lever to idle.

Power Lever Linkage Failure

1. Power Lever Movement VERIFY
2. Power SET IF ABLE
3. Flaps SET IF NEEDED
4. Mixture AS REQUIRED (FULL RICH TO CUTOFF)
5. Land as soon as possible.

Procedure Complete

• NOTE •

If the Power Lever linkage fails in flight, the engine will not respond to power lever control movements. Use power available and flaps as required to safely land the airplane.

If the power lever is stuck at or near the full power position, proceed to a suitable airfield. Fly a forced landing pattern. With landing assured, shut down engine by moving mixture control full aft to CUTOFF. If power is needed again, return mixture control to full RICH and regain safe pattern parameters or go-around. If airspeed cannot be controlled, shut engine down and perform the [Emergency Landing, Ditching](#), or [Emergency Landing w/o Power](#) Checklist as appropriate. After landing, bring the airplane to a stop and complete the [Emergency Engine Shutdown On Ground](#) Checklist.

If the power lever is stuck at or near the idle position and straight and level flight cannot be maintained, establish glide to a suitable landing surface. Fly a forced landing pattern.

Propeller Governor Failure

1. Power Lever..... REDUCE TO MINIMUM NECESSARY FOR SUSTAINED FLIGHT
2. Airspeed..... REDUCE TO 85-90 KIAS
3. Land as soon as practicable.

Procedure Complete

• NOTE •

An in-flight governor failure will likely result in a large exceedance (3000 RPM or more), as propeller blade angle will go to fine pitch.

Failure may be evidence of engine oil pressure or volume loss, typically accompanied by OIL PRESSURE warning.

Propeller becomes a fixed pitch propeller; reducing speed to 85-90 KIAS and using only power necessary for sustained flight at that speed will minimize the overspeed.

Rejected Takeoff

1. Brakes..... MAXIMUM PILOT EFFORT W/O SKIDDING
2. Power Lever..... IDLE
After airplane comes to a complete stop:
3. Brakes..... COOL DOWN

Procedure Complete

• CAUTION •

For maximum brake effectiveness, retract flaps, hold side stick full back, and bring the airplane to a stop by smooth, even application of the brakes.

Do not set the parking brake following a Rejected Takeoff.

A cool down period and brake overheat inspection are required after high-energy braking events.

• NOTE •

Use as much of the remaining runway as needed to safely bring the airplane to a stop or to slow the airplane sufficiently to turn off runway.

Smoke and Fume Elimination

1. Air Conditioner..... RECIRC DISABLED
2. Temperature Selector COLD
3. Vent Selector.....FEET/PANEL/DEFROST
4. Airflow Selector.....MAXIMUM
5. Fuel Selector..... MANUAL MODE

◆ If source of smoke and fume is firewall forward:

- a. Airflow Selector OFF
6. Panel Vents OPEN
7. Supplemental Oxygen (if installed)
 - a. Oxygen Masks or Cannulas..... DON
 - b. OXY Switch ON
 - c. Oxygen Flow Rate.....MAXIMUM
8. Land as soon as possible.

Procedure Complete

• **WARNING** •

Use Oxygen System only if flames and heat are not present.

• **NOTE** •

In addition to the procedures described above, pilot and passengers should don masks and use the oxygen system at the maximum flow rate until smoke and fumes have cleared.

If smoke and/or fumes are detected in the cabin, check the engine parameters for any sign of malfunction. If a fuel leak has occurred, actuation of electrical components may cause a fire. If there is a strong smell of fuel in the cockpit, divert to the nearest suitable landing field. Perform [Emergency Landing w/o Power](#) Checklist and shut down the fuel supply to the engine once a safe landing is assured.

Wing Fire In Flight

1. Probe Heat.....OFF
2. NAV LIGHTS (D5) Circuit Breaker..... PULL
3. Landing Lights (LAND Switch)OFF
4. Strobe Lights (STRB Switch)OFF
5. AP DISC ButtonPRESS AND HOLD
6. If possible, side slip to keep flames away from fuel tank and cabin.

7. Land as soon as possible.

Procedure Complete

• CAUTION •

Putting the airplane into a dive may blow out the fire. Do not exceed V_{NE} during the dive.

Emergency CAS Procedures

AOA OVERHEAT Warning

AOA OVERHEAT

Stall warning/AoA heater has failed.

1. Probe Heat OFF
2. Icing Conditions AVOID/EXIT

Procedure Complete

• NOTE •

Operation of Probe Heat on hot days may annunciate the AOA OVERHEAT Warning when flying at slow speeds. When air temperatures are greater than 41 °F (5 °C), operation of Probe Heat is at discretion of the pilot. If overheat warning is annunciated, Probe Heat should remain OFF until air temperature decreases.

APPROACH SPEED Warning

APPROACH SPEED

Approach speed is too high.

1. Approach..... GO-AROUND

Procedure Complete

AUTO DESCENT Warning

AUTO DESCENT

Automatic descent to 14,000FT in 60 seconds.
Aircraft descending to 14,000FT.
Aircraft descending to 12,500FT.
Aircraft descended due to pilot incapacitation.

1. Situation.....ASSESS

• WARNING •

Pilot should carefully assess aircraft state, altitude, location, and physiological fitness to maintain continued safe flight.

◆ If hypoxia is suspected and oxygen is installed:

- a. Oxygen Masks or Cannulas.....DON
- b. Oxygen System (OXY Switch) ON
- c. Oxygen Flow Rate MAXIMUM

◆ If pilot is fit and autopilot has not begun descent:

- a. Perform one or more of the following actions to reset hypoxia alert, as appropriate:
 - Press softkeys on GDUs, GTCs, or GMC 707
 - Press GTC Knob(s)
 - Acknowledge prompt(s) on GTC touchscreen(s)

◆ If pilot is fit, autopilot is engaged, and a descent is initiated:

- a. AP DISC.....PRESS
- b. Selected Altitude RESET TO DESIRED
- c. Autopilot ENGAGE

Procedure Complete

• NOTE •

No pilot response to the HYPOXIA ALERT annunciation detected after one minute. Warning remains until pilot responds. Automatic descent begins after one minute of unanswered Warning. Once it begins, automatic descent will commence to 14,000 feet for 4 minutes, then to 12,500 feet thereafter. Once descent begins, only autopilot disconnect will interrupt this process.

CHT Warning

CHT

Cylinder head temperature high.

◆ If on ground:

- a. Power Lever REDUCE TO IDLE
- b. Mixture FULL RICH
- c. Annunciations and Engine Temperatures MONITOR

○ If Warning annunciation is still illuminated, and temperatures not decreasing:

- (1) Shutdown engine.
- (2) Do not dispatch.

Procedure Complete

◆ If in flight:

- a. Power Lever REDUCE
- b. Mixture..... ADJUST FUEL FLOW TO TOP OF GREEN ARC
- c. Airspeed INCREASE
- d. Annunciations and Engine Temperatures MONITOR

○ If Warning annunciation is still illuminated:

- (1) Power Lever MINIMUM REQUIRED
- (2) Engine Instruments MONITOR

If Warning is extinguished and Caution is illuminated:

- (a) Land as soon as practicable.

If Warning annunciation remains illuminated:

- (a) Land as soon as possible.

Procedure Complete

CO LEVEL HIGH Warning

CO LEVEL HIGH

Carbon monoxide level is too high.

1. Air Conditioner RECIRC DISABLED
2. Temperature Selector COLD
3. Vent Selector FEET/PANEL/DEFROST
4. Airflow Selector MAXIMUM
5. Panel Vents OPEN

◆ If message does not extinguish:

- a. Supplemental Oxygen (if available)
 - (1) Oxygen Masks or Cannulas DON
 - (2) Oxygen System (OXY Switch) ON
 - (3) Oxygen Flow Rate MAXIMUM
- b. Land as soon as possible.

Procedure Complete

• **WARNING** •

Annunciation indicates carbon monoxide level is greater than 50 PPM. Ensure that air condition is not in recirculate mode and that air temperature is set to full COLD to supply maximum amount of fresh air to cabin.

ESSENTIAL BUS VOLTS Warning

ESSENTIAL BUS VOLTS

Check essential power bus voltage.

1. Essential Bus Voltage (ESS Bus V) CHECK

◆ If Essential Bus Voltage is greater than 32 Volts:

a. Main Bus 1 and Main Bus 2 Voltages CHECK

○ If Main Bus 1 voltage is high:

(1) ALT 1 (D11) Circuit Breaker SET

(2) ALT 1 Switch CYCLE

○ If Main Bus 2 voltage is high:

(1) ALT 2 (B5) Circuit Breaker SET

(2) ALT 2 Switch CYCLE

◆ If unable to restore at least one alternator:

a. Non-Essential Loads REDUCE

○ If flight conditions permit, consider shedding:

(1) Air Conditioning OFF

(2) Cabin Fan OFF

(3) Landing Lights (LAND Switch) OFF

(4) Probe Heat OFF

(5) Strobe Lights (STRB Switch) OFF

(6) COM 2/AUDIO PANL (C12) Circuit Breaker PULL

(7) YAW SERVO (C1) Circuit Breaker PULL

2. Land as soon as practicable.

Procedure Complete

(Continued on next page)

(Continued)

• CAUTION •

Dependent on battery state, flaps and landing light may be unavailable on landing.

• NOTE •

Essential Bus voltage is high or low. High voltage indicates alternator voltage regulator failure; will typically be associated with high M1 and/or M2 voltages and **MAIN BUS 1 VOLTS Warning** and/or **MAIN BUS 2 VOLTS Warning** messages. Low voltage indicates dual failures of Alternators 1 and 2, will typically be associated with low M1 and M2 voltages,

MAIN BUS 1 VOLTS Caution and **MAIN BUS 2 VOLTS Caution** messages, and **ALTERNATOR 1 CURRENT Caution** and **ALTERNATOR 2 CURRENT Caution** messages.

FLAPS ICE Warning

FLAPS ICE

Full flaps prohibited in icing conditions.

1. Flaps SET UP OR 50%
Procedure Complete

• WARNING •

Maximum flap deflection in icing conditions is limited to 50%.

FUEL FLOW Warning

FUEL FLOW

Check fuel flow.

◆ If on ground:

- a. Correct prior to flight.

Procedure Complete

◆ If in flight:

- a. Mixture..... ADJUST

Adjust engine operation to correct condition. Check engine instruments to verify HIGH FLOW Warning is not erroneous, i.e. abnormal engine temperatures or engine roughness after mixture adjustment.

- If FUEL FLOW Warning does not extinguish:

- (1) Land as soon as practicable.

Procedure Complete

• NOTE •

Fuel flow greater than 30 GPH.

FUEL IMBALANCE Warning

FUEL IMBALANCE

Fuel quantity imbalance has been detected.

1. Fuel Quantity Gauges CHECK
2. Fuel Selector SELECT FULLER TANK

Procedure Complete

• NOTE •

Fuel level imbalance (between left and right) is greater than 12 gallons. Leave the fuel selector cover open until tanks are balanced.

FUEL LOW LEFT Warning

FUEL LOW LEFT

Left fuel tank is nearly empty.

1. Fuel Quantity Gauges CHECK
2. Fuel Selector RIGHT TANK, LEAVE COVER OPEN

Procedure Complete

• WARNING •

Failure to leave the fuel selector cover open may result in the AFSS selecting a nearly empty fuel tank.

• NOTE •

Left fuel tank sensed quantity is less than or equal to 1 gallon.

FUEL LOW RIGHT Warning

FUEL LOW RIGHT

Right fuel tank is nearly empty.

1. Fuel Quantity Gauges CHECK
2. Fuel Selector LEFT TANK, LEAVE COVER OPEN

Procedure Complete

• WARNING •

Failure to leave the fuel selector cover open may result in the AFSS selecting a nearly empty fuel tank.

• NOTE •

Right fuel tank sensed quantity is less than or equal to 1 gallon.

FUEL LOW TOTAL Warning

FUEL LOW TOTAL

Total fuel quantity is low.

1. Fuel Quantity Gauges CHECK
2. Totalized Fuel Quantity CHECK

◆ If totalized fuel quantity differs significantly from sensed quantity:

- a. Initial Fuel Value VERIFY AND CORRECT

◆ If message persists:

- a. Land as soon as practicable.

Procedure Complete

• NOTE •

Fuel Totalizer or sensed quantity is less than or equal to 9 gallons.

IPS CONTROL FAIL Warning

IPS CONTROL FAIL

IPS valves cannot be closed.

1. Icing Conditions AVOID/EXIT

Procedure Complete

IPS FLUID LOW Warning

IPS FLUID LOW

IPS fluid quantity is low.

1. Icing Conditions..... AVOID/EXIT
Procedure Complete

• NOTE •

Depending on the selected flow rate, IPS FLUID LOW annunciation may occur at lower fluid quantities.
Fluid is less than or equal to 0.5 gallon.

IPS QUANTITY FAIL Warning

IPS QUANTITY FAIL

Left and right IPS fluid quantities are unknown.

1. Icing Conditions..... AVOID/EXIT
Procedure Complete

MAIN BUS 1 VOLTS Warning

MAIN BUS 1 VOLTS

Check main power bus 1 voltage.

1. ALT 1 Switch..... CYCLE
2. M Bus 1 Voltage (M1) CHECK

◆ If M Bus 1 Voltage is greater than 32 volts:

- a. ALT 1 Switch OFF
- b. Perform **ALTERNATOR 1 CURRENT Caution** Checklist (do not reset alternator).

Procedure Complete

• NOTE •

Main Bus 1 Voltage is excessive, indicates an alternator 1 voltage regulator failure; will typically be associated with abnormally high voltage indications on M1, M2 and ESS buses, may also be associated with **MAIN BUS 2 VOLTS Warning** or **ESSENTIAL BUS VOLTS Warning** message.

MAIN BUS 2 VOLTS Warning

MAIN BUS 2 VOLTS

Check voltage on main power bus 2.

- ◆ If Main Bus 1 VOLTS Warning is also asserted:
 - a. Perform **MAIN BUS 1 VOLTS Warning** Checklist.
- ◆ If Main Bus 1 VOLTS Warning is not also asserted:
 - a. ALT 1 Switch..... OFF
 - b. Main Bus 2 Voltage CHECK
 - c. ALT 1 Switch..... ON
 - d. Main Bus 1 Voltage CHECK
 - e. Main Bus 2 Voltage CHECK
- ◆ If Main Bus 2 Voltage is greater than 32 volts with ALT 1 off:
 - a. ALT 2 Switch..... CYCLE
 - b. Main Bus 2 Voltage CHECK
- If Main Bus 2 Voltage remains greater than 32 volts:
 - (1) ALT 2 Switch OFF

Procedure Complete

• NOTE •

Main Bus 2 Voltage is excessive. Indicates an alternator voltage regulator failure; will typically be associated with abnormally high bus voltage indications on M2 and ESS, may also be associated with **MAIN BUS 1 VOLTS Warning** and **ESSENTIAL BUS VOLTS Warning** Messages.

OIL PRESSURE Warning

OIL PRESSURE

Oil pressure is out of range.

1. Oil Pressure Gauge.....CHECK

◆ If pressure low / high:

- a. PowerREDUCE TO MINIMUM FOR SUSTAINED FLIGHT
- b. Land as soon as possible.

(1) Prepare for potential engine failure.

Procedure Complete

• NOTE •

It is possible for sensors to produce erroneous warnings. Carefully evaluate other engine parameters and smoothness of operation before taking action.

If oil pressure is low, the engine has probably lost a significant amount of its oil and engine failure may be imminent.

If oil pressure is suddenly high, a blockage or obstruction may have developed in the oil circulation system and engine failure may be imminent.

OIL TEMP Warning

OIL TEMP

Oil temperature is high.

1. Power REDUCE

2. Airspeed..... INCREASE

3. MixtureAS REQUIRED

4. Oil Temperature Gauge.....MONITOR

◆ If message persists:

- a. Land as soon as possible.

Procedure Complete

OXYGEN FAULT Warning

OXYGEN FAULT

Oxygen system fault - Above 12,500 Ft

1. Oxygen Flow Rate CHECK

◆ If no flow:

a. Initiate Emergency Descent to below 12,500 ft:

(1) AP DISC Button PRESS AND RELEASE

(2) Power Lever IDLE

(3) Mixture AS REQUIRED

(4) Airspeed V_{NE}

○ Below 12,500 ft:

(1) Oxygen System (OXY Switch) OFF

(2) Flight CONTINUE

Procedure Complete

◆ If flow is normal:

a. Oxygen Flow Rate MONITOR

b. Initiate Normal Descent as soon as practical.

○ Below 12,500 ft:

(1) Oxygen System (OXY Switch) OFF

(2) Flight CONTINUE

Procedure Complete

• NOTE •

Annunciation indicates tank solenoid failed (open or closed) or flow rate is low. If flow is checked and confirmed present, solenoid has failed OPEN; system will continue to provide oxygen until depleted, but unnecessary flight at altitudes requiring oxygen is not recommended.

OXYGEN QTY LOW Warning

OXYGEN QTY LOW

Oxygen quantity is low.

1. Oxygen Pressure and Flow Rate.....CHECK
 2. Initiate Normal Descent (non-emergency) below 12,500 ft.
 3. Oxygen Flow RateMONITOR
- ◆ Below 12,500 ft:
- a. Flight.....CONTINUE

Procedure Complete

• NOTE •

Annunciation indicates tank pressure is less than or equal to 400 PSI, see Oxygen Duration Table of the Oxygen AFMS to determine duration.

OXYGEN REQUIRED Warning

OXYGEN REQUIRED

Oxygen usage is required.

1. Oxygen System (OXY Switch).....ON
2. Oxygen Mask/CanulaDON
3. Oxygen Flow RateSET AND MONITOR

Procedure Complete

• NOTE •

Annunciation indicates the aircraft is above 12,500 with oxygen system OFF for 40 minutes or when aircraft is above 14,000 ft and the oxygen system is not ON.

RPM Warning

RPM

Check engine RPM.

1. Tachometer CHECK

◆ If engine speed normal:

a. If on ground CORRECT PRIOR TO FLIGHT

b. If in flight CONTINUE, MONITOR

Procedure Complete

◆ If engine speed high:

a. Perform [Propeller Governor Failure](#) Checklist.

2. Oil Pressure Gauge CHECK

Procedure Complete

SPIN SPIN SPIN Warning

SPIN SPIN SPIN

Spin Entry Detected – Initiate Recovery.

1. CAPS ACTIVATE

Procedure Complete

• **WARNING** •

In all cases, if the aircraft enters an unusual attitude following or in connection with a stall, a spin condition should be assumed and, immediate deployment of the CAPS is required. Under no circumstances should spin recovery other than CAPS deployment be attempted.

• **NOTE** •

The aircraft is not approved for spins, and has not been certified for traditional spin recovery characteristics. The only approved and demonstrated method of spin recovery is activation of the Cirrus Airframe Parachute System (see [CAPS Deployment Checklist](#), this section). Because of this, if the aircraft enters a spin, CAPS must be deployed immediately.

While the stall characteristics of the aircraft make inadvertent entry into a spin extremely unlikely, it is possible. Spin entry can be avoided by using good airmanship: coordinated use of controls in turns, proper airspeed control following the recommendations of this manual, and never abusing the flight controls with accelerated inputs when close to the stall (see Section 4, [Stalls](#) discussion).

If, at the stall, the controls are misapplied and abused aggressive inputs are made to the elevator, rudder and/or ailerons, an abrupt wing drop may be felt and a spin may be entered.

STALL Warning

STALL

Stall imminent.

- | | |
|-------------------------|--------------|
| 1. Angle of Attack..... | REDUCE |
| 2. Power Lever | FULL FORWARD |

Procedure Complete

STALL WARNING FAIL Warning

STALL WARNING FAIL

Stall warning is inoperative.

1. Airspeed MAINTAIN ABOVE 1.3V_S
2. Avoid stalls, low airspeed, and uncoordinated or abrupt control inputs.
3. Land as soon as practicable.

Procedure Complete

• WARNING •

The aircraft may not be stall protected. Stalls must be avoided when the stall warning is inoperative. Excessive altitude loss may result if the aircraft is stalled.

Departure from controlled flight or spin may occur during stall with uncoordinated aileron/rudder inputs.

Stall warning is not operative or reliable.

Stall speeds in turns or increased load factor are higher.

• Note •

Serials w/ IPS: Green donut airspeed reference will be unavailable or unreliable.

STARTER ENGAGED Warning

STARTER ENGAGED

Starter is engaged.

◆ If on ground:

- a. Engine KnobOFF
- b. Wait 1 minute before next start attempt.

○ If starter does not disengage (stuck button, relay, or solenoid failure):

- (1) BAT 1 SwitchOFF
- (2) MixtureCUTOFF
- (3) Fuel PumpOFF
- (4) STARTER (D1) Circuit Breaker PULL

Procedure Complete

◆ If in flight:

- a. STARTER (D1) Circuit Breaker PULL
- b. Flight.....CONTINUE
- (1) Engine start will not be available at destination.

Procedure Complete

• **WARNING** •

Use caution after shutdown if STARTER circuit breaker required pull (failed relay or solenoid). If breaker is unknowingly or unintentionally reset, starter will instantly engage if Battery 1 power is supplied; creating a hazard for ground personnel.

• **NOTE** •

Starter has been engaged for more than 30 seconds (starter limit is 10 seconds); if not manually engaged, such as during difficult start, this annunciation may indicate a failure of the starter solenoid or a stuck starter button.

Section 3A: Abnormal Procedures

Table of Contents

Introduction.....	5
Crew Alert System (CAS) Messaging	5
Cautions	5
Advisories	5
Abnormal Procedures Guidance	5
Circuit Breakers.....	6
Procedure Division Symbols	6
Landing Guidance	7
Land as Soon as Practicable	7
Land as Soon as Possible	7
Abnormal Procedures.....	8
Brake Failure During Taxi.....	8
Communications Failure.....	8
Door Open.....	9
Heated Lift Transducer Malfunction	10
Inadvertent Icing Encounter	11
Inadvertent IMC Encounter	11
Landing With Failed Brakes	12
Landing With Flat Tire	12
Loss of All Flight Displays	13
Loss of Reliable Airspeed Indication	13
Loss of Reliable Altitude Indication	13
Windshield IPS Malfunction.....	14
AFCS Alerts.....	15
Abnormal CAS Procedures	15
ALTERNATOR 1 CURRENT Caution	15
ALTERNATOR 2 CURRENT Caution	16
AOA FAIL Advisory	16
AOA HEAT FAIL Caution	17
BATTERY 1 CURRENT Caution.....	17
BATTERY 1 FAIL Caution.....	18
BATTERY 1 FAULT Caution.....	18
BATTERY 1 LOW Caution	19
CHECK OXYGEN Advisory.....	19
CHT Caution	20
ECS RECIRC ON Advisory	20

FLAPS AIRSPEED INHIBIT Caution	21
FLAPS CLIMB Advisory	21
FLAPS DISAGREE Caution	22
FLAPS FAIL Caution	22
FLAPS SELECTOR FAIL Caution	23
FUEL IMBALANCE Advisory	23
FUEL IMBALANCE Caution	23
FUEL LOW TOTAL Caution	24
FUEL PUMP OFF Caution	24
FUEL QTY MISCOMPARE Caution	24
FUEL VALVE AUTO FAIL Caution	25
FUEL VALVE OFF Advisory	25
IPS FLUID LOW Caution	25
IPS FLUID LOW Advisory	26
IPS IMBALANCE Caution	26
IPS PRESSURE HIGH Caution	27
IPS PRESSURE LOW Caution	27
IPS PUMP BACKUP Advisory	28
IPS QUANTITY FAIL Caution	28
IPS SPEED HIGH Caution	28
IPS SPEED LOW Caution	28
IPS TEMP LOW Caution	29
MAIN BUS 1 VOLTS Caution	30
MAIN BUS 2 VOLTS Caution	31
OIL PRESSURE Caution	31
OIL TEMP Caution	32
OXYGEN ON Advisory	32
OXYGEN QTY LOW Advisory	33
OXYGEN QTY LOW Caution	33
OXYGEN REQUIRED Caution	34
PARK BRAKE Caution	34
PITOT HEAT FAIL Caution	35
PROBE HEAT OFF Caution	35
SFD ALT MISCOMPARE Caution	36
SFD IAS MISCOMPARE Caution	37
SFD NO-COMPARE Advisory	37
SFD PITCH MISCOMPARE Caution	38
SFD ROLL MISCOMPARE Caution	39
STARTER ENGAGED Caution	40
TAKEOFF FLAPS Caution	41
Other System Messages	41
MFD FAN FAIL Advisory	41

PFD FAN FAIL Advisory 41

Intentionally Left Blank

Introduction

This section provides procedures for handling abnormal system and/or flight conditions which, if followed, will maintain an acceptable level of airworthiness or reduce operational risk. The guidelines described in this section are to be used when an abnormal condition exists, and should be considered and applied as necessary.

• **WARNING** •

If a Warning annunciation is illuminated in combination with any of the following Abnormal annunciations, the Warning annunciation takes precedence and should be performed first.

Crew Alert System (CAS) Messaging

Cautions

Displayed in yellow against a black background, Caution CAS messages arise during situations that require immediate flight crew awareness and subsequent flight crew response.

- A flashing Caution CAS message with an accompanying aural alert requires more timely flight crew response.
- A flashing Caution CAS message with no accompanying aural alert requires flight crew response, dependent on workload.
- A non-flashing Caution CAS message with no accompanying aural alert requires attention, dependent on workload. It may also require performing maintenance or taking corrective action prior to next flight.

Advisories

Displayed in white against a black background, Advisory CAS messages arise during situations that require flight crew awareness and that may require subsequent flight crew response.

Abnormal Procedures Guidance

Although this section provides procedures for handling most abnormal system and/or flight conditions that could arise in the aircraft, it is not a substitute for proper flight training, thorough knowledge of the airplane, and recognized piloting techniques and standards. A thorough study of the information in this handbook while on the ground will help you prepare for time-critical situations in the air.

Sound judgment as well as thorough knowledge of the aircraft, its characteristics, and the flight manual procedures are essential in the handling of any abnormal system and/or flight condition. In addition to the outlined items in the Abnormal Procedures, the following steps are considered part of all abnormal situations:

- Maintain Aircraft Control
- Analyze the Situation
- Take Appropriate Action

Circuit Breakers

Some procedures involve manipulating circuit breakers (CBs). The following criteria should be followed during “Circuit Breaker” steps:

- Intentional pulling of circuit breakers during flight, other than as required in specific procedures, may cause abnormal or unexpected system behavior and is not recommended.
- When instructed to “SET”, the appropriate circuit breaker should be checked for normal condition. If the circuit breaker is not “SET”, it may be reset only once. If the circuit breaker opens again, do not reset.
- When instructed to “PULL”, the appropriate circuit breaker should only be pulled and not reset.
- When instructed to “CYCLE”, the appropriate circuit breaker should be pulled, delayed for several seconds, and reset only once. Allow sufficient cooling time for circuit breakers that are reset through a “CYCLE” procedure.

Procedure Division Symbols

For procedures requiring pilot decision, conditional steps are indented with a symbol to indicate sub-sections within the procedure. On condition, the pilot makes a decision to identify the applicable sub-section. Following the initial decision, a further sub-division of the procedure may occur. In that event, one or more additional conditions guides the pilot through the remaining decisions. Once the applicable condition(s) are identified, the pilot follows the remaining steps until the indication “Procedure Complete” is reached.

The procedure symbol levels are:

- ◆ First Level
 - Second Level
 - Third Level

Landing Guidance

Land as Soon as Practicable

The pilot may consider the convenience of future maintenance when selecting an airport to land as soon as practicable. Pilots must not overfly a suitable and practicable airport for other ground conveniences.

Land as Soon as Possible

The pilot must identify and land at the first available airport that allows for a safe approach and landing considering the approach procedures available, ceilings, visibility, winds and runway lengths

Abnormal Procedures

Brake Failure During Taxi

1. Engine PowerAS REQUIRED
 2. Directional Control..... MAINTAIN WITH RUDDER
 3. Brake Pedal(s) PUMP
- ◆ If directional control cannot be maintained:
- a. Engine KnobOFF

Procedure Complete

• NOTE •

Increasing power may allow some rudder control due to increased ground speed and airflow over the rudder.

Communications Failure

1. Switches and Controls CHECK
2. Frequency CHANGE
3. COM 1 (B12) & COM 2/AUDIO PANL (C12) CB..... SET
4. Headset CHANGE

Procedure Complete

• NOTE •

If, after following the checklist procedure, communication is not restored, proceed with Aeronautical Information Manual (AIM) lost communications procedures.

In the event of an audio panel power failure the audio panel connects COM 1 to the pilot's headset and speaker.

Door Open

◆ If during takeoff roll:

- a. TakeoffABORT

Procedure Complete

◆ If in flight:

- a. Airplane Control.....MAINTAIN
b. Land as soon as practicable.

Procedure Complete

• NOTE •

The doors on the airplane will remain 1-3 inches open in flight if not latched. Do not allow efforts to close the door interfere with the primary task of maintaining control of the airplane. An open door is impossible to close in flight. Do not attempt to close until after landing.

Heated Lift Transducer Malfunction

- ◆ If ice forms on lift transducer vane:
 - a. STALL VANE HEAT (D3) Circuit Breaker CYCLE
 - b. Probe Heat CYCLE OFF, ON
 - ◆ If ice remains on lift transducer vane:
 - a. Stall Warning System EXPECT NO RELIABLE INDICATION
- This includes:
- Impending Stall Warning
 - Stall Speed Indication
 - Stick Shaker Vibration
- b. Airspeed MONITOR, DO NOT STALL
 - c. Fly published V_{REF} Speeds MINIMUM 88 KIAS W/ 50% FLAPS

Procedure Complete

• NOTE •

Airframe buffet before the stall is a good indication of an impending stall.

The stall warning aural alert typically activates prematurely if there is ice accumulated on the lift transducer vane.

Inadvertent Icing Encounter

1. Probe Heat ON
2. Serials w/ IPS: IPS ON
3. Exit icing conditions. Turn back or change altitude.
4. Temperature SelectorHOT
5. Vent Selector..... DEFROST
6. Airflow Selector.....MAXIMUM
7. Panel VentsCLOSED

Procedure Complete

Inadvertent IMC Encounter

1. Airplane Control.....ESTABLISH STRAIGHT AND LEVEL FLIGHT
2. Autopilot..... ENGAGE TO HOLD HEADING AND ALTITUDE
3. Heading..... RESET TO INITIATE 180° TURN

Procedure Complete

• NOTE •

Upon entering IMC, a pilot who is not completely proficient in instrument flying should rely upon the autopilot to execute a 180° turn to exit the conditions. Immediate action should be made to turn back as described above.

Landing With Failed Brakes

◆ One brake inoperative:

- a. Land on the side of runway corresponding to the inoperative brake.
- b. Maintain directional control using rudder and working brake.

Procedure Complete

◆ Both brakes inoperative:

- a. Divert to the longest, widest runway with the most direct headwind.
- b. Land on downwind side of the runway.
- c. Use the rudder for obstacle avoidance.
- d. Perform [Emergency Engine Shutdown On Ground Checklist](#).

Procedure Complete

• NOTE •

Rudder effectiveness will decrease with decreasing airspeed.

Landing With Flat Tire

◆ Main Gear:

- a. Land on the side of the runway corresponding to the good tire.
- b. Maintain directional control with the brakes and rudder.
- c. Do not taxi. Stop airplane and perform a normal engine [Shutdown](#).

Procedure Complete

◆ Nose Gear:

- a. Land in the center of the runway.
- b. Hold the nosewheel off the ground as long as possible.
- c. Do not taxi. Stop airplane and perform a normal engine [Shutdown](#).

Procedure Complete

• NOTE •

If a flat tire or tread separation occurs during takeoff and you cannot abort, land as soon as conditions permit.

Loss of All Flight Displays

1. BAT 1 and BAT 2 Switches VERIFY ON
2. ALT 1 and ALT 2 Switches..... VERIFY ON
3. Land as soon as possible.

Procedure Complete

Loss of Reliable Airspeed Indication

1. Probe Heat ON
 2. AP DISC Button..... PRESS
 3. AP CTRL (A3) Circuit Breaker..... PULL
- Land as soon as practicable.

Procedure Complete

• NOTE •

If only the airspeed indicator is providing erroneous information, and in icing conditions, the most probable cause is Pitot ice. If setting Probe Heat ON does not correct the problem, descend to warmer air. If an approach must be made with a blocked Pitot tube, use known pitch and power settings and the GPS ground speed indicator, taking surface winds into account.

Loss of Reliable Altitude Indication

1. Alternate Static Source OPEN

Procedure Complete

• NOTE •

Reference GPS AGL (GAGL) displayed on the PFD.

Windshield IPS Malfunction

1. ICE PROTECT 1 (A4) Circuit Breaker CYCLE
2. Fluid Quantity..... SWITCH TO FULLER TANK
3. W/S Push-Button PRESS AS REQUIRED
 - ◆ If forward field of view is overly restricted during landing, approach, and taxiing:
 - a. Temperature Selector HOT
 - b. Vent Selector..... POSITION
 - c. Airflow Selector..... MAXIMUM
 - d. Panel Vents CLOSED
 - e. Execute a forward slip as required for visibility.
 - f. Avoid taxiing without adequate forward visibility.

Procedure Complete

AFCS Alerts

For more information on AFCS alerts, refer to the Garmin Cockpit Reference Guide.

Abnormal CAS Procedures

ALTERNATOR 1 CURRENT Caution

ALTERNATOR 1 CURRENT

Check Alternator 1 current.

1. ALT 1 (D11) Circuit BreakerSET
2. ALT 1 Switch CYCLE

◆ If alternator does not reset:

- a. ALT 1 Switch OFF
- b. Non-Essential LoadsREDUCE

○ If flight conditions permit, consider shedding the following to preserve Battery 1:

- (1) Air Conditioning OFF
- (2) Cabin Fan OFF
- (3) Landing Lights (LAND Switch) OFF
- (4) YAW SERVO (C1) Circuit Breaker PULL
- (5) CONV SYS 1 (D8) Circuit Breaker PULL
- (6) CONV SYS 2 (D9) Circuit Breaker PULL
- (7) EVS CAMERA (C5) Circuit Breaker (if installed) PULL
- c. Continue Flight, avoiding IMC or night flight as able (reduced power redundancy).

Procedure Complete

• CAUTION •

Dependent on Battery 1 state, landing light may be weak or inoperative for landing.

• NOTE •

Alternator 1 output is low, indicative of alternator failure and will typically be associated with low Main Bus 1 voltage, Battery 1 discharge and **MAIN BUS 1 VOLTS Caution** message.

ALTERNATOR 2 CURRENT Caution

ALTERNATOR 2 CURRENT

Check Alternator 2 current.

1. ALT 2 (B5) Circuit Breaker..... SET
2. ALT 2 Switch..... CYCLE

◆ If alternator does not reset:

- a. ALT 2 SwitchOFF
- b. Continue Flight, avoiding IMC or night flight as able (reduced power redundancy).

Procedure Complete

• NOTE •

Alternator 2 output is low, indicative of alternator failure. Isolated ALT 2 failure will not typically be associated with any other unusual indications, cautions or warnings (ALT 1 will pick up all loads).

AOA FAIL Advisory

AOA FAIL

Dynamic stall speed band is unavailable.

1. Low speed red band extends to a fixed value of 61 knots.

Procedure Complete

• NOTE •

Angle of Attack signal has failed. This signal is used to calculate and display a dynamic stall speed awareness band (red band) on airspeed tape.

Serials w/ IPS: Green donut airspeed reference will be unavailable or unreliable.

AOA HEAT FAIL Caution

AOA HEAT FAIL

Stall warning/AoA heater has failed.

1. STALL VANE HEAT (D3) Circuit Breaker..... CYCLE
2. PITOT HEAT (D2) Circuit Breaker..... CYCLE
3. Icing ConditionsAVOID/EXIT

Procedure Complete

• NOTE •

Fly aircraft normally using airframe buffet as the stall warning. Ice accumulations on the lift transducer vane may result in unreliable stall warning system operation.

BATTERY 1 CURRENT Caution

BATTERY 1 CURRENT

Check battery 1 current.

1. Main Bus 1, 2 and Non-Essential Bus Loads.....REDUCE
 - a. Air Conditioning OFF
 - b. Cabin Fan..... OFF
 - c. Landing Lights (LAND Switch)..... OFF
 - d. YAW SERVO (C1) Circuit Breaker PULL
 - e. CONV SYS 1 (D8) Circuit Breaker PULL
 - f. CONV SYS 2 (D9) Circuit Breaker PULL
 - g. EVS CAMERA (C5) Circuit Breaker (if installed)..... PULL
2. Main Bus 1, 2 and Essential Voltages..... MONITOR
3. Land as soon as practicable.

Procedure Complete

• NOTE •

Battery 1 discharge while Alt 1 is functioning normally is indicative of an internal power distribution failure within the MCU.

BATTERY 1 FAIL Caution

BATTERY 1 FAIL

Battery 1 service is required.

1. BAT 1 SwitchOFF
2. Land as soon as practicable.

Procedure Complete

BATTERY 1 FAULT Caution

BATTERY 1 FAULT

Battery 1 fault is detected.

1. BAT 1 SwitchOFF

◆ If message extinguishes:

- a. BAT 1 Switch ON
- b. Continue flight.

◆ If message persists or reoccurs:

- a. BAT 1 switchOFF
- b. Exit IMC as soon as practicable.
- c. Land as soon as practicable.

2. Contact Cirrus for corrective action.

Procedure Complete

BATTERY 1 LOW Caution

BATTERY 1 LOW

Battery 1 state of charge is low.

◆ If on ground, prior to engine start:

- a. External Power CONNECT

Procedure Complete

◆ If on ground with engine running, or in flight:

- a. BAT 1 and ALT 1 Switches VERIFY ON

- b. Main Bus 1 Voltage CHECK

- c. Service aircraft as soon as practicable.

Procedure Complete

• NOTE •

Battery 1 may not have sufficient capacity to start the engine.

CHECK OXYGEN Advisory

CHECK OXYGEN

Check oxygen system status.

1. Hypoxia SymptomsCHECK ALL OCCUPANTS

◆ If hypoxia symptoms suspected:

- a. Oxygen Mask/Cannula DON

- b. Oxygen System (OXY Switch) ON

- c. Oxygen Flow Rates CHECK

2. Oxygen LinesVERIFY CONNECTIONS AND ROUTING

3. Oxygen Quantity CHECK

Procedure Complete

CHT Caution

CHT

Cylinder head temperature is high.

◆ If on ground:

- a. Power Lever REDUCE
- b. Annunciators and Engine Temperatures MONITOR

○ If message persists:

- (1) Power Lever MINIMUM REQUIRED
- (2) Do not dispatch.

Procedure Complete

◆ If in flight:

- a. Power Lever REDUCE
- b. Mixture ADJUST TO TOP OF GREEN ARC
- c. Airspeed INCREASE
- d. Annunciators and Engine Temperatures MONITOR

○ If message persists:

- (1) Power Lever MINIMUM REQUIRED
- (2) Engine Instruments MONITOR

☐ If message persists:

- (a) Land as soon as practicable.

Procedure Complete

ECS RECIRC ON Advisory

ECS RECIRC ON

ECS recirculation mode is prohibited in flight.

- 1. Air Conditioner RECIRC DISABLED

Procedure Complete

FLAPS AIRSPEED INHIBIT Caution

FLAPS AIRSPEED INHIBIT

Flaps motion inhibited.

1. Airspeed INCREASE OR DECREASE, AS REQUIRED
OR
2. Flaps RETURN TO PREVIOUS POSITION

Procedure Complete

• NOTE •

The flaps will extend or retract to the commanded position as soon as FLAPS AIRSPEED INHIBIT caution extinguishes.

FLAPS CLIMB Advisory

FLAPS CLIMB

Flaps not set for enroute climb.

1. Flaps UP

Procedure Complete

FLAPS DISAGREE Caution

FLAPS DISAGREE

Flaps not in commanded position.

1. FlapsCYCLE TO ACTUAL FLAP POSITION

◆ If message extinguishes:

- a. FlapsSELECT DESIRED FLAP POSITION
- b. Continue flight.

Procedure Complete

◆ If message persists:

- a. FlapsMONITOR POSITION
- b. Perform landing in most favorable flap position achievable.

Procedure Complete

• WARNING •

Flaps motion is inhibited when a flap position disagree condition exists. Setting the flap selector to match actual flap position can potentially extinguish the FLAPS DISAGREE condition and render the flaps operative.

FLAPS FAIL Caution

FLAPS FAIL

Flaps not in commanded position.

1. FlapsCYCLE TO ACTUAL FLAP POSITION

◆ If message persists:

- a. Perform landing with flaps at current position.

Procedure Complete

FLAPS SELECTOR FAIL Caution

FLAPS SELECTOR FAIL

Flaps not in commanded position.

1. Perform landing with flaps at current position.
Procedure Complete

FUEL IMBALANCE Advisory

FUEL IMBALANCE

Fuel Imbalance

1. Fuel Quantity Gauges..... CHECK
 2. Fuel Selector..... SELECT FULLER TANK
- Procedure Complete

• NOTE •

Fuel level imbalance (between left and right) is greater than 8 gallons Leave the fuel selector cover open until tanks are balanced.

FUEL IMBALANCE Caution

FUEL IMBALANCE

Fuel Imbalance

1. Fuel Quantity Gauges..... CHECK
 2. Fuel Selector..... SELECT FULLER TANK
- Procedure Complete

• NOTE •

Fuel level imbalance (between left and right) is greater than 10 gallons. Leave the fuel selector cover open until tanks are balanced.

FUEL LOW TOTAL Caution

FUEL LOW TOTAL

Low Fuel Quantity

1. Fuel Quantity Gauges CHECK
2. Totalized Fuel Quantity CHECK

◆ If totalized value differs significantly from sensed quantity:

- a. Initial Fuel Value VERIFY AND CORRECT

◆ If message persists:

- a. Land as soon as practicable.

Procedure Complete

• NOTE •

Fuel totalizer or sensed total fuel quantity is less than or equal to 14 gallons.

FUEL PUMP OFF Caution

FUEL PUMP OFF

Fuel pump is turned off.

1. Fuel Pump BOOST (AS REQ'D)

Procedure Complete

FUEL QTY MISCOMPARE Caution

FUEL QTY MISCOMPARE

Sensed and totalized fuel quantity disagreement.

1. Fuel Quantity/Fuel Remaining..... COMPARE

◆ If totalized fuel quantity differs significantly from sensed quantity:

- a. Initial Fuel Value..... VERIFY AND CORRECT

Procedure Complete

FUEL VALVE AUTO FAIL Caution

FUEL VALVE AUTO FAIL

Automatic fuel tank selection is unavailable.

1. FUEL VALVE Circuit Breaker (C3)..... PULL
2. Fuel Selector.....LEFT OR RIGHT (AS REQ'D)

Procedure Complete

• NOTE •

Leave the fuel selector cover open and operate the tank selector manually for duration of flight.

FUEL VALVE OFF Advisory

FUEL VALVE OFF

Fuel valve is in the off position.

1. Fuel Selector.....LEFT OR RIGHT (AS REQ'D)

Procedure Complete

IPS FLUID LOW Caution

IPS FLUID LOW

IPS fluid quantity is low.

1. Icing ConditionsAVOID/EXIT

Procedure Complete

• NOTE •

Fluid is less than or equal to 1 gallon.

Depending on the selected flow rate, IPS FLUID LOW annunciation may occur at lower fluid quantities.

IPS FLUID LOW Advisory

IPS FLUID LOW

IPS fluid quantity is low.

1. Icing Conditions..... AVOID/EXIT
Procedure Complete

• NOTE •

Fluid is less than or equal to 1 gallon.

IPS IMBALANCE Caution

IPS IMBALANCE

IPS fluid quantity imbalance has been detected.

1. Revert to AUTO control of the fluid source to control the fluid quantity.

◆ If IPS PRESSURE LOW Caution annunciates:

- a. Revert to manual control of the fluid source to control the fluid level quantity.

(1) Fluid Quantity..... SWITCH TO FULLER TANK

- b. W/S Push-Button..... PRESS

(1) Repeat operation of windshield pump to verify metering pumps are primed properly as evidenced by deicing fluid exiting windshield nozzles.

◆ If message persists or is intermittent:

- a. Fluid QuantitySWITCH TO OPPOSITE TANK

- b. W/S Push-ButtonPRESS

(1) Repeat operation of windshield pump to verify metering pumps are primed properly as evidenced by deicing fluid exiting windshield nozzles.

- c. Icing Conditions AVOID/EXIT

Procedure Complete

• NOTE •

Imbalance between left and right sensed fluid quantity is greater than 1.0 gallon.

IPS PRESSURE HIGH Caution

IPS PRESSURE HIGH

IPS pressure is high.

- 1. Evidence of IPS FlowMONITOR/VERIFY
- 2. Icing ConditionsAVOID/EXIT

Procedure Complete

• NOTE •

Typically indicates a clogged filter.

IPS PRESSURE LOW Caution

IPS PRESSURE LOW

IPS pressure is low.

- 1. ICE PROTECT 1 (A4) and 2 (B4) Circuit Breakers.....SET
- 2. Fluid QuantitySWITCH TO FULLER TANK
- 3. W/S Push-Button PRESS
 - a. Repeat operation of windshield pump to verify metering pumps are primed properly as evidenced by deicing fluid exiting windshield nozzles.
- 4. ICE PROTECT Mode Switch HIGH

◆If caution persists or is intermittent:

- a. BKUP Switch ON
- b. W/S Push-Button..... PRESS

Procedure Complete

• CAUTION •

A persistent **IPS PRESSURE LOW Caution** indicates an abnormal condition in the tail section of IPS and warrants increased caution because the tail section’s smaller leading edge radius will typically collect ice more quickly and ice accretion is more difficult to monitor.

IPS PUMP BACKUP Advisory

IPS PUMP BACKUP

IPS backup pump mode has been selected.

1. Verify use of IPS backup pump is appropriate.
Procedure Complete

IPS QUANTITY FAIL Caution

IPS QUANTITY FAIL

Left or right IPS fluid quantities are unreliable.

1. Revert to manual control of the fluid source to control the fluid level quantity.
Procedure Complete

IPS SPEED HIGH Caution

IPS SPEED HIGH

Airspeed is too high for ice protection.

1. Airspeed.....MAINTAIN 95-177 KIAS AND less than 204 KTAS
Procedure Complete

• NOTE •

Airspeed is greater than 177 KIAS or 204 KTAS.

IPS SPEED LOW Caution

IPS SPEED LOW

Airspeed is too low for ice protection.

1. Airspeed.....MAINTAIN 95-177 KIAS AND less than 204 KTAS
Procedure Complete

• NOTE •

Airspeed is less than 95 KIAS.

IPS TEMP LOW Caution

IPS TEMP LOW

Temperature is too low for ice protection.

1. ICE PROTECT System Switch..... OFF
2. Icing Conditions AVOID/EXIT

Procedure Complete

• NOTE •

Minimum Operating Temperature for IPS is -30 °F (-34 °C).

MAIN BUS 1 VOLTS Caution

MAIN BUS 1 VOLTS

Check voltage on Main Bus 1.

1. ALT 1 (D11) Circuit Breaker..... SET
2. ALT 1 Switch..... CYCLE

◆ If alternator does not reset:

- a. ALT 1 SwitchOFF
- b. Non-Essential Loads..... REDUCE

○ If flight conditions permit, consider shedding the following to preserve Battery 1:

- (1) Air ConditioningOFF
- (2) Cabin Fan.....OFF
- (3) Landing Lights (LAND Switch)OFF
- (4) YAW SERVO (C1) CIRCUIT BREAKER PULL
- (5) CONV SYS 1 (D8) CIRCUIT BREAKER PULL
- (6) CONV SYS 2 (D9) Circuit Breaker..... PULL
- (7) EVS CAMERA (C5) Circuit Breaker (if installed) PULL
- c. Continue flight, avoiding IMC or night flight as able (reduced power redundancy).

Procedure Complete

• CAUTION •

Dependent on Battery 1 state, landing light may be weak or inoperative for landing.

• NOTE •

Main Bus 1 Voltage is low, indicates Alt 1 failure and will typically be associated with low Main Bus 1 voltage and Alt 1 current indications, Battery 1 discharge and **ALTERNATOR 1 CURRENT Caution** message.

MAIN BUS 2 VOLTS Caution

MAIN BUS 2 VOLTS

Check voltage on Main Bus 2.

1. ALT 2 (B5) Circuit BreakerSET
2. ALT 2 Switch CYCLE

◆ If alternator does not reset:

- a. ALT 2 Switch..... OFF
- b. Continue Flight, avoiding IMC or night flight as able (reduced power redundancy).

Procedure Complete

• NOTE •

Main Bus 2 Voltage is low, indicative of dual Alt 1 and 2 failures and will typically be associated with low Main Bus 1 and Main Bus 2 voltages, Alt 1 and Alt 2 current indications, Battery 1 discharge, ALT 1 & 2 and **MAIN BUS 1 VOLTS Caution** & **MAIN BUS 2 VOLTS Caution** messages, and **ESSENTIAL BUS VOLTS Warning** message.

OIL PRESSURE Caution

OIL PRESSURE

Oil pressure is out of range.

◆ If in flight:

- a. Land as soon as practicable.

Procedure Complete

• NOTE •

Oil pressure between 10 psi and 30 psi at or above 1000 RPM.

OIL TEMP Caution

OIL TEMP

Oil temperature is high.

1. Power..... REDUCE AS MUCH AS PRACTICAL
2. Airspeed..... INCREASE
3. Mixture ADJUST TO TOP OF GREEN ARC
4. Oil Temperature Gauge MONITOR

Procedure Complete

• NOTE •

Oil temperature is greater than 240°F (115 °C).

OXYGEN ON Advisory

OXYGEN ON

Oxygen system is left on after shutdown.

1. Oxygen System (OXY Switch).....OFF

Procedure Complete

• NOTE •

Annunciation indicates that oxygen system has been left ON after on-ground engine shutdown. If system is left ON and aircraft power is turned OFF, the solenoid valve will remain open and may result in unexpected leakage and pressure loss.

OXYGEN QTY LOW Advisory

OXYGEN QTY LOW

Oxygen quantity is low.

◆ If on ground:

- a. Oxygen Supply REPLENISH (AS REQ'D)

Procedure Complete

◆ If in flight:

- a. If use of oxygen is anticipated, verify adequate oxygen supply for flight duration. Refer to Duration chart in Oxygen System AFMS.

Procedure Complete

• NOTE •

Annunciation indicates oxygen tank pressure is less than or equal to 800 PSI at pressure altitudes less than 10,000 ft.

OXYGEN QTY LOW Caution

OXYGEN QTY LOW

Oxygen quantity is low.

- 1. Oxygen Pressure and Flow Rate CHECK
- 2. Oxygen Duration CALCULATE
See Oxygen AFMS; calculate duration based on remaining pressure, number of occupants and type of device (mask or cannula).
- 3. Perform Normal **Descent** as necessary, dependent on duration calculation.

Procedure Complete

• NOTE •

Annunciation indicates tank pressure is between 400 and 800 PSI at pressure altitudes greater than or equal to 10,000 ft, see Oxygen AFMS to determine remaining duration.

OXYGEN REQUIRED Caution

OXYGEN REQUIRED

Oxygen usage is required.

1. Oxygen System (OXY Switch)..... ON
2. Oxygen Mask or Cannulas.....DON
3. Oxygen Flow Rate SET AND MONITOR

Procedure Complete

• NOTE •

Annunciation indicates the aircraft is above 12,500 ft pressure altitude for greater than 30 minutes and the oxygen system is not ON, or the aircraft is above 14,000 ft pressure altitude and oxygen system is not ON.

PARK BRAKE Caution

PARK BRAKE

Parking brake is set.

1. Parking Brake.....RELEASE

Procedure Complete

PITOT HEAT FAIL Caution

PITOT HEAT FAIL

Pitot heat failure.

1. Probe Heat CYCLE

◆ If message persists:

- a. Airspeed EXPECT NO RELIABLE INDICATION
- b. Stall Warning System EXPECT NO RELIABLE INDICATION
- c. Icing Conditions AVOID/EXIT

Procedure Complete

• NOTE •

Pitot heat failure. Displayed when probe heat is ON and pitot heat current is not detected.

If using Autopilot, monitor for degraded performance and be aware of possible erroneous overspeed/underspeed protection.

PROBE HEAT OFF Caution

PROBE HEAT OFF

Probe heat is required.

1. Probe Heat ON

◆ If message persists:

- a. Airspeed EXPECT NO RELIABLE INDICATION
- b. Stall Warning System EXPECT NO RELIABLE INDICATION
- c. Icing Conditions AVOID/EXIT

Procedure Complete

• NOTE •

Displayed 15 seconds after system detects OAT is less than or equal to 41 °F (5 °C) and probe heat is OFF.

SFD ALT MISCOMPARE Caution

SFD ALT MISCOMPARE

SFD altitude miscompare.

1. DISPLAY BACKUP Button.....PRESS

2. AltitudeCROSS-CHECK SFD WITH PFD

3. Altitude.....CROSS-CHECK PFD ADC 1 WITH ADC 2

• NOTE •

Select PFW mode on GTC 1 or GTC 2 and select SENSORS menu or via PFD softkeys to select PFD air data source.

4. Select correct sensor source, if required.
5. Pull erroneous circuit breakers, if required.
 - ADAHRS 1 (B13)
 - ADAHRS 2 (C13)
 - STNDBY ATT A (B14)
 - STNDBY ATT B (C14)
6. Exit IMC as soon as practical.
7. Land as soon as practicable.

Procedure Complete

SFD IAS MISCOMPARE Caution

SFD IAS MISCOMPARE

SFD airspeed miscompare.

1. DISPLAY BACKUP Button PRESS

2. Airspeed CROSS-CHECK SFD WITH PFD

3. Airspeed CROSS-CHECK PFD ADC 1 WITH ADC 2

• NOTE •

Select PFW mode on GTC 1 or GTC 2 and select SENSORS menu or PFD softkeys to select PFD air data source.

4. Select correct sensor source, if required.
5. Pull erroneous circuit breakers, if required.
 - ADAHRS 1 (B13)
 - ADAHRS 2 (C13)
 - STNDBY ATT A (B14)
 - STNDBY ATT B (C14)
6. Exit IMC as soon as practical.
7. Land as soon as practicable.

Procedure Complete

SFD NO-COMPARE Advisory

SFD NO-COMPARE

SFD comparison data missing.

1. Exit IMC.
2. Land as soon as practicable.

Procedure Complete

SFD PITCH MISCOMPARE Caution

SFD PITCH MISCOMPARE

SFD pitch miscompare.

1. DISPLAY BACKUP Button.....PRESS
2. Attitude.....CROSS-CHECK SFD WITH PFD
3. Airspeed..... CROSS-CHECK PFD
AHRS 1 WITH AHRS 2

• NOTE •

Select PFW mode on GTC 1 or GTC 2 and select SENSORS menu or PFD softkeys to select PFD attitude source.

4. Select correct sensor source, if required.
5. Pull erroneous circuit breakers, if required.
 - ADAHRS 1 (B13)
 - ADAHRS 2 (C13)
 - STNDBY ATT A (B14)
 - STNDBY ATT B (C14)
6. Exit IMC as soon as practical.
7. Land as soon as practicable.

Procedure Complete

SFD ROLL MISCOMPARE Caution

SFD ROLL MISCOMPARE

SFD roll miscompare.

1. DISPLAY BACKUP Button PRESS
2. Attitude CROSS-CHECK SFD WITH PFD
3. AttitudeCROSS-CHECK PFD
AHRS 1 WITH AHRS 2

• NOTE •

Select PFW mode on GTC 1 or GTC 2 and select SENSORS menu
or PFD softkeys to select PFD attitude source.

4. Select correct sensor source, if required.
5. Pull erroneous circuit breakers, if required.
 - ADAHRS 1 (B13)
 - ADAHRS 2 (C13)
 - STNDBY ATT A (B14)
 - STNDBY ATT B (C14)
6. Exit IMC as soon as practical.
7. Land as soon as practicable.

Procedure Complete

STARTER ENGAGED Caution

STARTER ENGAGED

Starter is engaged.

◆ If on ground:

a. Starter ButtonOFF

○ If starter does not disengage (stuck button, relay or solenoid failure):

(1) Wait 20 seconds before next start attempt.

(2) BAT 1 SwitchOFF

(3) Mixture CUTOFF

(4) Fuel PumpOFF

(5) STARTER (D1) Circuit Breaker PULL

Procedure Complete

◆ If in flight:

a. STARTER (D1) Circuit Breaker PULL

b. Flight CONTINUE

Procedure Complete

• WARNING •

Use caution after shutdown if STARTER circuit breaker required pull (failed relay or solenoid). If breaker is unknowingly or unintentionally reset, starter will instantly engage if Battery 1 power is supplied; creating a hazard for ground personnel.

• NOTE •

Starter has been engaged for more than 15 seconds (starter limit is 10 seconds); if not manually engaged, such as during difficult start, this annunciation may indicate a failure of the starter solenoid or a stuck starter button.

TAKEOFF FLAPS Caution

TAKEOFF FLAPS

Flaps not in takeoff configuration.

1. Takeoff.....ABORT
2. Flaps 50%

Procedure Complete

Other System Messages

MFD FAN FAIL Advisory

MFD FAN FAIL

MFD cooling fan failure.

1. AVIONICS FAN 1 (D7) Circuit BreakerSET
- ◆ If annunciation does not extinguish:
- a. High cabin temps..... LAND AS SOON AS PRACTICABLE
 - b. Low cabin tempsCONTINUE, MONITOR

Procedure Complete

PFD FAN FAIL Advisory

PFD FAN FAIL

PFD cooling fan failure.

1. AVIONICS FAN 2 (C7) Circuit BreakerSET
- ◆ If annunciation does not extinguish:
- a. High cabin temps..... LAND AS SOON AS PRACTICABLE
 - b. Low cabin tempsCONTINUE, MONITOR

Procedure Complete

Intentionally Left Blank

Section 4: Normal Procedures

Table of Contents

Introduction.....	3
Airspeeds for Normal Operation.....	3
Normal Procedures	4
Preflight Inspection.....	4
Before Engine Start.....	11
Engine Start.....	11
Before Taxi.....	13
Before Takeoff.....	14
Maximum Power Fuel Flow.....	16
Takeoff.....	16
Normal Takeoff.....	17
Short Field Takeoff.....	17
Climb.....	18
Cruise.....	19
Cruise Leaning.....	20
Descent.....	21
Before Landing.....	21
Landing.....	21
Normal Landing.....	22
Short Field Landing.....	22
Crosswind Landing.....	23
Balked Landing/Go-Around.....	23
After Landing.....	23
Shutdown.....	24
Stalls.....	25
Environmental Conditions.....	26
Cold Weather Operation.....	26
Starting.....	26
Hot Weather Operation.....	28
Ground Operation of Air Conditioning System (Optional).....	28
Extended Ground Operation.....	28
Noise Characteristics/Abatement.....	29
Serials w/ IPS: Icing Conditions.....	30
Maximum Operating Time.....	31
Preflight Inspection.....	32
Ice Formation Determination.....	34

Before Takeoff	34
In Flight.....	35
If Inadvertent Icing Encounter or Icing Conditions Exist	35
While in Icing Conditions	35
After Leaving Icing Conditions.....	36
Cruise	36
Approach and Landing	37
If Icing Conditions Exist:	37
After Landing and Shutdown	37

Introduction

This section provides amplified procedures for normal operation of the Cirrus SR22 aircraft.

• **NOTE** •

Refer to [Section 9: Log of Supplements](#) for optional equipment Normal Procedures.

Normal operating procedures for Garmin TAWS and GFC 700 Automatic Flight Control System are described in the Cirrus Perspective Touch+ Pilot's Guide.

Airspeeds for Normal Operation

Unless otherwise noted, the following speeds are based on a maximum weight of 3600 lb. and may be used for any lesser weight. However, to achieve the performance specified in Section 5 for takeoff and landing distance, the speed appropriate to the particular weight must be used.

Takeoff:

- Normal, Flaps 50%73 KIAS
- Obstacle Clearance, Flaps 50%84 KIAS

Enroute Climb, Flaps Up:

- Normal 110 - 120 KIAS
- Best Rate of Climb, SL.....108 KIAS
- Best Rate of Climb, 10,000'99 KIAS
- Best Angle of Climb, SL88 KIAS
- Best Angle of Climb, 10,000'88 KIAS

Landing Approach:

- Normal Approach, Flaps Up..... 90 - 95 KIAS
- Normal Approach, Flaps 50% 85 - 90 KIAS
- Normal Approach, Flaps 100%.....80 - 85 KIAS
- Short Field, Flaps 100% (V_{REF})79 KIAS

Go-Around, Flaps 50%:

- Best Angle of Climb, SL80 KIAS

Maximum Recommended Turbulent Air Penetration:

- 3600 Lb140 KIAS
- 2900 Lb123 KIAS

Maximum Demonstrated Crosswind Velocity:

- Takeoff or Landing21 Knots

Normal Procedures

Preflight Inspection

• **WARNING** •

Before carrying out preflight inspections, ensure that all required maintenance has been accomplished. Review your flight plan and compute weight and balance and performance requirements. Throughout the walk-around: check all hinges, hinge pins, and bolts for security; check skin for damage, condition, and evidence of delamination; check all control surfaces for proper movement and excessive free play; check area around liquid reservoirs and lines for evidence of leaking.


In cold weather, remove all frost (polished or not), ice, snow, or slush from fuselage, wing, stabilizers, and control surfaces. Ensure that control surfaces are free of internal ice or debris. Check that wheel fairings are free of snow and ice accumulation. Check that Pitot probe warms within 30 seconds of setting Probe Heat to ON.

Failure to comply may result in significant aircraft damage, loss of aircraft, and/or loss of life.

• **NOTE** •

Serials w/ IPS: If icing conditions are expected or possible during flight, perform additional procedures outlined in Icing Conditions.

Figure 4-1: Recommended Walk-Around Sequence

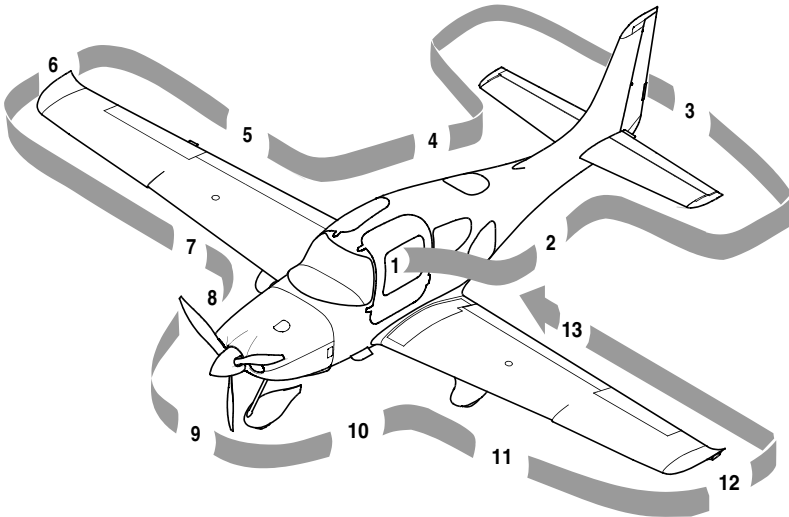

- 1. Cabin
 - a. Required Documents CHECK
 - b. BAT 2 Switch..... ON
 - (1) Verify PFD, GTC 1, and GTC 2 power on.
 - (2) Verify MFD does not power on.
 - c. Essential Bus Voltage 23-25 VOLTS
 - d. BAT 1 Switch..... ON
 - (1) Verify MFD powers on.
 - e. Avionics Cooling Fan..... AUDIBLE
 - f. Fuel Quantity CHECK
 - g. Oxygen Masks/Cannulas and Hoses (if available and req'd) CHECK
CONDITION
 - h. If available and required: Oxygen System (OXY Switch) ON
 - (1) Quantity...VERIFY ADEQUATE SUPPLY FOR FLIGHT WITH
RESERVE
 - (2) Flow..... CHECK FLOWMETER ON ALL DELIVERY DEVICES
 - i. Oxygen System (OXY Switch) OFF
 - j. Flaps..... 100%
 - k. Lights CHECK OPERATION
 - l. Serials w/o IPS: Stall Warning System Inlet..... UNOBSTRUCTED
 - m. Serials w/o IPS: Stall Warning TEST
 - (1) Test stall warning system by applying suction to the stall warning
system inlet and noting the warning horn sounds.

• NOTE •

Ensure pitot probe cover is removed before turning on.

- n. Probe Heat ON
 - (1) Verify probe is hot.

• WARNING •

Pitot Probe, Lift Transducer Faceplate and Vane will be HOT.

- o. Serials w/ IPS: Lift Transducer Faceplate PERCEPTIBLY HOT

(Continued on next page)

(Continued)

- p. Serials w/ IPS: Lift Transducer Vane..... VERY HOT
(1) Verify Stall Warning audio alert after lifting stall vane with wooden tooth pick or tongue depressor.
 - q. BAT 1 and BAT 2 SwitchesOFF
 - r. Alternate Static Source NORMAL
 - s. Circuit Breakers..... SET
 - t. Fire Extinguisher..... CHARGED AND STOWED
 - u. Emergency Egress Hammer STOWED
 - v. STARTER DISABLE Switch..... ENABLE
2. Left Fuselage
- a. Antennae CONDITION AND ATTACHMENT
 - b. Wing/Fuselage Fairing CHECK
 - c. Baggage Door CLOSED AND SECURE
 - d. Static Port..... CONDITION, CLEAR
 - e. Parachute Cover..... SEALED AND SECURE
3. Empennage
- a. Tiedown Rope REMOVE
 - b. Horizontal and Vertical Stabilizers CONDITION

• NOTE •

Verify tape covering the forward and aft inspection holes located on outboard ends of horizontal stabilizer is installed and securely attached.

- c. Elevator..... CONDITION, MOTION
- d. Elevator Trim Tab..... CONDITION AND SECURITY
- e. Elevator Static Wicks..... CONDITION AND SECURITY
- f. Rudder..... CONDITION, MOTION
- g. Rudder Trim Tab CONDITION AND SECURITY
- h. Rudder Static Wicks CONDITION AND SECURITY
- i. Attachment hinges, bolts, and cotter pins SECURE

(Continued on next page)

(Continued)

- 4. Right Fuselage
 - a. Static Port..... CONDITION, CLEAR
 - b. Wing/Fuselage Fairings CHECK
 - 5. Right Wing Trailing Edge
 - a. Flap and Rub Strips CONDITION AND SECURITY
 - b. Aileron CONDITION, MOTION
 - c. Aileron Trim Tab..... CONDITION AND SECURITY
 - d. Aileron Static Wicks..... CONDITION AND SECURITY
 - e. Aileron Gap Seal CONDITION AND SECURITY
- NOTE •**
- Verify bolt located under the inboard edge of aileron is secured with safety wire.
- f. Hinges, actuation arm, bolts, and cotter pins..... SECURE
6. Right Wing Tip
 - a. Tip..... ATTACHMENT
 - b. Wing Tip Light and Lens..... CONDITION AND SECURITY
 - c. Wing Tip Static Wicks CONDITION AND SECURITY
 - d. Fuel Vent (underside) CLEAR

(Continued on next page)

(Continued)

- 7. Right Forward Wing and Main Gear
 - a. Serials w/o IPS: Stall Warning Port CLEAR
 - b. Leading Edge and Stall StripsCONDITION
 - c. Fuel Cap CHECK FUEL LEVEL AND SECURE
 - d. Fuel Drains (2 underside) SAMPLE
 - e. Wheel Fairings.....SECURITY, ACCUMULATION OF DEBRIS
 - f. TireCONDITION
 - g. Wheel and Brakes FLUID LEAKS, EVIDENCE OF OVERHEATING, GENERAL CONDITION, AND SECURITY
 - h. Chocks and Tiedown RopesREMOVE
- 8. Nose, Right Side
 - a. Vortex GeneratorCONDITION
 - b. Ice Inspection LightCONDITION AND SECURITY
 - c. Cowling ATTACHMENTS SECURE
 - d. Exhaust Pipe CONDITION, SECURITY, AND CLEARANCE

(Continued)

9. Nose Gear, Propeller, and Spinner

• WARNING •

Keep clear of propeller rotation plane. Do not allow others to approach propeller.

- a. Tow Bar..... REMOVE AND STOW
- b. Landing Light (LAND SWITCH)CONDITION
- c. StrutCONDITION
- d. Wheel Fairing.....SECURITY, ACCUMULATION OF DEBRIS
- e. Wheel and TireCONDITION
- f. Propeller.....CONDITION (INDENTATIONS, NICKS, ETC.)
- g. SpinnerCONDITION, SECURITY, AND OIL LEAKS
- h. Air Inlets CLEAR
- i. AlternatorCONDITION

10. Nose, Left Side

• CAUTION •

The engine should not be operated with less than six quarts of oil. Seven quarts (dipstick indication) is recommended for extended flights.

- a. Engine Oil..... CHECK 6-8 QUARTS, LEAKS, CAP AND DOOR SECURE
- b. Ice Inspection Light..... CONDITION AND SECURITY
- c. Cowling.....ATTACHMENTS SECURE
- d. External Power DOOR SECURE
- e. Gascolator (underside) DRAIN FOR 3 SECONDS, SAMPLE
- f. Vortex Generator.....CONDITION
- g. Exhaust Pipe.....CONDITION, SECURITY, AND CLEARANCE

11. Left Main Gear and Forward Wing

- a. Wheel Fairings SECURITY, ACCUMULATION OF DEBRIS
- b. Tire.....CONDITION
- c. Wheel and Brakes FLUID LEAKS, EVIDENCE OF OVERHEATING, GENERAL CONDITION, AND SECURITY

(Continued on next page)

(Continued)

- d. Chocks and Tiedown RopesREMOVE
- e. Fuel Drains (2 underside) SAMPLE
- f. Fuel CapCHECK QUANTITY AND SECURE
- g. Leading Edge and Stall StripsCONDITION

12.Left Wing Tip

- a. Fuel Vent (underside) CLEAR
- b. Pitot Probe CLEAR
- c. Wing Tip Light and LensCONDITION AND SECURITY
- d. Tip ATTACHMENT
- e. Wing Tip Static WicksCONDITION AND SECURITY

13.Left Wing Trailing Edge

• NOTE •

Verify bolt located under the inboard edge of aileron is secured with safety wire.

- a. Hinges, actuation arm, bolts, and cotter pinsSECURE
- b. Aileron Gap SealCONDITION AND SECURITY
- c. Aileron Static WicksCONDITION AND SECURITY
- d. Aileron..... FREEDOM OF MOVEMENT
- e. Flap and Rub Strips.....CONDITION AND SECURITY

Before Engine Start

1. Preflight Inspection COMPLETE
2. Passengers BRIEFED

• NOTE •

Ensure all the passengers have been fully briefed on smoking, the use of the oxygen system, seat belts, doors, emergency exits, egress hammer, and CAPS.

3. Seats and Seat Belts ADJUST AND SECURE

• WARNING •

Crew seats must be locked in position and control handles fully down before flight. Ensure seat belt harnesses are not twisted.

4. Parking Brake AS REQUIRED
5. BAT 1 and BAT 2 Switches ON
6. External Power (If required) CONNECT

Engine Start

If the engine is warm, no priming is required. For the first start of the day and in cold conditions, prime will be necessary.

Weak intermittent firing followed by puffs of black smoke from the exhaust stack indicates over-priming or flooding. Excess fuel can be cleared from the combustion chambers by the following procedure:

- Turn fuel pump off.
- Allow fuel to drain from intake tubes.
- Set the mixture control full lean and the power lever full open.
- Crank the engine through several revolutions with the starter.
- When engine starts, release starter, retard power lever, and slowly advance the mixture control to FULL RICH position.

If the engine is under-primed, especially with a cold soaked engine, it will not fire, and additional priming will be necessary. As soon as the cylinders begin to fire, open the power lever slightly to keep it running. Refer to [Cold Weather Operation](#) in this section or additional information regarding cold weather operations.

(Continued on next page)

(Continued)

• WARNING •

If airplane will be started using external power, keep all personnel and power unit cables well clear of the propeller rotation plane.

1. ALT 1 and ALT 2 Switches..... OFF
2. CAS Messages..... CHECK
3. Strobe Lights (STRB Switch)..... ON
4. Mixture..... FULL RICH
5. Power Lever..... FULL FORWARD
6. Fuel Pump..... PRIME, THEN BOOST

• NOTE •

On first start of the day, especially under cool ambient conditions, holding Fuel Pump switch to PRIME for 2 seconds will improve starting.

7. Propeller Area..... CLEAR
8. Brakes..... HOLD
9. Power Lever..... OPEN ¼ INCH
10. Engine Knob..... BOTH
11. Starter..... ENGAGE

• CAUTION •

Limit cranking to intervals of 10 seconds with a 20-second cooling period between cranks. This will improve battery and contactor life.

12. Power Lever..... RETARD (MAINTAIN 1000 RPM)
13. Oil Pressure..... RISES WITHIN 30 SECONDS OF START

• NOTE •

In cold weather, oil pressure may be slow to rise; shut down if no indication within 60 seconds after start.

14. Mixture..... LEAN UNTIL RPM RISES TO A MAXIMUM VALUE

• NOTE •

Leave the mixture at maximum RPM value during taxi and until run-up.

15. ALT 1 and ALT 2 Switches..... ON
16. Engine Parameters..... MONITOR
17. Avionics Initialization..... ALL INITS COMPLETE
18. CAPS Pin..... REMOVE AND STOW
19. External Power (If applicable)..... DISCONNECT

Before Taxi

When taxiing, directional control is accomplished with rudder deflection and intermittent braking (toe taps) as necessary. Proper braking practices are critical to avoid potential damage to the brakes. Pilots unaccustomed to free casting nose wheel steering may be inclined to “ride” the brakes to maintain constant taxi speeds and use the brakes excessively for steering. Use only as much power as is necessary to achieve forward movement. Deceleration or taxi speed control using brakes but without a reduction in power will result in increased brake temperature. Taxi over loose gravel at low engine speed to avoid damage to the propeller tips.

1. Flaps UP
2. COM and NAV/GPSSET
3. ATIS/ClearanceOBTAIN
4. AltimeterSET
5. TransponderSET
6. Heading/Initial ALTSET
7. Flight ControlsFREE AND CORRECT
8. Lights AS REQUIRED
9. Cabin Heat/Defrost AS REQUIRED
10. Fuel Selector SWITCH TANK
11. Autopilot ENGAGE (PRESS AP BUTTON)
12. AP DISC Button PRESS
13. TrimSET
14. Parking Brake RELEASE
15. Brakes CHECK

Before Takeoff

During cold weather operations, the engine should be properly warmed up before takeoff. In most cases this is accomplished when the oil temperature has reached at least 100 °F (38 °C). In warm or hot weather, precautions should be taken to avoid overheating during prolonged ground engine operation. Additionally, long periods of idling may cause fouled spark plugs.

• **WARNING** •

Do not takeoff with frost, ice, snow, or other contamination on the fuselage, wing, stabilizers, and control surfaces.

Allow a cooling period following a high-energy braking event. High-energy braking can include an aborted takeoff or the equivalent energy required for a Maximum Gross Weight full-stop from 70 knots in less than 1000 feet.

• **NOTE** •

If IPS installed and icing conditions are anticipated immediately after takeoff, perform additional procedures in Serials w/ IPS: Icing Conditions.

1. Doors LATCHED
2. Center Console Switch Panel SET
3. Air Conditioner RECIRC DISABLED

• **NOTE** •

If Air Conditioner is ON for takeoff roll, see Section 5, [Takeoff Weight 3600 lb \(1633 kg\)](#) for takeoff distance adjustment. No takeoff distance adjustment is necessary if system remains OFF for takeoff.

4. Fuel Quantity.....CONFIRM
5. Fuel Selector FULLER TANK, CLOSE COVER FOR AUTOMATIC OPERATION
6. Fuel Pump..... BOOST
7. Mixture.....FULL RICH
8. Flaps.....SET 50% AND CHECK
9. Brakes HOLD

(Continued on next page)

(Continued)

- 10. Power Lever 1700 RPM
- 11. Alternator CHECK
 - a. Probe Heat ON
 - b. Landing Lights (LAND Switch) ON
- 12. Voltage CHECK
- 13. Probe Heat AS REQUIRED

• NOTE •

Pitot Heat should be turned ON for flight into IMC, flight into visible moisture, or whenever ambient temperatures are 41 °F (5 °C) or less.

- 14. Landing Light (LAND Switch) AS REQUIRED
- 15. Magnetos CHECK LEFT AND RIGHT
 - a. Engine Knob R, NOTE RPM, THEN BOTH
 - b. Engine Knob L, NOTE RPM, THEN BOTH

• NOTE •

RPM drop must not exceed 150 RPM for either magneto. RPM differential must not exceed 75 RPM between magnetos. If there is a doubt concerning operation of the ignition system, RPM checks at higher engine speeds will usually confirm whether a deficiency exists.

An absence of RPM drop may indicate faulty grounding of one side of the ignition system or magneto timing set in advance of the specified setting.

- 16. Engine Parameters CHECK
- 17. Power Lever IDLE

• NOTE •

Verify smooth engine operation at idle speed of 600 to 750 RPM.

- 18. Power Lever 1000 RPM
- 19. Trim SET TAKEOFF
- 20. CAS Messages CHECK

Maximum Power Fuel Flow

Target fuel flow is indicated by the top of a dynamically calculated green arc displayed on the fuel gauge. Target fuel flow should be maintained at the top of this arc by use of the mixture lever.

The fuel flow values in the table below were demonstrated to obtain the takeoff and climb performance presented in Section 5.

Pressure Altitude	Target Fuel Flow	Pressure Altitude	Target Fuel Flow	Pressure Altitude	Target Fuel Flow
0	27.1	7000	21.4	14,000	17.5
1000	26.2	8000	20.5	15,000	16.9
2000	25.1	9000	19.9	16,000	16.7
3000	24.3	10,000	19.5	17,000	16.2
4000	23.6	11,000	18.8	17,500	16.1
5000	22.8	12,000	18.4		
6000	22.1	13,000	17.9		

• NOTE •

Excessively rich mixture will occur if the Mixture control is set to FULL RICH above 7500 feet density altitude.

Takeoff

Power Check: Check full-throttle engine operation early in takeoff run. The engine should run smoothly and turn approximately 2700 RPM. Verify all engine parameters are within normal operating ranges. Discontinue takeoff at any sign of rough operation or sluggish acceleration. Make a thorough full-throttle static run-up before attempting another takeoff.

For takeoff over a gravel surface, advance Power Lever slowly. This allows the airplane to start rolling before high RPM is developed, and gravel will be blown behind the propeller rather than pulled into it.

Flap Settings: All takeoffs are accomplished with flaps set at 50%.

Takeoff Techniques: Soft or rough field takeoffs are performed with 50% flaps by lifting the airplane off the ground as soon as practical in a tail-low attitude. If no obstacles are ahead, the airplane should be leveled off immediately to accelerate to a higher climb speed.

Maximum demonstrated crosswind is 20 knots. With the ailerons fully deflected into the wind, accelerate the airplane to a speed slightly higher than normal while decreasing the aileron deflection as speed increases then - with authority - rotate to prevent possibly settling back to the runway while drifting. When clear of the ground, make a coordinated turn into the wind to correct for drift.

• NOTE •

Fuel BOOST should be left ON during takeoff and for climb as required for vapor suppression with hot or warm fuel.

Normal Takeoff

1. BrakesRELEASE (STEER WITH RUDDER ONLY)
2. Power Lever FULL FORWARD
3. MixtureSET TO TOP OF GREEN ARC
4. Engine ParametersCHECK WITHIN GREEN ARCS
5. Elevator ControlROTATE SMOOTHLY AT 73-76 KIAS
6. Flaps UP AT 90 KIAS, CLEAR OF OBSTACLES

Short Field Takeoff

1. BrakesHOLD
2. Power Lever FULL FORWARD
3. Mixture SET TO TOP OF GREEN ARC
4. Engine ParametersCHECK WITHIN GREEN ARCS
5. BrakesRELEASE (STEER WITH RUDDER ONLY)
6. Elevator ControlROTATE SMOOTHLY AT 73 KIAS
7. Flaps UP AT 84 KIAS, CLEAR OF OBSTACLES

Climb

Normal climbs are performed flaps UP (0%) and full power at speeds 5 to 10 knots higher than best rate-of-climb speeds. These higher speeds give the best combination of performance, visibility and engine cooling. For maximum rate of climb, use the best rate-of-climb speeds shown in the rate-of-climb chart in Section 5. If an obstruction dictates the use of a steep climb angle, the best angle-of-climb speed should be used. Climbs at speeds lower than the best rate-of-climb speed should be of short duration to avoid engine-cooling problems.

Serials w/ Hartzell Propeller w/ Composite Blades: Aircraft requires higher climb speeds to facilitate engine cooling. For climb refer to the following procedure, but use Serials w/ Hartzell Propeller w/ Composite Blades performance data in Section 05.

1. Climb Power..... SET
2. Flaps..... VERIFY UP
3. Mixture..... LEAN AS REQUIRED FOR ALTITUDE
4. Engine Parameters..... CHECK
5. Fuel Pump.....BOOST

• NOTE •

The fuel pump is used for vapor suppression during climb. It is also recommended that the fuel pump be left on after leveling off for 30 minutes following a climb and anytime fuel flow or EGT anomalies occur.

Verify mixture is in accordance with fuel flow placard or green arc on fuel flow gauge.

Cruise

Normal cruising is performed between 55% and 85% power. The engine power setting and corresponding fuel consumption for various altitudes and temperatures can be determined by using the cruise data in Section 5.

The selection of cruise altitude is made based on the most favorable wind conditions and the desired power settings. These significant factors should be considered on every trip to reduce fuel consumption.

• NOTE •

Serials w/ IPS: If in icing encounter or conditions, perform additional procedures in Serials w/ IPS Icing Conditions.

- 1. Fuel Pump AS REQUIRED

• NOTE •

The Fuel Pump may be used for vapor suppression during cruise.

The Fuel Pump should be set to BOOST during maneuvering flight (flight training maneuvers, chandelles, stalls, etc.).

- 2. Cruise PowerSET
- 3. Mixture LEAN AS REQUIRED
- 4. Engine Parameters MONITOR
- 5. Fuel Quantity and Balance MONITOR

Cruise Leaning

Exhaust gas temperature (EGT) may be used as an aid for mixture leaning in cruise flight.

• NOTE •

For “Best Power” use 75% power or less. For “Best Economy” use 65% power or less.


To adjust the mixture, lean to establish the peak EGT as a reference point and then adjust the mixture by the desired increment based on the following table:

Mixture Description	Exhaust Gas Temperature
Best Power	75 °F Rich Of Peak EGT
Best Economy	50 °F Lean Of Peak EGT

Under some conditions, engine roughness may occur while operating at best economy. If this occurs, enrich mixture as required to smooth engine operation. Any change in altitude or Power Lever position will require a recheck of EGT indication.

Figure 4-2: Fuel Flow Reference For Leaning

Fuel flow reference for leaning

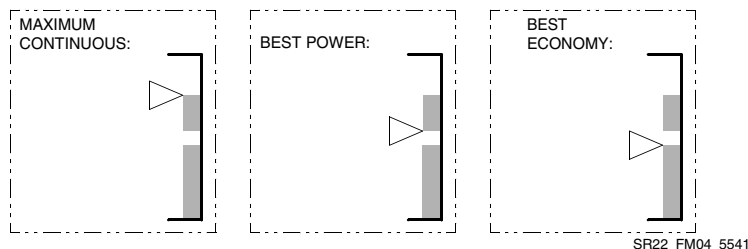

The top of the upper green band is the Maximum Power Fuel Flow. The bottom of the upper green band is the approximate reference fuel flow for best power. The top of the lower green band is the approximate fuel flow for best economy. These references are advisory guidance computed using RPM, Manifold Pressure, and Manifold Air Temperature based on the theoretical air fuel ratio associated with best power or best economy. Power setting should be made using reference to lean of peak or rich of peak in accordance with the Continental Engine Operator's and Maintenance Manual.

Descent

1. AltimeterSET
2. Landing Lights (LAND Switch) ON
3. Fuel Quantity CHECK
4. Mixture AS REQUIRED
5. Seats and Seat Belts..... SECURE
6. Brake Pressure..... CHECK

Before Landing

1. Fuel Pump BOOST
2. Mixture AS REQUIRED
3. Flaps AS REQUIRED
4. Autopilot..... AS REQUIRED

Landing

• CAUTION •

Landings should be made with full flaps. Landings with less than full flaps are recommended only if the flaps fail to deploy or to extend the aircraft's glide distance due to engine malfunction. Landings with flaps at 50% or 0%: power should be used to achieve a normal glide path and low descent rate. Flare should be minimized. Limit flap deflections to 50% if ice contaminated

• NOTE •

Serials w/ IPS: If icing conditions will exist for approach and/or landing perform additional procedures in Serials w/ IPS: Icing Conditions.

Normal Landing

1. Flaps..... 100%
2. Airspeed 80 - 85 KIAS
3. Power Lever AS REQUIRED
After touchdown:
4. Brakes AS REQUIRED

Normal landings are made with full flaps with power on or off. Surface winds and air turbulence are usually the primary factors in determining the most comfortable approach speeds.

Actual touchdown should be made with power off and on the main wheels first to reduce the landing speed and subsequent need for braking. Gently lower the nose wheel to the runway after airplane speed has diminished. This is especially important for rough or soft field landings.

Short Field Landing

1. Flaps..... 100%
2. Airspeed 79 KIAS
3. Power Lever AS REQUIRED
After clear of obstacles:
4. Power Lever REDUCE TO IDLE
After touchdown:
5. Brakes MAXIMUM PILOT EFFORT W/O SKIDDING

For a short field landing in smooth air conditions, make an approach at 79 KIAS with full flaps using enough power to control the glide path (slightly higher approach speeds should be used under turbulent air conditions).

After all approach obstacles are cleared, progressively reduce power to reach idle just before touchdown and maintain the approach speed by lowering the nose of the airplane.

Touchdown should be made power-off and on the main wheels first. Immediately after touchdown, lower the nose wheel and apply braking as required. For maximum brake effectiveness, retract the flaps, hold the side stick full back, and apply maximum brake pressure without skidding.

Crosswind Landing

Normal crosswind landings are made with full flaps. Avoid prolonged slips. After touchdown, hold a straight course with rudder and brakes as required.

The maximum allowable crosswind velocity is dependent upon pilot capability as well as aircraft limitations. Operation in direct crosswinds of 21 knots has been demonstrated.

Balked Landing/Go-Around

In a balked landing (go-around) climb, apply full power, then reduce the flap setting to 50%. If obstacles must be cleared during the go-around, climb at the best angle of climb with 50% flaps. After clearing any obstacles, retract the flaps and accelerate to the normal flaps-up climb speed.

1. Power Lever FULL FORWARD
2. TO/GA Button PRESS
3. Flaps 50%
4. Airspeed 80 - 85 KIAS
After clear of obstacles:
5. Flaps UP

After Landing

1. Power Lever 1000 RPM
2. Fuel Pump OFF
3. Mixture LEAN TO OBTAIN MAXIMUM IDLE RPM
4. Flaps UP
5. Lights AS REQUIRED
6. Probe Heat OFF

• NOTE •

As the airplane slows, the rudder becomes less effective and taxiing is accomplished using differential braking.

Shutdown

1. Power Lever IDLE
2. Engine Knob CYCLE

• CAUTION •

Note that the engine hesitates as the switch cycles through the “OFF” position. If the engine does not hesitate, one or both magnetos are not grounded. Prominently mark the propeller as being “Hot,” and contact maintenance personnel immediately.

3. Mixture CUTOFF
4. All Switches OFF
5. Engine Knob OFF
6. ELT TRANSMIT LIGHT OUT

• NOTE •

After a hard landing, the ELT may activate. If this is suspected, press the RESET button.

7. CAPS Pin REPLACE
8. Chocks, Tie-downs, Pitot Covers AS REQUIRED

• NOTE •

Serials w/ IPS: If IPS was used during flight perform additional procedures in Icing Conditions.

Stalls

Aircraft stall characteristics are conventional. Power-off stalls may be accompanied by a slight nose bobbing if full aft stick is held. Power-on stalls are marked by a high sink rate at full aft stick. Power-off stall speeds at maximum weight for both forward and aft CG positions are presented in Section 5 - [Stall Speeds](#).

When practicing stalls at altitude, as the airspeed is slowly reduced, you will notice a slight airframe buffet, hear the stall warning horn sound, and the “stall, stall, stall” aural alert between 5 and 10 knots before the stall, feel a stick shaker vibration in the side stick, and see the Crew Alerting System display a STALL Warning annunciation. Normally, the stall is marked by a gentle nose drop and the wings can easily be held level or in the bank with coordinated use of the ailerons and rudder. Upon stall warning in flight, recovery is accomplished by immediately reducing back pressure to reduce the angle of attack and to maintain safe airspeed, adding power as required and rolling wings level with coordinated use of the controls.

• **WARNING** •

Extreme care must be taken to avoid uncoordinated, accelerated or abused control inputs when close to the stall, especially when close to the ground.

• **NOTE** •

If Stall Warning is inoperative, Autopilot Underspeed Protection will not be provided in Altitude Critical Modes (ALT, GS, GP, TO and GA), and Low Speed ESP will not be available.

Environmental Conditions

Cold Weather Operation

• CAUTION •

An engine that has been superficially warmed, may start and appear to run satisfactorily, but can be damaged from lack of lubrication due to the congealed oil blocking proper oil flow through the engine. The amount of damage will vary and may not become evident for many hours. However, the engine may be severely damaged and may fail shortly following application of high power. Proper procedures require thorough application of preheat to all parts of the engine. Hot air must be applied directly to the oil sump and external oil lines as well as the cylinders, air intake and oil cooler. Because excessively hot air can damage non-metallic components such as composite parts, seals, hoses, and drive belts, do not attempt to hasten the preheat process.

Starting

If the engine has been cold soaked, it is recommended that the propeller be pulled through by hand several times to break loose or limber the oil. This procedure will reduce power draw on the battery if a battery start is made.

When the engine has been exposed to temperatures at or below 20 °F (-7 °C) for a period of two hours or more, the use of an external pre-heater and external power is recommended. Failure to properly preheat a cold-soaked engine may result in oil congealing within the engine, oil hoses, and oil cooler with subsequent loss of oil flow, possible internal damage to the engine, and subsequent engine failure.

If the engine does not start during the first few attempts, or if engine firing diminishes in strength, the spark plugs have probably frosted over. Preheat must be used before another start is attempted.

• NOTE •

When the oil temperature has reached 100 °F (38 °C) and oil pressure does not exceed 70 psi at 2500 RPM, the engine has been warmed sufficiently to accept full rated power.

(Continued on next page.)

(Continued)

1. Engine Knob OFF

• WARNING •

Use caution when pulling the propeller through by hand. Make sure starter button is OFF and then act as if the engine will start.

2. Propeller HAND TURN SEVERAL ROTATIONS
3. Mixture FULL RICH
4. Power Lever FULL FORWARD
5. Fuel Pump PRIME, THEN BOOST

• NOTE •

In temperatures down to 20 °F, hold Fuel Pump switch to PRIME for 15 seconds prior to starting.

6. Propeller Area CLEAR
7. Power Lever OPEN ¼ INCH
8. Engine Knob BOTH

• CAUTION •

Limit cranking to intervals of 10 seconds with a 20 second cooling period between cranks.

9. Starter ENGAGE
10. Power Lever RETARD (MAINTAIN 1000 RPM)
11. Oil Pressure CHECK
12. ALT 1 and ALT 2 Switches ON
13. Engine Parameters MONITOR
14. External Power (If applicable) DISCONNECT
15. Strobe Lights (STRB Switch) ON

Hot Weather Operation

Avoid prolonged engine operation on the ground. Fuel BOOST must be ON for engine start and takeoff, and should be ON during climb for vapor suppression which could occur under hot ambient conditions or after extended idle.

Ground Operation of Air Conditioning System (Optional)

• NOTE •

To facilitate faster cabin cooling, prior to engine start leave the cabin doors open for a short time to allow hot air to escape cabin.

1. Control Panel..... SELECT DESIRED MODE AND TEMPERATURE
2. Voltage.....MONITOR

• NOTE •

Decrease electrical load if battery discharge is noted.

3. CAS Messages CHECK
 - a) Verify caution not illuminated and positive amps indication.
4. Engine Parameters CHECK

Extended Ground Operation

For airplanes that experience prolonged engine operation on the ground, the following procedure is recommended to reduce potential for spark plug lead fouling and lead build-up on engine valve guides.

1. Set throttle to 1200 RPM.
2. Lean the mixture for maximum RPM.
3. Reduce throttle to RPM for continued ground operations (800 - 1000 RPM is recommended).

• WARNING •

Except as required for high elevation airports, the mixture lever must be returned to the full forward/rich position before take-off.

• NOTE •

If further ground operations will be required after the [Before Takeoff](#) Checklist is completed, lean the mixture again (as described above) until ready for the [Takeoff](#) Checklist.

Noise Characteristics/Abatement

The following suggested procedures minimize environmental noise when operating the aircraft.

• NOTE •

Do not follow these noise abatement procedures where they conflict with Air Traffic Control clearances or instructions, weather considerations, or wherever they would reduce safety.

1. When operating VFR over noise-sensitive areas, such as outdoor events, parks, and recreational areas, fly not less than 2000 feet above the surface even though flight at a lower level may be allowed.
2. For departure from or approach to an airport, avoid prolonged flight at low altitude near noise-sensitive areas.

Serials w/ IPS: Icing Conditions

• WARNING •

Holding in icing conditions for longer than 45 minutes may reduce margins and could result in inadequate handling and control characteristics.

Flight into known icing conditions is not advised if porous panels do not fully "wet-out" prior to entering icing conditions, or if IPS CAS messages persist.

• CAUTION •

Prolonged operation of the IPS in clear air, above 15,000 feet MSL and temperatures less than -4 °F (-20 °C) can result in "flash" evaporation of water and alcohol from the IPS fluid. This evaporation results in a glycol rich fluid that could become "gel" like on the wing surface until aircraft enters precipitation or warmer temperatures.

Limit ground operations of Lift Transducer Heat (PROBE HEAT) to 45 seconds. Operation of Lift Transducer Heat in excess of 45 seconds while on the ground may cause excessive temperature on the lift transducer faceplate and surrounding wing skin.

• NOTE •

The IPS is most effective when operated as an ice protection system to prevent ice accretions on protected surfaces. For optimal performance, the system should be primed on the ground to verify all protected surfaces wet-out fully. The system should then be activated prior to entering icing conditions to confirm the protected surfaces wet-out fully before ice accretion begins.

The IPS is approved for operation with ice protection fluid that has a very temperature-dependent viscosity characteristic. As the temperature of the fluid rises above freezing (32 °F / 0 °C), the fluid becomes much less viscous (thins) and passes through the porous membrane of the panels with less resistance (pressure drop). This decrease in pressure drop reduces the pressure in the panel reservoir which may not be adequate to wet-out the entire panel if the Preflight Inspection is performed at warmer temperatures.

Increasing the IPS flow rate (MAX vs. HIGH or HIGH w/ BKUP vs. HIGH) will increase the arterial pressure of the system which promotes the complete wet-out of the porous panels.


Maximum Operating Time

Use of the windshield de-ice system will reduce the maximum available operating time of the system.

Normal Flow Duration150 Minutes (3.2 gph)
High Flow Duration75 Minutes (6.4 gph)
Maximum Flow Duration37.5 Minutes (12.8 gph)

Endurance (at minimum dispatch quantity):

NORM.....90 Minutes
HIGH.....45 Minutes
MAX.....22.5 Minutes

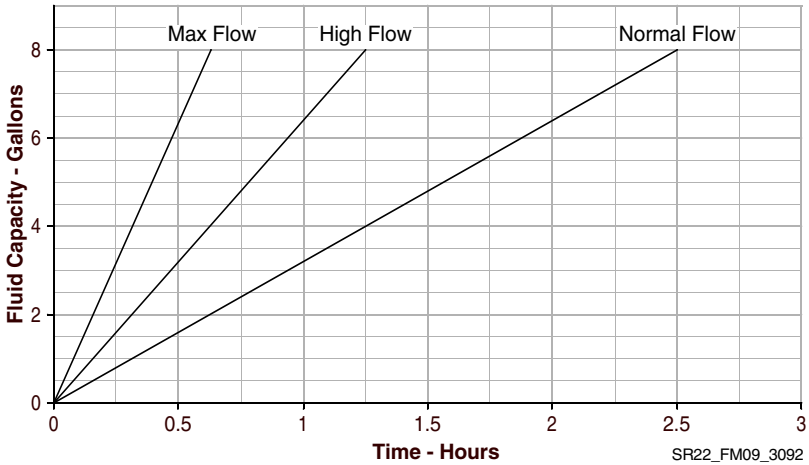

Preflight Inspection

• **WARNING** •

In cold weather, remove all frost (polished or not), ice, snow, or slush from fuselage, wing, stabilizers, control surfaces, and engine inlet. Ensure that control surfaces are free of internal ice or debris. Check that wheels are free of snow and ice accumulation.

Failure to comply may result in significant aircraft damage, loss of aircraft, and/or loss of life.

1. Cabin

- a. Circuit Breakers..... SET
- b. BAT 1 Switch ON
- c. Cabin Speaker..... ON
- d. Cabin Doors..... CLOSE
- e. W/S Push-Button PRESS
(1) Verify evidence of deicing fluid from spray nozzles.
- f. BKUP Switch ON
(1) Metering Pump..... VERIFY CONTINUOUSLY ON
(2) Deicing Fluid and Endurance Indications..... CHECK
- g. BKUP Switch OFF
- h. ICE PROTECT System Switch..... ON
- i. ICE PROTECT Mode Switch..... NORM
(1) Metering Pump..... VERIFY 30 S ON, 90 S OFF
(2) Deicing Fluid and Endurance Indications..... CHECK
- j. ICE PROTECT Mode Switch..... HIGH
(1) Metering Pump..... VERIFY CONTINUOUSLY ON
(2) Deicing Fluid and Endurance Indications..... CHECK
- k. ICE Inspection Lights Switch ON
(1) Verify LH and RH Operation.
- l. Fluid Quantity VERIFY 5 GALLON MINIMUM
- m. ICE PROTECT System Switch..... OFF

(Continued on next page)

(Continued)

- 2. Empennage
 - a. Stabilizers Porous Panels CONDITION AND SECURITY
 - (1) Verify evidence of deicing fluid along length of panels and elevator horns.
 - 3. Right Wing Forward and Main Gear
 - a. IPS Fluid Tank VERIFY DESIRED QUANTITY
 - (1) Filler Cap CONDITION AND SECURITY
 - (2) Fluid Vent (underside wing) UNOBSTRUCTED
 - b. Porous Panels CONDITION AND SECURITY
 - (1) Verify evidence of deicing fluid along length of panels.
- WARNING •**
- Lift Transducer Faceplate and Vane may be HOT.**
- c. Lift Transducer Faceplate PERCEPTIBLY HOT
 - d. Lift Transducer Vane VERY HOT
 - (1) Verify Stall Warning audio alert after lifting stall vane with wooden tooth pick or tongue depressor.
4. Nose, Right Side
 - a. Ice Inspection Light CONDITION AND SECURITY
5. Nose Gear, Propeller, Spinner
 - a. Slinger Ring EVIDENCE OF DEICING FLUID
6. Nose, Left Side
 - a. Ice Inspection Light CONDITION AND SECURITY
 - b. Windshield Spray Nozzles CONDITION AND SECURITY
7. Left Wing Forward and Main Gear
 - a. IPS Fluid Tank VERIFY DESIRED QUANTITY
 - (1) Filler Cap CONDITION AND SECURITY
 - (2) Fluid Vent (underside wing) UNOBSTRUCTED
 - b. Porous Panels CONDITION AND SECURITY
 - (1) Verify evidence of deicing fluid along length of panels.
8. Cabin
 - a. BAT 1 Switch OFF
 - b. Cabin Speaker OFF

Ice Formation Determination

Typically, a leading edge with a small radius will collect ice more quickly than a leading edge with a large radius. To help monitor possible ice accumulation, a thin metal tab is attached to the outboard end of the RH and LH stall strips. In some icing conditions this tab may be the first place that airframe ice accretion is noticeable. Additionally, refer to other areas of the aircraft, such as the horizontal tail and lower windscreen, to aid in determining if ice is accreting to the aircraft.

Before Takeoff

If icing conditions are anticipated immediately after takeoff:

1. ICE PROTECT System Switch ON
2. ICE PROTECT Mode Switch HIGH
3. Probe Heat..... ON
4. Temperature Selector..... HOT
5. Vent SelectorDEFROST
6. Airflow Selector MAXIMUM
7. Panel Vents CLOSED
8. Ice Inspection Lights..... AS REQUIRED
9. Verify airframe is free of contamination immediately before takeoff.

In Flight

If Inadvertent Icing Encounter or Icing Conditions Exist

1. Probe Heat VERIFY ON
2. ICE PROTECT System Switch..... ON
3. ICE PROTECT Mode SwitchNORM
4. W/S Push Button PRESS (AS REQ'D)
5. Ice Inspection Lights AS REQUIRED
6. Monitor ice accumulation.
 - ◆ If ice accretions persist on protected surfaces following each cycle:
 - a. ICE PROTECT Mode Switch HIGH
 - ◆ If ice continues accumulating on protected surfaces:
 - a. ICE PROTECT Mode Push Button MAX
 - ◆ If ice accretions do not shed from protected surfaces:
 - a. BKUP Switch..... ON
 - b. W/S Push Button PRESS AS REQUIRED
 - c. Perform Ice Protection System Failure/ Excessive Ice Accumulation.
 - d. Airspeed MAINTAIN 95-177 KIAS AND LESS THAN 204 KTAS

While in Icing Conditions

1. Flaps..... UP
2. Ice Inspection Lights AS REQUIRED
3. Temperature SelectorHOT
4. Vent Selector..... DEFROST
5. Airflow Selector.....MAXIMUM
6. Panel Vents.....CLOSED
7. Fluid Quantity and Endurance MONITOR
 - a. Ensure adequate quantity to complete flight.

After Leaving Icing Conditions

1. IPS.....OFF
2. Ice Inspection Lights.....AS REQUIRED
3. Temperature Selector.....AS REQUIRED
4. Vent Selector.....AS REQUIRED
5. Airflow Selector.....AS REQUIRED
6. Panel Vents CLOSED
7. W/S Push Button.....PRESS AS REQUIRED

Cruise

During icing encounters in cruise, increase engine power to maintain cruise speed as ice accumulates on the unprotected areas and causes the aircraft to slow down.

The autopilot may be used in icing conditions. However, every 30 minutes the autopilot should be disconnected to detect any out-of-trim conditions caused by ice buildup. If significant out-of-trim or other anomalous conditions are detected, the autopilot should remain off for the remainder of the icing encounter.

When disconnecting the autopilot with ice accretions on the airplane, the pilot should be alert for out-of-trim forces.

Approach and Landing

Recommended Holding Airspeed..... 120 KIAS

If Icing Conditions Exist:

1. ICE PROTECT System Switch..... ON
2. ICE PROTECT Mode Switch HIGH
3. Monitor ice accumulation.
 - ◆ If ice continues accumulating on protected surfaces:
 - a. ICE PROTECT Mode Push Button..... MAX
 - ◆ If ice accretions do not shed from protected surfaces:
 - a. BKUP Switch..... ON
 - b. Perform Ice Protection System Failure/ Excessive Ice Accumulation.
4. W/S Push Button PRESS (AS REQ'D)

• CAUTION •

To prevent an obstructed view due to residual deicing fluid on windshield, do not operate windshield IPS within 30 seconds of landing.

5. Ice Inspection Lights AS REQUIRED
6. Flaps..... 50%
7. AirspeedMINIMUM OF 95 KIAS
8. Airspeed on Short Final 88 KIAS

After Landing and Shutdown

1. Probe Heat OFF
2. ICE PROTECT System Switch..... OFF
3. BKUP Switch OFF
4. Ice Inspection Lights OFF

• NOTE •

When the IPS has been used, avoid touching the airframe structure or windshield as they will be partially covered with deicing fluid. Clean the deicing fluid from the windshield and the porous panels as described in Section 8, Handling, Service, & Maintenance.

Intentionally Left Blank

Section 5: Performance Data

Table of Contents

Introduction.....	3
Standard Charts	3
Associated Conditions Affecting Performance	3
Temperature Conversion.....	4
OAT for International Standard Atmosphere (ISA) Condition.....	5
Pressure Conversion - Inches of Mercury to Millibars	6
Fuel Quantity Conversion - U.S. Gallons to Liters	7
Weight Conversion - Pounds to Kilograms.....	8
Distance Conversion: Feet to Meters	9
Length Conversion: Inches to Centimeters	10
Airspeed Calibration	11
Normal Static Source	11
Alternate Static Source.....	12
Altitude Correction	13
Normal Static Source: Primary Flight Display.....	13
Normal Static Source: Standby Altimeter	14
Alternate Static Source: Primary Flight Display.....	15
Alternate Static Source: Standby Altimeter	16
Stall Speeds	17
Serials w/ IPS: Stall Speeds with Ice Accumulation	18
Wind Components.....	19
Takeoff Distance	20
Takeoff Weight 3600 lb (1633 kg)	20
Takeoff Distance: 2900 lb (1315 kg)	22
Takeoff Climb Gradient	24
Takeoff Rate of Climb.....	25
Enroute Climb.....	26
Enroute Climb Gradient.....	26
Enroute Rate Of Climb	27
Enroute Climb Gradient w/ Ice Accumulation	29
Enroute Rate Of Climb w/ Ice Accumulation - Serials w/ IPS.....	30
Enroute Climb Gradient - Serials w/ Hartzell Propeller w/ Composite Blades	31
Enroute Rate of Climb - Serials w/ Hartzell Propeller w/ Composite Blades	32
Enroute Rate of Climb Vs Density Altitude.....	33

Time, Fuel, & Distance to Climb	34
Time, Fuel, & Distance to Climb	34
Time, Fuel, & Distance to Climb w/ Ice Accumulation	35
Cruise Performance.....	36
Cruise Performance.....	36
Cruise Performance w/ Ice Accumulation - Serials w/ IPS	39
Range / Endurance Profile	41
Range / Endurance Profile	41
Range / Endurance: Full Power Climb w/ Ice Accumulation	44
Balked Landing.....	47
Balked Landing Climb Gradient.....	47
Balked Landing Rate of Climb	48
Balked Landing Climb Gradient w/ Ice Accumulation	49
Balked Landing Rate of Climb w/ Ice Accumulation	50
Landing Distance.....	51
Landing Distance - 100% Flaps.....	51
Landing Distance Table - Flaps 100%.....	52
Landing Distance - 50% Flaps.....	53
Landing Distance Table - Flaps 50%.....	54
Landing Distance - Flaps UP	55
Landing Distance Table - Flaps 0%.....	56
Landing Distance w/ Ice Accumulation - 50% Flaps.....	57
Landing Distance Table - Flaps 50% w/ Ice Accumulation.....	58

Introduction

Performance data in this section are presented for operational planning so that you will know what performance to expect from the airplane under various ambient and field conditions. Performance data are presented for takeoff, climb, and cruise (including range & endurance).

All data based on published normal procedures.

Standard Charts

Associated Conditions Affecting Performance

Computed performance data in this section are based upon data derived from actual flight testing with the airplane and engine in good condition and using average piloting techniques. Unless specifically noted in the “Conditions” notes presented with each table, ambient conditions are for a standard day. Flap position as well as thrust setting technique is similarly noted with each table.

The charts in this section provide data over temperature ranges as specified on the chart. If ambient temperature is below the chart value, use the lowest temperature shown to compute performance. This will result in more conservative performance calculations. If ambient temperature is above the chart value, use caution as performance degrades rapidly at higher temperatures.

Serials w/ optional Air Conditioning System: Brake Horsepower is reduced by approximately 6 BHP.

Serials w/ IPS: Airplane stall speeds and takeoff/climb/glide/landing performance without ice accumulation are unchanged with the installation of the Ice Protection System. Significant climb and cruise performance degradation, range reduction, as well as buffet and stall speed increase can be expected if ice accumulates on the airframe. Residual ice on the protected areas and ice accumulation on the unprotected areas of the airplane can cause noticeable performance losses and stall speed increases even with IPS operating.

RELATED LINKS:

[Refer to “Table 2: Meteorological Terminology” in Section 1: General.](#)

Temperature Conversion

Temp to Convert °C or °F			Temp to Convert °C or °F			Temp to Convert °C or °F		
°C	<>	°F	°C	<>	°F	°C	<>	°F
-50	-58	-72	-17	2	36	17	62	144
-49	-56	-69	-16	4	39	18	64	147
-48	-54	-65	-14	6	43	19	66	151
-47	-52	-62	-13	8	46	20	68	154
-46	-50	-58	-12	10	50	21	70	158
-44	-48	-54	-11	12	54	22	72	162
-43	-46	-51	-10	14	57	23	74	165
-42	-44	-47	-9	16	61	24	76	169
-41	-42	-44	-8	18	64	26	78	172
-40	-40	-40	-7	20	68	27	80	176
-39	-38	-36	-6	22	72	28	82	180
-38	-36	-33	-4	24	75	29	84	183
-37	-34	-29	-3	26	79	30	86	187
-36	-32	-26	-2	28	82	31	88	190
-34	-30	-22	-1	30	86	32	90	194
-33	-28	-18	0	32	90	33	92	198
-32	-26	-15	1	34	93	34	94	201
-31	-24	-11	2	36	97	36	96	205
-30	-22	-8	3	38	100	37	98	208
-29	-20	-4	4	40	104	38	100	212
-28	-18	0	6	42	108	39	102	216
-27	-16	3	7	44	111	40	104	219
-26	-14	7	8	46	115	41	106	223
-24	-12	10	9	48	118	42	108	226
-23	-10	14	10	50	122	43	110	230
-22	-8	18	11	52	126	44	112	234
-21	-6	21	12	54	129	46	114	237
-20	-4	25	13	56	133	47	116	241
-19	-2	28	14	58	136	48	118	244
-18	0	32	16	60	140	49	120	248

OAT for International Standard Atmosphere (ISA) Condition

Press Alt FT	ISA -30 °C		ISA -15 °C		ISA		ISA +15 °C		ISA +30 °C	
	°C	°F	°C	°F	°C	°F	°C	°F	°C	°F
SL	-15	5	0	32	15	59	30	86	45	113
1000	-17	1	-2	29	13	56	28	83	43	110
2000	-19	-2	-4	25	11	52	26	79	41	106
3000	-21	-5	-6	22	9	49	24	76	39	103
4000	-23	-9	-8	18	7	45	22	72	37	99
5000	-25	-13	-10	14	5	41	20	68	35	95
6000	-27	-16	-12	11	3	38	18	65	33	92
7000	-29	-20	-14	7	1	34	16	61	31	88
8000	-31	-23	-16	4	-1	31	14	58	29	85
9000	-33	-27	-18	0	-3	27	12	54	27	81
10,000	-35	-30	-20	-3	-5	24	10	51	25	78
11,000	-37	-34	-22	-7	-7	20	8	47	23	74
12,000	-39	-38	-24	-11	-9	16	6	43	21	70
13,000	-41	-41	-26	-14	-11	13	4	40	19	67
14,000	-43	-45	-28	-18	-13	9	2	36	17	63
15,000	-45	-48	-30	-21	-15	6	0	33	15	60
16,000	-47	-52	-32	-25	-17	2	-2	29	13	56
17,000	-49	-55	-34	-28	-19	-1	-4	26	11	53
17,500	-50	-57	-35	-30	-20	-3	-5	24	10	51

Pressure Conversion - Inches of Mercury to Millibars

Inches Of Mercury	Millibars	Inches Of Mercury	Millibars
28.0	948	29.6	1002
28.1	951	29.7	1006
28.2	955	29.8	1009
28.3	958	29.9	1012
28.4	962	30.0	1016
28.5	965	30.1	1019
28.6	968	30.2	1023
28.7	972	30.3	1026
28.8	975	30.4	1029
28.9	979	30.5	1033
29.0	982	30.6	1036
29.1	985	30.7	1040
29.2	989	30.8	1043
29.3	992	30.9	1046
29.4	995	31.0	1050
29.5	999		

Fuel Quantity Conversion - U.S. Gallons to Liters

• NOTE •

Fuel mass provided for reference assuming nominal 6.0 lb/gallon at 59 °F (15 °C).

U.S. Gallons (Liters)	Lb (Kg)	U.S. Gallons (Liters)	Lb (Kg)
10 (37.9)	60 (27.2)	55 (208.2)	330 (150.0)
15 (56.8)	90 (40.8)	60 (227.1)	360 (163.3)
20 (75.7)	120 (54.4)	65 (246.1)	390 (176.9)
25 (94.6)	150 (68.0)	70 (265.0)	420 (190.5)
30 (113.6)	168 (76.2)	75 (283.9)	450 (204.1)
35 (132.5)	210 (95.3)	80 (302.8)	480 (217.7)
40 (151.4)	240 (108.9)	85 (321.8)	510 (231.3)
45 (170.3)	270 (122.5)	90 (340.7)	540 (244.9)
47.25 (178.9)	283.5 (128.6)	94.5 (357.7)	567 (257.2)
50 (189.3)	300 (136.1)		

Weight Conversion - Pounds to Kilograms

Pounds	Kilograms	Pounds	Kilograms
2000	907.2	2900	1315.4
2100	952.5	3000	1360.1
2200	998.0	3100	1406.1
2300	1043.3	3200	1451.5
2400	1088.6	3300	1497.0
2500	1134.0	3400	1542.2
2600	1179.3	3500	1587.6
2700	1224.7	3600	1633.0
2800	1270.1		

Distance Conversion: Feet to Meters

Feet	Meters	Feet	Meters
10	3	600	183
20	6	700	213
30	9	800	244
40	12	900	274
50	15	1000	305
60	18	2000	610
70	21	3000	914
80	24	4000	1219
90	27	5000	1524
100	30	6000	1829
200	61	7000	2134
300	91	8000	2438
400	122	9000	2743
500	152	10,000	3048

Length Conversion: Inches to Centimeters

Inches	Centimeters	Inches	Centimeters
1	2.54	20	50.8
2	5.08	30	76.2
3	7.62	40	101.6
4	10.16	50	127
5	12.70	60	142.4
6	15.24	70	177.8
7	17.78	80	203.2
8	20.32	90	228.6
9	22.86	100	254
10	25.40	150	381
11	27.94	200	508
12	30.48	250	635

Airspeed Calibration

Normal Static Source

Conditions:

- Power for level flight or maximum continuous, whichever is less.

• NOTE •

Indicated airspeed values assume zero instrument error.

KIAS	KCAS Flap Deflection		
	Flaps 0%	Flaps 50%	Flaps 100%
60	57	50	56
70	68	66	69
80	79	80	80
90	89	92	91
100	100	102	102
110	111	113	113
120	121	123	
130	132	133	
140	142	144	
150	152	154	
160	163		
170	173		
180	183		
190	193		
200	203		
210	213		

Alternate Static Source

Conditions:

- Power for level flight or maximum continuous, whichever is less.
- Heater, Defroster & VentsON

• NOTE •

Indicated airspeed values assume zero instrument error.

KIAS	KCAS Flap Deflection		
	Flaps 0%	Flaps 50%	Flaps 100%
60	57	60	60
70	67	70	70
80	78	79	79
90	88	89	89
100	98	99	98
110	107	109	108
120	117	118	
130	127	128	
140	137	138	
150	146	148	
160	156		
170	166		
180	175		
190	185		
200	194		
210	204		

Altitude Correction

Normal Static Source: Primary Flight Display

Conditions:

- Power for level flight or maximum continuous, whichever is less.
- 3600 LB

• NOTE •

Add correction to desired altitude to obtain indicated altitude to fly.

Indicated airspeed values assume zero instrument error.
KIAS: Knots Indicated Airspeed.

Flaps	Density Alt	CORRECTION TO BE ADDED (ft)										
		Normal Static Source - KIAS										
		60	70	80	90	100	120	140	160	180	200	
0%	S.L.		0	0	0	0	0	0	0	0	0	0
	5000		0	0	0	0	0	0	0	0	0	0
	10000		0	0	0	0	0	0	0	0	0	0
	15000		0	0	0	0	0	0	0	0	0	0
50%	S.L.		9	-9	-19	-22	-19	-22	-28			
	5000		10	-10	-22	-25	-22	-25	-33			
	10000		12	-12	-25	-29	-25	-30	-38			
100%	S.L.	22	-6	-10	-14	-19	-18					
	5000	25	-7	-12	-16	-22	-21					
	10000	29	-9	-14	-18	-25	-25					

Normal Static Source: Standby Altimeter

Conditions:

- Power for level flight or maximum continuous, whichever is less.
- 3600 LB

• NOTE •

Add correction to desired altitude to obtain indicated altitude to fly.

Indicated airspeed values assume zero instrument error.

KIAS: Knots Indicated Airspeed.

Flaps	Density Alt	CORRECTION TO BE ADDED (ft)									
		Normal Static Source - KIAS									
		60	70	80	90	100	120	140	160	180	200
0%	S.L.		12	9	5	0	-11	-24	-38	-50	-61
	5000		14	10	6	0	-13	-28	-44	-58	-71
	10000		16	12	7	0	-16	-33	-51	-68	-82
	15000		19	14	8	0	-18	-39	-60	-80	-97
50%	S.L.		21	0	-14	-21	-30	-46	-66		
	5000		24	0	-16	-25	-35	-54	-77		
	10000		28	0	-18	-29	-41	-63	-90		
100%	S.L.	22	6	-1	-9	-19	-30				
	5000	25	7	-1	-10	-22	-34				
	10000	29	8	-2	-12	-25	-40				

Alternate Static Source: Primary Flight Display

Conditions:

- Power for level flight or maximum continuous, whichever is less.
- Heater, Defroster & Vents..... ON

• NOTE •

Add correction to desired altitude to obtain indicated altitude to fly.

Indicated airspeed values assume zero instrument error.

KIAS: Knots Indicated Airspeed.

Flaps	Density Alt	CORRECTION TO BE ADDED (ft)									
		Alternate Static Source - KIAS									
		60	70	80	90	100	120	140	160	180	200
0%	S.L.		4	8	14	21	40	64	94	127	164
	5000		4	10	16	25	47	75	109	148	191
	10000		5	11	19	29	55	87	127	172	222
	15000		6	13	23	34	64	102	149	202	261
50%	S.L.		-10	-4	4	11	29	50	80		
	5000		-12	-4	4	13	33	58	93		
	10000		-14	-5	5	15	39	68	108		
100%	S.L.	-2	-9	-2	6	15	39				
	5000	-2	-11	-2	7	17	45				
	10000	-3	-13	-3	8	20	53				

Alternate Static Source: Standby Altimeter

Conditions:

- Power for level flight or maximum continuous, whichever is less.
- Heater, Defroster & VentsON

• NOTE •

Add correction to desired altitude to obtain indicated altitude to fly.

Indicated airspeed values assume zero instrument error.

KIAS: Knots Indicated Airspeed.

Flaps	Density Alt	CORRECTION TO BE ADDED (ft)									
		Alternate Static Source - KIAS									
		60	70	80	90	100	120	140	160	180	200
0%	S.L.		16	17	19	22	29	40	56	77	103
	5000		18	20	22	25	33	46	65	89	120
	10000		21	23	26	29	39	54	75	104	140
	15000		25	27	30	34	46	63	89	122	164
50%	S.L.		2	5	9	11	17	25	42		
	5000		2	6	10	13	20	30	49		
	10000		3	7	12	16	23	34	57		
100%	S.L.	-2	3	7	11	15	27				
	5000	-2	3	8	12	18	32				
	10000	-3	4	9	15	20	37				

Stall Speeds

• NOTE •

KIAS values may not be accurate at stall.

Bank Angle Deg	STALL SPEEDS AT IDLE					
	Flaps UP		Flaps 50%		Flaps 100%	
	KIAS	KCAS	KIAS	KCAS	KIAS	KCAS
3600 lb - Most FWD C.G.						
0	74	73	70	67	64	61
15	76	74	71	68	64	62
30	80	78	74	72	67	65
45	87	87	79	79	73	72
60	103	103	92	94	85	86
3600 lb - Most AFT C.G.						
0	72	70	69	66	63	60
15	73	71	70	67	64	61
30	77	75	73	71	66	65
45	84	83	79	78	72	72
60	99	99	91	93	85	85

Serials w/ IPS: Stall Speeds with Ice Accumulation

• NOTE •

KIAS values may not be accurate at stall.

Bank Angle Deg	STALL SPEEDS AT IDLE			
	Flaps UP		Flaps 50%	
	KIAS	KCAS	KIAS	KCAS
3600 lb - Most FWD C.G.				
0	77	76	72	69
15	79	77	73	70
30	83	82	75	74
45	91	90	82	82
60	107	107	95	98
3600 lb - Most AFT C.G.				
0	77	76	72	69
15	79	77	73	70
30	83	82	75	74
45	91	90	82	82
60	107	107	95	98

Wind Components


Example:

Runway Heading 10°
 Wind Direction 60°
 Wind Velocity 15 Knots

• NOTE •

The maximum demonstrated crosswind is 21 knots.

Figure 5-1: Wind Components

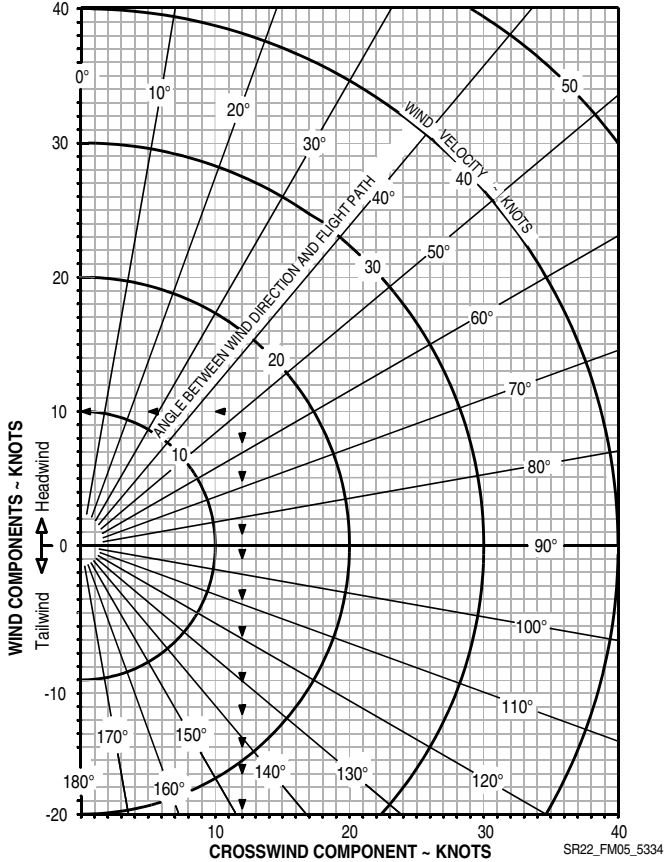

Takeoff Distance

Takeoff Weight 3600 lb (1633 kg)

Conditions:

- WindsZero
- Runway..... Dry, Level, Paved
- Flaps.....50%
- Air Conditioner..... OFF
- Power Full Throttle
- Speed Over 50 ft Obstacle 84 KIAS
- Approximate Speed at Liftoff..... 76 KIAS
- Mixture..... Set Fuel Flow to Very Top of GREEN ARC
Set prior to brake release for short field takeoff.

The following factors are to be applied to the computed takeoff distance for the noted condition.

Headwind: Subtract 10% for each 12 knots headwind.

Tailwind: Add 10% for each 2 knots tailwind.

Grass runway, dry: Add 20% of the ground roll distance.

Grass runway, wet: Add 30% of the ground roll distance.

Uphill gradient: Add the following percentages to the ground roll distance for every 1% of uphill gradient.

- Sea Level (SL): Add 22%
- 5,000 ft: Add 30%
- 10,000 ft: Add 43%

Downhill gradient: Subtract the following percentages of the ground roll distance for every 1% of downhill gradient.

- Sea Level (SL): Subtract 7%
- 5,000 ft: Subtract 10%
- 10,000: Subtract 14%

Aircraft with Air Conditioning System: Add 100 ft to ground roll distance and 150 ft to total distance if Air Conditioner is ON during takeoff.

Takeoff Weight: 3600 lb (1633 kg)								
Press Alt FT	Distance FT	TEMPERATURE ~°C						
		0	10	20	30	40	50	ISA
SL	Gnd Roll	965	1042	1123	1207	1294	1384	1082
	Total	1680	1804	1933	2066	2203	2345	1868
1000	Gnd Roll	1063	1148	1237	1330	1426	1526	1175
	Total	1844	1980	2121	2267	2418	2573	2022
2000	Gnd Roll	1172	1267	1365	1467	1573	1683	1277
	Total	2025	2174	2329	2490	2656	2827	2190
3000	Gnd Roll	1295	1399	1507	1620	1737	1858	1389
	Total	2226	2391	2561	2738	2920	3109	2375
4000	Gnd Roll	1431	1546	1666	1791	1920	2054	1512
	Total	2451	2632	2820	3014	3215	3422	2578
5000	Gnd Roll	1584	1711	1844	1982	2125	2273	1648
	Total	2701	2900	3107	3322	3543	3772	2801
6000	Gnd Roll	1755	1896	2043	2195	2354	2519	1798
	Total	2979	3200	3428	3665	3910	4162	3047
7000	Gnd Roll	1946	2103	2266	2435	2611	2794	1963
	Total	3291	3535	3787	4049	4319	4598	3317
8000	Gnd Roll	2161	2335	2516	2704	2900	3102	2146
	Total	3640	3909	4189	4478	4777	5086	3616
9000	Gnd Roll	2403	2596	2798	3007	3224	3449	2349
	Total	4030	4329	4639	4959	5291	5633	3946
10,000	Gnd Roll	2675	2890	3114	3347	3589	3840	2574
	Total	4469	4800	5144	5499	5867	6247	4312

Takeoff Distance: 2900 lb (1315 kg)

Conditions:

- WindsZero
- Runway..... Dry, Level, Paved
- Flaps.....50%
- Air Conditioner..... OFF
- Power Full Throttle
- Speed Over 50 ft Obstacle..... 74 KIAS
- Approximate Speed at Liftoff..... 70 KIAS
- Mixture.....Set Fuel Flow to Very Top of GREEN ARC
Set prior to brake release for short field takeoff.

The following factors are to be applied to the computed takeoff distance for the noted condition.

Headwind: Subtract 10% for each 12 knots headwind.

Tailwind: Add 10% for each 2 knots tailwind.

Grass runway, dry: Add 20% of the ground roll distance.

Grass runway, wet: Add 30% of the ground roll distance.

Uphill gradient: Add the following percentages of the ground roll distance for every 1% of uphill gradient.

- Sea Level (SL): Add 22%
- 5,000 ft: Add 30%
- 10,000 ft: Add 43%

Downhill gradient: Subtract the following percentages of the ground roll distance for every 1% of downhill gradient.

- Sea Level (SL): Subtract 7%
- 5,000 ft: Subtract 10%
- 10,000: Subtract 14%

Aircraft with Air Conditioning System: Add 100 ft to ground roll distance and 150 ft to total distance if Air Conditioner is ON during takeoff.

Takeoff Distance: 2900 lb (1315 kg)								
Press Alt FT	Distance FT	TEMPERATURE ~°C						
		0	10	20	30	40	50	ISA
SL	Gnd Roll	610	659	710	763	818	875	684
	Total	971	1043	1118	1195	1275	1358	1080
1000	Gnd Roll	673	727	783	841	902	965	743
	Total	1066	1146	1228	1313	1401	1492	1170
2000	Gnd Roll	743	802	864	929	995	1064	809
	Total	1173	1260	1351	1444	1541	1641	1269
3000	Gnd Roll	821	887	955	1026	1100	1177	880
	Total	1292	1388	1487	1590	1697	1807	1378
4000	Gnd Roll	908	981	1057	1135	1217	1302	959
	Total	1424	1530	1639	1753	1871	1992	1498
5000	Gnd Roll	1006	1086	1170	1257	1348	1442	1046
	Total	1571	1688	1809	1935	2065	2199	1630
6000	Gnd Roll	1116	1205	1298	1394	1494	1598	1143
	Total	1736	1865	1999	2138	2281	2429	1775
7000	Gnd Roll	1238	1337	1440	1547	1659	1774	1249
	Total	1920	2063	2211	2365	2523	2687	1936
8000	Gnd Roll	1376	1486	1601	1720	1843	1971	1367
	Total	2127	2285	2449	2619	2795	2977	2113
9000	Gnd Roll	1532	1654	1781	1914	2051	2194	1498
	Total	2359	2534	2716	2904	3099	3300	2309
10,000	Gnd Roll	1707	1843	1985	2132	2285	2444	1643
	Total	2619	2814	3016	3225	3441	3665	2527

Takeoff Climb Gradient

Conditions:

- Power Full Throttle
- Mixture Set to very top of GREEN ARC
- Flaps 50%

Weight	Press Alt	Climb Speed	CLIMB GRADIENT - Feet per Nautical Mile					
			TEMPERATURE ~°C					
LB	FT	KIAS	-20	0	20	40	50	ISA
3600	SL	97	888	822	760	702	674	775
	2000	95	777	713	654	599	573	680
	4000	94	669	608	552	499	474	588
	6000	92	564	507	453	403	379	498
	8000	90	463	408	357	310	287	411
	10000	89	365	313	264	219	198	325
2900	SL	91	1172	1122	1070	1019	994	1083
	2000	90	1049	1000	950	902	878	972
	4000	89	931	884	836	790	767	867
	6000	88	818	773	727	683	662	766
	8000	88	711	667	623	581	561	669
	10000	87	608	566	524	484	465	576

Takeoff Rate of Climb

Conditions:

- Power..... Full Throttle
- Mixture..... Set to very top of GREEN ARC
- Flaps..... 50%

• NOTE •

Aircraft with optional Air Conditioning System: Maximum rate of climb performance is reduced by approximately 50 feet per minute. For maximum climb performance the Air Conditioner should be OFF.

Weight LB	Press Alt FT	Climb Speed KIAS	RATE OF CLIMB - Feet per Minute					
			TEMPERATURE ~°C					
			-20	0	20	40	50	ISA
3600	SL	97	1361	1310	1256	1200	1172	1270
	2000	95	1215	1161	1104	1045	1015	1129
	4000	94	1068	1010	950	889	858	989
	6000	92	920	859	796	732	700	849
	8000	90	770	706	640	574	541	709
	10000	89	620	552	483	415	380	568
2900	SL	91	1646	1638	1621	1598	1585	1626
	2000	90	1518	1505	1484	1457	1442	1494
	4000	89	1389	1371	1346	1316	1299	1363
	6000	88	1259	1236	1207	1172	1154	1232
	8000	88	1128	1100	1066	1028	1008	1101
	10000	87	995	962	924	883	861	971

Enroute Climb

Enroute Climb Gradient

Conditions:

- Power Full Throttle
- Mixture.....Set to very top of GREEN ARC
- Flaps..... UP

Weight	Press Alt	Climb Speed	CLIMB GRADIENT - Feet per Nautical Mile					
			TEMPERATURE ~°C					
LB	FT	KIAS	-20	0	20	40	50	ISA
3600	SL	108	769	730	691	653	635	701
	2000	106	685	647	609	573	555	626
	4000	104	603	567	531	496	479	554
	6000	102	525	489	454	421	405	484
	8000	101	448	414	381	349	333	415
	10000	99	375	341	309	279	264	349
	12000	98	303	271	241	211	197	285
	14000	96	234	204	174	146	133	223
2900	16000	94	168	138	110	84	71	163
	SL	101	1130	1078	1026	975	951	1039
	2000	100	1015	965	915	867	843	937
	4000	99	905	857	809	763	741	840
	6000	98	800	753	708	664	642	746
	8000	97	699	654	611	569	548	656
	10000	96	603	560	518	478	458	570
	12000	95	610	469	429	391	372	487
14000	94	422	382	344	308	290	407	
16000	93	337	299	263	229	212	331	

Enroute Rate Of Climb

Conditions:

- Power..... Full Throttle
- Mixture..... Set to very top of GREEN ARC
- Flaps..... UP

• NOTE •

Aircraft with optional Air Conditioning System: Maximum rate of climb performance is reduced by approximately 50 feet per minute if system is ON. For maximum climb performance, the Air Conditioner should be OFF.

Weight LB	Press Alt FT	Climb Speed KIAS	RATE OF CLIMB - Feet per Minute					
			TEMPERATURE ~°C					
			-20	0	20	40	50	ISA
3600	SL	108	1285	1268	1245	1217	1202	1251
	2000	106	1172	1150	1123	1093	1076	1136
	4000	104	1057	1031	1001	967	949	1021
	6000	102	940	911	877	840	821	906
	8000	101	823	790	752	712	692	791
	10000	99	704	667	626	583	561	676
	12000	98	584	543	499	453	430	561
	14000	96	462	417	370	321	297	446
	16000	94	339	290	240	188	162	331

Weight	Press Alt	Climb Speed	RATE OF CLIMB - Feet per Minute					
			TEMPERATURE ~°C					
LB	FT	KIAS	-20	0	20	40	50	ISA
2900	SL	101	1761	1748	1726	1698	1683	1732
	2000	100	1629	1610	1584	1552	1535	1596
	4000	99	1494	1471	1441	1405	1386	1461
	6000	98	1359	1331	1296	1257	1237	1326
	8000	97	1222	1189	1151	1108	1086	1191
	10000	95	1084	1046	1004	958	934	1056
	12000	95	945	902	855	806	781	921
	14000	93	804	757	706	653	626	787
	16000	92	662	610	556	499	471	653

Enroute Climb Gradient w/ Ice Accumulation - Serials w/ IPS

Conditions:

- Power..... Full Throttle
- Mixture..... Set to very top of GREEN ARC
- Flaps..... UP

Weight LB	Press Alt FT	Climb Speed KIAS	CLIMB GRADIENT - Feet per Nautical Mile					ISA
			TEMPERATURE ~°C					
			-20	-10	0	5		
3600	SL	107	407	391	375	367		
	2000	106	325	310	295	287		
	4000	104	246	231	217	209		
	6000	103	170	156	142	135	137	
	8000	101	96	82	69	62	70	
	10000	100	24	12			5	
	12000	98						
	14000	97						
	16000	96						
2900	SL	101	663	641	619	608		
	2000	100	553	532	510	500		
	4000	98	447	427	407	397		
	6000	97	346	327	308	299	302	
	8000	96	250	232	213	204	215	
	10000	95	158	140	123	114	131	
	12000	95	69	53	37	28	51	
	14000	95						
	16000	95						

Enroute Rate Of Climb w/ Ice Accumulation - Serials w/ IPS

Conditions:

- Power Full Throttle
- Mixture.....Set to very top of GREEN ARC
- Flaps..... UP

• NOTE •

Aircraft with optional Air Conditioning System: Maximum rate of climb performance is reduced by approximately 50 feet per minute if system is ON. For maximum climb performance, the Air Conditioner should be OFF.

Weight	Press Alt	Climb Speed	RATE OF CLIMB- Feet per Minute				
			TEMPERATURE ~°C				
			-20	-10	0	5	ISA
LB	FT	KIAS					
3600	SL	107	684	670	655	647	
	2000	106	559	543	526	517	
	4000	104	433	415	396	386	
	6000	103	305	285	264	254	258
	8000	101	176	154	132	120	134
	10000	100	46	22			10
	12000	98					
	14000	97					
	16000	96					
2900	SL	101	1045	1030	1014	1005	
	2000	100	895	878	859	849	
	4000	98	744	725	704	693	
	6000	97	593	571	548	536	540
	8000	96	439	415	390	377	392
	10000	95	285	258	231	217	244
	12000	95	129	100	71	56	97
	14000	95					
	16000	95					

Enroute Climb Gradient - Serials w/ Hartzell Propeller w/ Composite Blades

Conditions:

- Power..... Full Throttle
- Mixture..... Set to very top of GREEN ARC
- Flaps..... UP

• NOTE •

For noise abatement, use VY (Best Rate of Climb) as listed for the first one thousand feet after takeoff.

Weight LB	Press Alt FT	Climb Speed KIAS	CLIMB GRADIENT - Feet per Nautical Mile					
			TEMPERATURE ~°C					
			-20	0	20	40	50	ISA
3600	SL	110	750	710	671	633	615	681
	2000	109	664	626	589	552	535	605
	4000	108	582	545	509	475	458	532
	6000	107	502	467	433	400	384	462
	8000	106	426	392	360	328	313	394
	10000	105	353	321	289	260	245	265
	12000	103	283	252	222	194	180	265
	14000	102	216	186	158	131	118	205
	16000	101	151	123	96	71	58	146
2900	SL	112	951	907	862	819		873
	2000	110	849	806	763	722		867
	4000	109	751	709	669	629		771
	6000	108	657	617	578	540		679
	8000	107	567	529	491	455		591
	10000	105	481	444	408	374		506
	12000	104	398	363	329	296		425
	14000	103	320	286	253	222		346
	16000	102	244	212	181	152		271

Enroute Rate of Climb - Serials w/ Hartzell Propeller w/ Composite Blades

Conditions:

- Power Full Throttle
- Mixture.....Set to very top of GREEN ARC
- Flaps..... UP

• NOTE •

For noise abatement, use VY (Best Rate of Climb) as listed for the first one thousand feet after takeoff.


Weight LB	Press Alt FT	Climb Speed KIAS	CLIMB GRADIENT - Feet per Nautical Mile					
			TEMPERATURE ~°C					
			-20	0	20	40	50	ISA
3600	SL	110	1289	1270	1244	1214	1198	1251
	2000	109	1173	1150	1121	1088	1070	1134
	4000	108	1056	1028	996	960	941	1017
	6000	107	938	906	870	831	811	901
	8000	106	818	782	743	701	680	784
	10000	105	697	657	615	570	547	667
	12000	103	574	531	485	437	413	550
	14000	102	450	403	354	304	278	433
	16000	101	325	274	222	168	142	317
2900	SL	112	1636	1622	1600	1572		1606
	2000	110	1503	1484	1458	1426		1479
	4000	109	1368	1345	1314	1278		1344
	6000	108	1233	1204	1169	1130		1208
	8000	107	1095	1062	1023	980		1073
	10000	105	957	918	875	829		939
	12000	104	816	773	726	676		804
	14000	103	675	627	576	523		670
	16000	102	532	480	425	368		536

Enroute Rate of Climb Vs Density Altitude

Conditions:

- Power..... Full Throttle
- Mixture..... Set to very top of GREEN ARC
- Flaps..... UP

Figure 5-2: Enroute Rate of Climb Vs Density Altitude

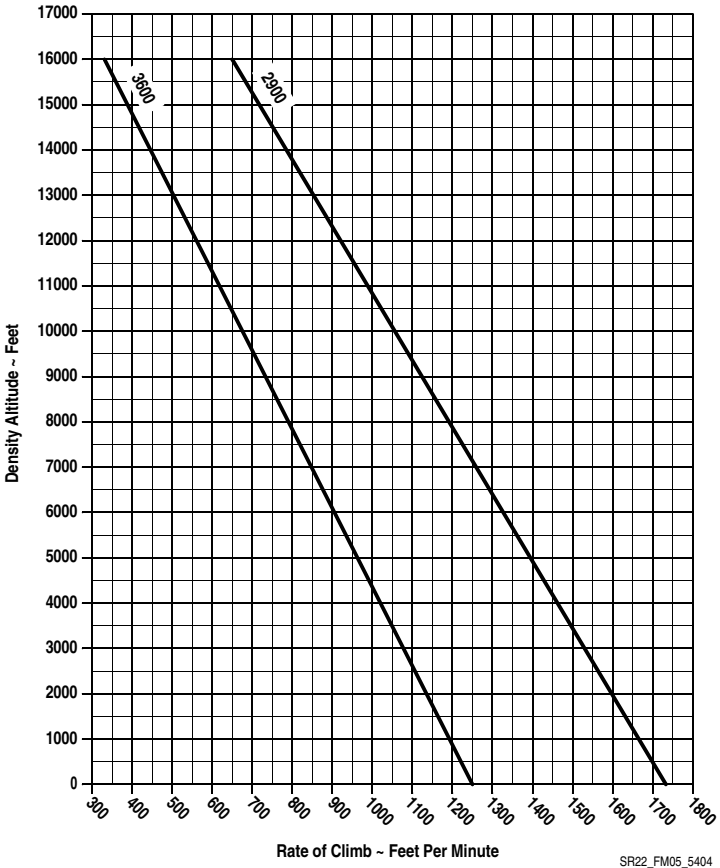

Time, Fuel, & Distance to Climb

Time, Fuel, & Distance to Climb

Conditions:

- Power Full Throttle
- Mixture Set to very top of GREEN ARC
- Weight 3600 LB
- Winds Zero

• NOTE •

Taxi Fuel - Add 1.5 gallon for start, taxi, and takeoff.

Temperature - Add 10% to computed values per each 10 °C above standard.

Press Alt FT	OAT (ISA) °C	Climb Speed KIAS	Rate Of Climb FPM	TIME, FUEL, DISTANCE ~ From Sea Level			
				Time Minutes	Fuel U.S. Gal	Fuel lb	Distance nm
SL	15	108	1251	0.0	0.0	0.0	0.0
1000	13	107	1194	0.8	0.3	1.8	1.5
2000	11	107	1136	1.7	0.7	4.2	3.1
3000	9	106	1079	2.6	1.0	6.0	4.8
4000	7	105	1021	3.6	1.4	8.4	6.7
5000	5	104	964	4.7	1.7	10.2	8.6
6000	3	104	906	5.8	2.1	12.6	10.7
7000	1	103	849	6.9	2.5	15.0	12.9
8000	-1	102	791	8.2	2.9	17.4	15.4
9000	-3	102	734	9.6	3.3	19.8	18.0
10000	-5	101	676	11.1	3.7	22.2	20.9
11000	-7	100	619	12.7	4.2	25.2	24.1
12000	-9	99	561	14.4	4.6	27.6	27.6
13000	-11	98	504	16.4	5.1	30.6	31.6
14000	-13	98	446	18.7	5.7	34.2	36.1
15000	-15	97	389	21.2	6.3	37.8	41.4
16000	-17	96	331	24.3	7.0	42.0	47.6
17000	-19	95	274	27.9	7.8	46.8	55.1
17500	-20	95	245	30.0	8.2	49.2	59.4

Time, Fuel, & Distance to Climb w/ Ice Accumulation - Serials w/ IPS

Conditions:

- Power..... Full Throttle
- Mixture..... Set to very top of GREEN ARC
- Weight..... 3600 LB
- Winds..... Zero

• NOTE •

Taxi Fuel - Add 1.5 gallon for start, taxi, and takeoff.

Temperature - Add 10% to computed values per each 10 °C above standard.

Press Alt FT	OAT (ISA) °C	Climb Speed KIAS	Rate Of Climb FPM	TIME, FUEL, DISTANCE ~ From Sea Level			
				Time Minutes	Fuel U.S. Gal	Fuel lb	Distance nm
SL	15	108	630	0.0	0.0	0.0	0.0
1000	13	107	568	1.8	0.7	4.2	3.2
2000	11	107	506	3.7	1.5	9.0	6.8
3000	9	106	444	6.0	2.3	13.8	11.0
4000	7	105	382	8.6	3.3	19.8	15.9
5000	5	104	320	11.7	4.3	25.8	21.7
6000	3	104	258	15.6	5.7	34.2	29.1
7000	1	103	196	20.7	7.3	43.8	38.8
8000	-1	102	134	28.2	9.6	57.6	53.1
9000	-3	102	72	42.1	13.8	82.8	80.2
10000	-5	101	10	145.2	43.5	261.0	281.5

Cruise Performance

Cruise Performance

Conditions:

- Weight 3400 LB
- Winds Zero
- Shaded Cells: Cruise Pwr above 85% not recommended.

• NOTE •

Subtract 10 KTAS if nose wheel pant and fairing removed. Lower KTAS by 10% if nose and main wheel pants and fairings are removed.

Aircraft with optional Air Conditioning System: Cruise performance is reduced by 2 knots. For maximum cruise performance, the Air Conditioner should be OFF.

Aircraft with optional Enhanced Vision System: Cruise performance is reduced by up to 1 knot.

Press Alt FT	RPM	MAP	ISA -30 °C			ISA			ISA +30 °C		
			PWR	KTAS	GPH	PWR	KTAS	GPH	PWR	KTAS	GPH
2000	2700	27.4	103%	186	24.6	98%	186	23.3	93%	181	22.0
	2600	27.4	99%	183	23.5	94%	183	22.2	89%	178	21.5
	2500	27.4	93%	179	22.1	88%	179	20.9	84%	174	20.8
	2500	26.4	89%	176	21.1	84%	176	19.9	80%	171	20.2
	2500	25.4	84%	173	20.0	80%	173	19.0	76%	168	19.5
	2500	24.4	80%	170	19.0	76%	170	18.0	72%	165	18.8
	2500	23.4	76%	167	18.0	72%	167	17.0	68%	162	18.1
4000	2700	25.4	96%	185	22.9	91%	185	21.6	87%	180	20.8
	2600	25.4	92%	182	21.9	87%	182	20.7	83%	177	20.6
	2500	25.4	87%	178	20.6	82%	178	19.5	78%	173	19.9
	2500	24.4	82%	175	19.5	78%	175	18.5	74%	170	19.2
	2500	23.4	78%	172	18.5	74%	172	17.5	70%	167	18.5
	2500	22.4	73%	169	17.4	69%	169	16.5	66%	163	17.7
	2500	21.4	69%	165	16.4	65%	165	15.5	62%	159	16.9

Press Alt FT	RPM	MAP	ISA -30 °C			ISA			ISA +30 °C		
			PWR	KTAS	GPH	PWR	KTAS	GPH	PWR	KTAS	GPH
6000	2700	23.5	89%	184	21.2	85%	184	20.1	81%	179	19.6
	2600	23.5	85%	181	20.3	81%	181	19.2	77%	176	19.1
	2500	23.5	80%	177	19.1	76%	177	18.1	72%	172	18.3
	2500	22.5	76%	174	18.1	72%	174	17.1	68%	169	17.6
	2500	21.5	72%	170	17.0	68%	170	16.1	64%	165	16.9
	2500	20.5	67%	166	15.9	64%	166	15.1	60%	161	16.1
	2500	19.5	63%	162	14.9	59%	162	14.1	56%	157	15.3
8000	2700	21.7	83%	183	19.7	78%	183	18.6	75%	178	17.7
	2600	21.7	79%	180	18.8	75%	180	17.8	71%	175	17.0
	2500	21.7	75%	176	17.7	71%	176	16.8	67%	171	16.0
	2500	20.7	70%	172	16.7	66%	172	15.8	63%	167	15.0
	2500	19.7	66%	168	15.6	62%	168	14.8	59%	163	14.0
	2500	18.7	61%	163	14.5	58%	163	13.8	55%	158	13.1
	2500	17.7	57%	159	13.5	54%	159	12.8	51%	153	12.1
10000	2700	20.0	77%	182	18.2	73%	182	17.3	69%	176	16.4
	2600	20.0	71%	177	17.0	68%	177	16.1	64%	172	15.3
	2500	20.0	67%	173	16.0	64%	173	15.1	61%	167	14.4
	2500	19.0	63%	168	14.9	59%	168	14.1	56%	163	13.4
	2500	18.0	58%	163	13.8	55%	163	13.1	52%	158	12.5
	2500	17.0	54%	158	12.8	51%	158	12.1	48%	153	11.5
12000	2700	18.5	71%	180	16.9	67%	180	16.0	64%	175	15.2
	2600	18.5	68%	177	16.2	64%	177	15.3	61%	172	14.5
	2500	18.5	64%	173	15.2	60%	173	14.4	58%	167	13.7
	2500	17.5	59%	168	14.1	56%	168	13.4	53%	162	12.7
	2500	16.5	55%	162	13.0	52%	162	12.3	49%	157	11.7
	2500	15.5	50%	156	12.0	48%	156	11.3	45%	151	10.8
14000	2700	17.1	66%	178	15.6	62%	178	14.8	59%	173	14.1
	2600	17.1	63%	175	14.9	60%	175	14.1	57%	170	13.5
	2500	17.1	59%	171	14.1	56%	171	13.3	53%	165	12.7
	2500	16.1	55%	165	13.0	52%	165	12.3	49%	159	11.7
	2500	15.1	50%	159	11.9	47%	159	11.2	45%	153	10.7

Press Alt FT	RPM	MAP	ISA -30 °C			ISA			ISA +30 °C		
			PWR	KTAS	GPH	PWR	KTAS	GPH	PWR	KTAS	GPH
16000	2700	15.8	61%	176	14.5	58%	176	13.7	55%	171	13.0
	2600	15.8	58%	173	13.8	55%	173	13.1	52%	167	12.5
	2500	15.8	55%	168	13.0	52%	168	12.3	49%	163	11.7
	2500	14.8	50%	162	11.9	47%	162	11.3	45%	156	10.7
17000	2700	15.2	59%	175	13.9	55%	175	13.2	53%	169	12.5
	2600	15.2	56%	171	13.3	53%	171	12.6	50%	166	12.0
	2500	15.2	53%	167	12.5	50%	167	11.9	47%	162	11.3
	2500	14.2	48%	160	11.4	45%	160	10.8	43%	155	10.3

Cruise Performance w/ Ice Accumulation - Serials w/ IPS

Conditions:

- Weight..... 3400 LB
- Winds Zero
- Shaded Cells: Cruise Pwr above 85% not recommended.

• NOTE •

Subtract 10 KTAS if nose wheel pant and fairing removed. Lower KTAS by 10% if nose and main wheel pants and fairings are removed.

Aircraft with optional Air Conditioning System: Cruise performance is reduced by 2 knots. For maximum cruise performance, the Air Conditioner should be OFF.

Aircraft with optional Enhanced Vision System: Cruise performance is reduced by up to 1 knot.

Press Alt FT	RPM	MAP	ISA -30 °C			ISA			ISA +30 °C		
			PWR	KTAS	GPH	PWR	KTAS	GPH	PWR	KTAS	GPH
2000	2700	27.4	103%	160	24.6						
	2600	27.4	99%	157	23.5						
	2500	27.4	93%	153	22.1						
	2500	26.4	89%	150	21.1						
	2500	25.4	84%	146	20.0						
	2500	24.4	80%	142	19.0						
	2500	23.4	76%	137	18.0						
4000	2700	25.4	96%	158	22.9						
	2600	25.4	92%	155	21.9						
	2500	25.4	87%	150	20.6						
	2500	24.4	82%	146	19.5						
	2500	23.4	78%	141	18.5						
	2500	22.4	73%	136	17.4						
	2500	21.4	69%	130	16.4						

Press Alt FT	RPM	MAP	ISA -30 °C			ISA			ISA +30 °C		
			PWR	KTAS	GPH	PWR	KTAS	GPH	PWR	KTAS	GPH
6000	2700	23.5	89%	155	21.2	85%	155	20.1			
	2600	23.5	85%	151	20.3	81%	151	19.2			
	2500	23.5	80%	146	19.1	76%	146	18.1			
	2500	22.5	76%	140	18.1	72%	140	17.1			
	2500	21.5	72%	134	17.0	68%	134	16.1			
	2500	20.5	67%	128	15.9	64%	128	15.1			
	2500	19.5	63%	120	14.9	59%	120	14.1			
8000	2700	21.7	83%	150	19.7	78%	150	18.6			
	2600	21.7	79%	146	18.8	75%	146	17.8			
	2500	21.7	75%	140	17.7	71%	140	16.8			
	2500	20.7	70%	133	16.7	66%	133	15.8			
	2500	19.7	66%	126	15.6	62%	126	14.8			
	2500	18.7	61%	117	14.5	58%	117	13.8			
	2500	17.7	57%	108	13.5	54%	108	12.8			
10000	2700	20.0	77%	144	18.2	73%	144	17.3			
	2600	20.0	71%	136	17.0	68%	136	16.1			
	2500	20.0	67%	129	16.0	64%	129	15.1			
	2500	19.0	63%	120	14.9	59%	120	14.1			
	2500	18.0	58%	111	13.8	55%	111	13.1			
	2500	17.0	54%	100	12.8	51%	100	12.1			

Range / Endurance Profile

Range / Endurance Profile

Conditions:

- Weight.....3600 LB for Climb, Avg 3400 LB for Cruise
- Temperature..... Standard Day
- Winds..... Zero
- Cruise Mixture.....Best Power
- Total Fuel.....92 Gallons

• NOTE •

Fuel Remaining For Cruise is equal to 92.0 gallons usable, less climb fuel, less 9.8 gallons for 45 minutes IFR reserve fuel at 65% power (ISA @ 10,000 ft PA), less descent fuel, less fuel used prior to takeoff.

Range and endurance shown includes descent to final destination at 178 KIAS and 500 fpm.

Range is decreased by 5% if nose wheel pant and fairings removed.

Range is decreased by 15% if nose and main wheel pants and fairings removed.

Aircraft with optional Air Conditioning System: Range is decreased by 1% if system in operation. For maximum range, the Air Conditioner should be OFF.

Aircraft with optional Enhanced Vision System: Range is decreased by ½%.

75% POWER							
Press Alt	Climb Fuel	Fuel Remaining For Cruise	Airspeed	Fuel Flow	Endurance	Range	Specific Range
FT	GAL	GAL	KTAS	GPH	HOURS	nm	nm/GAL
SL	0.0	81.2	166	17.8	4.6	758	9.3
2000	0.7	79.3	170	17.8	4.5	769	9.6
4000	1.5	77.4	173	17.8	4.5	780	9.8
6000	2.3	75.5	177	17.8	4.4	792	10.0
8000	3.1	73.5	180	17.8	4.4	804	10.3

65% POWER							
Press Alt	Climb Fuel	Fuel Remaining For Cruise	Airspeed	Fuel Flow	Endurance	Range	Specific Range
FT	GAL	GAL	KTAS	GPH	HOURS	nm	nm/GAL
SL	0.0	81.2	158	15.4	5.3	832	10.3
2000	0.7	79.3	161	15.4	5.2	844	10.5
4000	1.5	77.4	165	15.4	5.2	855	10.7
6000	2.3	75.5	168	15.4	5.1	867	11.0
8000	3.1	73.5	171	15.4	5.1	879	11.3
10000	4.0	71.6	174	15.4	5.0	897	11.5
12000	5.0	69.6	178	15.4	4.9	903	11.8

55% POWER							
Press Alt	Climb Fuel	Fuel Remaining For Cruise	Airspeed	Fuel Flow	Endurance	Range	Specific Range
FT	GAL	GAL	KTAS	GPH	HOURS	nm	nm/GAL
SL	0.0	81.2	149	13.1	6.2	925	11.4
2000	0.7	79.3	152	13.1	6.2	936	11.6
4000	1.5	77.4	154	13.1	6.1	948	11.9
6000	2.3	75.5	157	13.1	6.0	959	12.2
8000	3.1	73.5	160	13.1	6.0	971	12.4
10000	4.0	71.6	163	13.1	5.9	990	12.7
12000	5.0	69.6	166	13.1	5.9	1003	13.1
14000	6.2	67.4	169	13.1	5.8	1018	13.4

55% POWER							
Press Alt	Climb Fuel	Fuel Remaining For Cruise	Airspeed	Fuel Flow	Endurance	Range	Specific Range
FT	GAL	GAL	KTAS	GPH	HOURS	nm	nm/GAL
SL	0.0	81.2	149	11.3	7.2	1067	13.1
2000	0.7	79.3	152	11.3	7.1	1080	13.4
4000	1.5	77.4	154	11.3	7.0	1092	13.7
6000	2.3	75.5	157	11.3	7.0	1105	14.0
8000	3.1	73.5	160	11.3	6.9	1118	14.3
10000	4.0	71.6	163	11.3	6.9	1139	14.7
12000	5.0	69.6	166	11.3	6.8	1153	15.0
14000	6.2	67.4	169	11.3	6.7	1169	15.4

Range / Endurance: Full Power Climb w/ Ice Accumulation - Serials w/ IPS

Conditions:

- Weight 3600 LB for Climb, Avg 3400 LB for Cruise
- Temperature Standard Day
- Winds Zero
- Cruise Mixture Best Power
- Total Fuel 92 Gallons

• NOTE •

Fuel Remaining For Cruise is equal to 92.0 gallons usable, less climb fuel, less 9.8 gallons for 45 minutes IFR reserve fuel at 65% power (ISA @ 10,000 ft PA), less descent fuel, less fuel used prior to takeoff.

Range and endurance shown includes descent to final destination at 178 KIAS and 500 fpm.

Range is decreased by 5% if nose wheel pant and fairings removed.

Range is decreased by 15% if nose and main wheel pants and fairings removed.

Aircraft with optional Air Conditioning System: Range is decreased by 1% if system in operation. For maximum range, the Air Conditioner should be OFF.

Aircraft with optional Enhanced Vision System: Range is decreased by ½%.

75% POWER							
Press Alt	Climb Fuel	Fuel Remaining For Cruise	Airspeed	Fuel Flow	Endurance	Range	Specific Range
FT	GAL	GAL	KTAS	GPH	HOURS	nm	nm/GAL
SL	0.0	81.8	139	17.8	4.6	639	7.8
2000	0.7	79.9	141	17.8	4.5	544	8.0
4000	1.5	78.0	143	17.8	4.5	650	8.1
6000	2.3	76.1	144	17.8	4.5	655	8.2
8000	3.1	74.1	146	17.8	4.4	659	8.4

65% POWER							
Press Alt	Climb Fuel	Fuel Remaining For Cruise	Airspeed	Fuel Flow	Endurance	Range	Specific Range
FT	GAL	GAL	KTAS	GPH	HOURS	nm	nm/GAL
SL	0.0	81.8	127	15.4	5.3	674	8.2
2000	0.7	79.9	128	15.4	5.2	677	8.4
4000	1.5	78.0	129	15.4	5.2	679	8.5
6000	2.3	76.1	130	15.4	5.1	680	8.6
8000	3.1	74.1	131	15.4	5.1	681	8.7
10000	4.0	72.1	131	15.4	5.1	685	8.8
12000	5.0	70.1	132	15.4	5.0	680	8.9

55% POWER							
Press Alt	Climb Fuel	Fuel Remaining For Cruise	Airspeed	Fuel Flow	Endurance	Range	Specific Range
FT	GAL	GAL	KTAS	GPH	HOURS	nm	nm/GAL
SL	0.0	81.8	111	13.1	6.3	696	8.5
2000	0.7	79.9	111	13.1	6.2	693	8.6
4000	1.5	78.0	111	13.1	6.1	690	8.6
6000	2.3	76.1	111	13.1	6.1	686	8.6
8000	3.1	74.1	111	13.1	6.0	682	8.7
10000	4.0	72.1	110	13.1	6.0	681	8.7
12000	5.0	70.1	110	13.1	5.9	675	8.7
14000	6.2	67.9	109	13.1	5.8	670	8.8

55% POWER							
Press Alt	Climb Fuel	Fuel Remaining For Cruise	Airspeed	Fuel Flow	Endurance	Range	Specific Range
FT	GAL	GAL	KTAS	GPH	HOURS	nm	nm/GAL
SL	0.0	81.8	111	11.3	7.2	803	9.8
2000	0.7	79.9	111	11.3	7.2	799	9.9
4000	1.5	78.0	111	11.3	7.1	795	9.9
6000	2.3	76.1	111	11.3	7.0	790	9.9
8000	3.1	74.1	111	11.3	6.9	784	10.0
10000	4.0	72.1	110	11.3	6.9	782	10.0
12000	5.0	70.1	110	11.3	6.8	775	10.0
14000	6.2	67.9	109	11.3	6.7	768	10.0

Balked Landing

Balked Landing Climb Gradient

Conditions:

- Power..... Full Throttle
- Mixture..... Set to very top of GREEN ARC
- Flaps..... 100%

Weight	Press Alt	Climb Speed	CLIMB GRADIENT - Feet per Nautical Mile					
			TEMPERATURE ~°C					
LB	FT	KIAS	-20	0	20	40	50	ISA
3600	SL	79	860	808	756	706	681	769
	2000	79	732	682	633	586	563	655
	4000	79	611	564	518	474	452	548
	6000	79	497	453	410	368	348	446
	8000	79	391	349	308	269	250	351
	10000	79	291	251	213	177	159	261
2900	SL	79	1196	1129	1063	1000	969	1080
	2000	79	1033	970	908	849	820	936
	4000	79	880	821	763	707	680	800
	6000	79	737	681	627	575	550	673
	8000	79	603	551	500	451	428	553
	10000	79	478	429	381	336	314	441

Balked Landing Rate of Climb

Conditions:

- Power Full Throttle
- Mixture Set to very top of GREEN ARC
- Flaps 100%

Weight LB	Press Alt FT	Climb Speed KIAS	RATE OF CLIMB - Feet per Minute					
			TEMPERATURE ~°C					
			-20	0	20	40	50	ISA
3600	SL	79	1047	1022	992	958	940	1000
	2000	79	926	898	864	827	808	880
	4000	79	804	772	735	695	674	759
	6000	79	681	645	604	561	539	638
	8000	79	556	516	473	427	403	518
	10000	79	430	386	340	291	266	397
2900	SL	79	1443	1418	1386	1349	1329	1394
	2000	79	1298	1268	1232	1192	1170	1249
	4000	79	1152	1118	1078	1034	1011	1104
	6000	79	1005	966	922	875	850	959
	8000	79	857	813	765	714	688	815
	10000	79	707	659	607	553	525	671

Balked Landing Climb Gradient w/ Ice Accumulation - Serials w/ IPS

Conditions:

- Power..... Full Throttle
- Mixture..... Set to very top of GREEN ARC
- Flaps..... 50%

• NOTE •

Shaded values indicate associated balked landing climb gradient less than 3.3%

Weight LB	Press Alt FT	Climb Speed KIAS	CLIMB GRADIENT - Feet per Nautical Mile				
			TEMPERATURE ~°C				
			-20	-10	0	5	ISA
3600	SL	88	479	472	464	460	
	2000	88	397	391	383	378	
	4000	88	320	313	306	301	
	6000	88	247	240	233	229	230
	8000	88	178	171	164	160	165
	10000	88	113	107	99	96	103
2900	SL	88	694	685	675	670	
	2000	88	591	582	572	567	
	4000	88	493	485	475	470	
	6000	88	402	393	383	378	380
	8000	88	315	306	297	292	298
	10000	88	233	225	216	211	220

Balked Landing Rate of Climb w/ Ice Accumulation - Serials w/ IPS

Conditions:

- Power Full Throttle
- Mixture.....Set to very top of GREEN ARC
- Flaps.....100%

• NOTE •

Shaded values indicate associated balked landing climb gradient less than 3.3%

Weight LB	Press Alt FT	Climb Speed KIAS	RATE OF CLIMB - Feet per Minute				
			TEMPERATURE ~°C				
			-20	-10	0	5	ISA
3600	SL	88	668	671	672	672	
	2000	88	575	576	575	574	
	4000	88	481	480	477	475	
	6000	88	386	382	377	374	375
	8000	88	289	283	276	272	277
	10000	88	191	183	174	169	179
2900	SL	88	956	963	967	968	
	2000	88	846	850	851	851	
	4000	88	734	735	734	733	
	6000	88	621	619	616	613	614
	8000	88	506	502	496	492	496
	10000	88	390	383	374	369	379

Landing Distance

Landing Distance - 100% Flaps

Conditions:

- Winds Zero
- Runway.....Dry, Level, Paved
- Weight..... 3600 lb (1633 kg)
- Power.....Idle
- Speed Over Obstacle.....79 KIAS

The following factors are to be applied to the computed landing distance for the noted condition.

Headwind: Subtract 10% for each 13 knots headwind.

Tailwind: Add 10% for each 2 knots tailwind.

Grass Runway, Dry: Add 20% of the ground roll distance.

Grass Runway, Wet: Add 60% of the ground roll distance.

Uphill gradient: Subtract 9% of the ground roll distance for every 1% of uphill gradient.

Downhill gradient: Add 27% of the ground roll distance for every 1% of downhill gradient.

Landing Distance Table - Flaps 100%

Press Alt FT	Distance FT	TEMPERATURE ~°C						
		0	10	20	30	40	50	ISA
SL	Gnd Roll	1117	1158	1198	1239	1280	1321	1178
	Total	2447	2505	2565	2625	2685	2747	2535
1000	Gnd Roll	1158	1200	1243	1285	1327	1370	1213
	Total	2506	2567	2630	2693	2757	2821	2585
2000	Gnd Roll	1201	1245	1289	1333	1377	1421	1250
	Total	2568	2633	2699	2765	2832	2900	2636
3000	Gnd Roll	1246	1292	1337	1383	1428	1474	1287
	Total	2635	2702	2771	2841	2911	2983	2691
4000	Gnd Roll	1293	1340	1388	1435	1482	1530	1326
	Total	2705	2776	2848	2922	2996	3070	2748
5000	Gnd Roll	1342	1391	1440	1489	1539	1588	1367
	Total	2779	2854	2930	3007	3085	3163	2808
6000	Gnd Roll	1393	1444	1495	1546	1598	1649	1409
	Total	2857	2936	3016	3097	3179	3261	2871
7000	Gnd Roll	1447	1500	1553	1606	1659	1712	1453
	Total	2941	3024	3108	3193	3279	3365	2937
8000	Gnd Roll	1503	1558	1613	1668	1724	1779	1499
	Total	3029	3116	3205	3294	3384	3475	3006
9000	Gnd Roll	1562	1619	1677	1734	1791	1848	1546
	Total	3122	3214	3307	3401	3496	3592	3079
10,000	Gnd Roll	1624	1683	1743	1802	1862	1921	1595
	Total	3221	3318	3416	3515	3614	3715	3155

Landing Distance - 50% Flaps

Conditions:

- Winds Zero
- Runway..... Dry, Level, Paved
- Weight..... 3600 lb (1633 kg)
- Power..... Idle
- Speed Over Obstacle..... 87 KIAS

The following factors are to be applied to the computed landing distance for the noted condition.

Headwind: Subtract 10% for each 13 knots headwind.

Tailwind: Add 10% per each 2 knots tailwind.

Grass Runway, Dry: Add 20% of the ground roll distance.

Grass Runway, Wet: Add 60% of the ground roll distance.

Uphill gradient: Subtract 9% of the ground roll distance for every 1% of uphill gradient.

Downhill gradient: Add 27% of the ground roll distance for every 1% of downhill gradient.

Landing Distance Table - Flaps 50%

Press Alt FT	Distance FT	TEMPERATURE ~°C						
		0	10	20	30	40	50	ISA
SL	Gnd Roll	1166	1209	1251	1294	1337	1379	1230
	Total	2681	2745	2810	2875	2942	3010	2777
1000	Gnd Roll	1209	1253	1298	1342	1386	1430	1267
	Total	2745	2813	2881	2950	3020	3091	2833
2000	Gnd Roll	1254	1300	1346	1392	1438	1484	1305
	Total	2814	2885	2957	3029	3103	3178	2892
3000	Gnd Roll	1301	1349	1396	1444	1491	1539	1344
	Total	2886	2961	3037	3113	3191	3269	2954
4000	Gnd Roll	1350	1399	1449	1498	1548	1597	1385
	Total	2963	3042	3121	3202	3283	3366	3019
5000	Gnd Roll	1401	1453	1504	1555	1607	1658	1427
	Total	3045	3127	3211	3296	3382	3468	3087
6000	Gnd Roll	1455	1508	1561	1615	1668	1721	1472
	Total	3131	3218	3306	3395	3485	3576	3158
7000	Gnd Roll	1511	1566	1622	1677	1732	1788	1517
	Total	3223	3314	3407	3501	3595	3691	3233
8000	Gnd Roll	1570	1627	1685	1742	1800	1857	1565
	Total	3320	3416	3514	3612	3712	3812	3312
9000	Gnd Roll	1631	1691	1751	1810	1870	1930	1614
	Total	3423	3524	3627	3731	3835	3941	3395
10,000	Gnd Roll	1695	1758	1820	1882	1944	2006	1666
	Total	3532	3639	3747	3856	3966	4077	3481

Landing Distance - Flaps UP

Conditions:

- Winds Zero
- Runway..... Dry, Level, Paved
- Weight..... 3600 lb (1633 kg)
- Power..... Idle
- Speed Over Obstacle..... 94 KIAS

The following factors are to be applied to the computed landing distance for the noted condition.

Headwind: Subtract 10% for each 13 knots headwind.

Tailwind: Add 10% per each 2 knots tailwind up to 10 knots.

Grass Runway, Dry: Add 20% of the ground roll distance.

Grass Runway, Wet: Add 60% of the ground roll distance.

Uphill gradient: Subtract 9% of the ground roll distance for every 1% of uphill gradient.

Downhill gradient: Add 27% of the ground roll distance for every 1% of downhill gradient.

Landing Distance Table - Flaps 0%

Press Alt FT	Distance FT	TEMPERATURE ~°C						
		0	10	20	30	40	50	ISA
SL	Gnd Roll	1365	1415	1465	1515	1565	1615	1440
	Total	3165	3241	3319	3398	3478	3558	3280
1000	Gnd Roll	1415	1467	1519	1571	1623	1675	1483
	Total	3242	3323	3404	3487	3571	3656	3347
2000	Gnd Roll	1468	1522	1576	1629	1683	1737	1527
	Total	3324	3409	3495	3582	3670	3759	3418
3000	Gnd Roll	1523	1579	1635	1690	1746	1802	1574
	Total	3411	3500	3590	3682	3775	3868	3491
4000	Gnd Roll	1581	1638	1696	1754	1812	1870	1621
	Total	3503	3597	3692	3788	3885	3984	3569
5000	Gnd Roll	1641	1701	1761	1821	1881	1941	1671
	Total	3600	3699	3799	3900	4003	4106	3650
6000	Gnd Roll	1703	1766	1828	1890	1953	2015	1723
	Total	3703	3807	3913	4019	4127	4236	3736
7000	Gnd Roll	1769	1834	1899	1963	2028	2093	1776
	Total	3813	3922	4033	4145	4258	4373	3825
8000	Gnd Roll	1838	1905	1972	2040	2107	2174	1832
	Total	3929	4044	4161	4279	4398	4518	3919
9000	Gnd Roll	1910	1980	2049	2119	2189	2259	1890
	Total	4052	4173	4296	4420	4545	4671	4018
10,000	Gnd Roll	1985	2058	2130	2203	2276	2348	1950
	Total	4183	4310	4439	4569	4701	4833	4122

Landing Distance w/ Ice Accumulation - 50% Flaps- Serials w/ IPS

Conditions:

- Winds Zero
- Runway.....Dry, Level, Paved
- Weight.....3600 lb (1633 kg)
- Power.....Idle
- Speed Over Obstacle.....86 KIAS

The following factors are to be applied to the computed landing distance for the noted condition.

Headwind: Subtract 10% for each 13 knots headwind.

Tailwind: Add 10% for each 2 knots tailwind up to 10 knots.

Grass Runway, Dry: Add 20% of the ground roll distance.

Grass Runway, Wet: Add 60% of the ground roll distance.

Uphill gradient: Subtract 9% of the ground roll distance for every 1% of uphill gradient.

Downhill gradient: Add 27% of the ground roll distance for every 1% of downhill gradient.

• NOTE •

Shaded values indicate associated balked landing climb gradient less than 3.3%

Normal landings will be completed with the flaps set to 50%.

Landing Distance Table - Flaps 50% w/ Ice Accumulation - Serials w/ IPS

Press Alt FT	Distance FT	TEMPERATURE ~°C				
		-20	-10	0	5	ISA
SL	Gnd Roll	1356	1409	1463	1489	
	Total	2833	2908	2984	3022	
1000	Gnd Roll	1406	1461	1517	1544	
	Total	2903	2981	3061	3101	
2000	Gnd Roll	1458	1516	1573	1602	
	Total	2977	3059	3143	3185	
3000	Gnd Roll	1513	1572	1632	1662	
	Total	3055	3142	3229	3274	
4000	Gnd Roll	1570	1632	1694	1725	
	Total	3138	3229	3321	3367	
5000	Gnd Roll	1629	1694	1758	1790	1791
	Total	3225	3321	3418	3466	3467
6000	Gnd Roll	1692	1758	1825	1859	1846
	Total	3318	3418	3520	3571	3552
7000	Gnd Roll	1757	1826	1896	1930	1903
	Total	3416	3522	3628	3682	3641
8000	Gnd Roll	1825	1897	1969	2005	1963
	Total	3520	3631	3743	3800	3733
9000	Gnd Roll	1896	1971	2046	2084	2025
	Total	3630	3746	3864	3924	3831
10,000	Gnd Roll	1971	2049	2127	2166	2089
	Total	3746	3869	3993	4055	3933

Section 6: Weight and Balance

Table of Contents

Introduction.....	3
Weight and Balance Record.....	3
Weight and Balance Data.....	3
Loading Instructions	4
Weight and Balance Loading Form	5
Loading Data	7
Serials w/ IPS: Deicing Fluid Moment Values	8
Moment Values	10
Weight & Balance Record	11
Equipment List.....	11

Intentionally Left Blank


Introduction

This section describes the procedure for calculating the weight and moment for various operations. A comprehensive list of all equipment available for this airplane is included at the back of this section.

It should be noted that specific information regarding the weight, arm, moment, and installed equipment for this airplane as delivered from the factory can be found at the back of this section.

It is the responsibility of the pilot to ensure that the airplane is loaded properly and that all changes to the basic empty weight and center of gravity are recorded.

Figure 6-1: Airplane Weighing

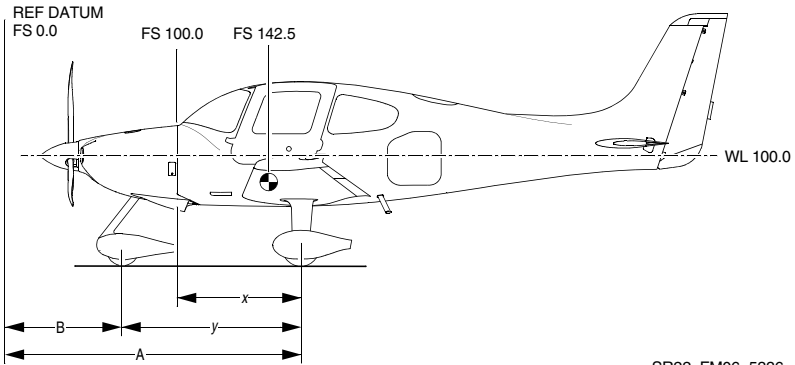

SR22_FM06_5336

Basic empty weight, moment, and center of gravity are provided in inches aft of datum, where 0 inches datum is 100.0 inches forward of the cabin fire-wall.

• NOTE •

Refer to AMM Chapter 8: Leveling & Weighing for instructions.

Function information on displays do not supersede information in AFM. In the event of conflict, the AFM takes precedence.

Weight and Balance Record

Weight and Balance Data

Refer to “As-Delivered” Weight and Balance Data.

Loading Instructions

It is the responsibility of the pilot to ensure that the airplane is properly loaded and operated within the prescribed weight and center of gravity limits. The following information enables the pilot to calculate the total weight and moment for the loading. The calculated moment is then compared to the Moment Limits chart or table (Figure 6-4) for a determination of proper loading.

Airplane loading determinations are calculated using the Weight & Balance Loading Form (Figure 6-2), the Loading Data chart and table (Figure 6-3), and the Moment Limits chart and table (Figure 6-4).

1. Basic Empty Weight – Enter the current Basic Empty Weight and Moment from the Weight & Balance Record (Figure 6-5).
2. Front Seat Occupants – Enter the total weight and moment/1000 for the front seat occupants from the Loading Data (Figure 6-3).
3. Rear Seat Occupants – Enter the total weight and moment/1000 for the rear seat occupants from the Loading Data (Figure 6-3).
4. Baggage – Enter weight and moment for the baggage from the Loading Data (Figure 6-3).

• NOTE •

If desired, subtotal the weights and moment/1000 from steps 1 through 4. This is the Zero Fuel Condition. It includes all useful load items excluding fuel.

5. Fuel Loading – Enter the weight and moment of usable fuel loaded on the airplane from the Loading Data (Figure 6-3).

• NOTE •

Subtotal the weight and moment/1000. This is the Ramp Condition or the weight and moment of the aircraft before taxi.

6. Fuel for start, taxi, and run-up – This value is pre-entered on the form. Normally, fuel used for start, taxi, and run-up is approximately 9 pounds at an average moment/1000 of 1.394.
7. Takeoff Condition – Subtract the weight and moment/1000 for step 6 (start, taxi, and run-up) from the Ramp Condition values (step 5) to determine the Takeoff Condition weight and moment/1000.

• NOTE •

The total weight at takeoff must not exceed the maximum weight limit of 3600 pounds. The total moment/1000 must not be above the maximum or below the minimum moment/1000 for the Takeoff Condition Weight as determined from the Moment Limits chart or table (Figure 6-4).

Weight and Balance Loading Form

• NOTE •

The Takeoff Condition Weight must not exceed 3600 lb.

The Takeoff Condition Moment must be within the Minimum Moment to Maximum Moment range at the Takeoff Condition Weight. (Refer to Moment Limits).

RELATED TABLE/FIGURE:

For Center of Gravity Envelope, refer to [Section 2: Limitations](#).

Serial Num:

Date:.....

Reg. Num:

Initials:.....

Figure 6-2: Weight & Balance Loading Form


Item	Description	Weight LB	Moment/1000
1.	Basic Empty Weight Includes unusable fuel & full oil		
2.	Front Seat Occupants Pilot & Passenger (total)		
3.	Rear Seat Occupants		
4.	Baggage Area 130 lb maximum		
5.	Serials w/ IPS: Deicing Fluid Loading 8.5 Gallon @ 9.2 lb/gal. Maximum		
6.	Zero Fuel Condition Weight Sub total item 1 thru 5 3400 lb maximum		
7.	Fuel Loading 92 Gallon @ 6.0 lb/gal. Maximum		
8.	Ramp Condition Weight Sub total items 6 and 7		
9.	Fuel for start, taxi, and run-up Normally 9 lb at average moment of 1394		

Item	Description	Weight LB	Moment/1000
10.	Takeoff Condition Weight Subtract item 9 from item 8		

Loading Data

Use the following chart or table to determine the moment/1000 for fuel and payload items to complete the Loading Form.

Figure 6-3: Loading Chart

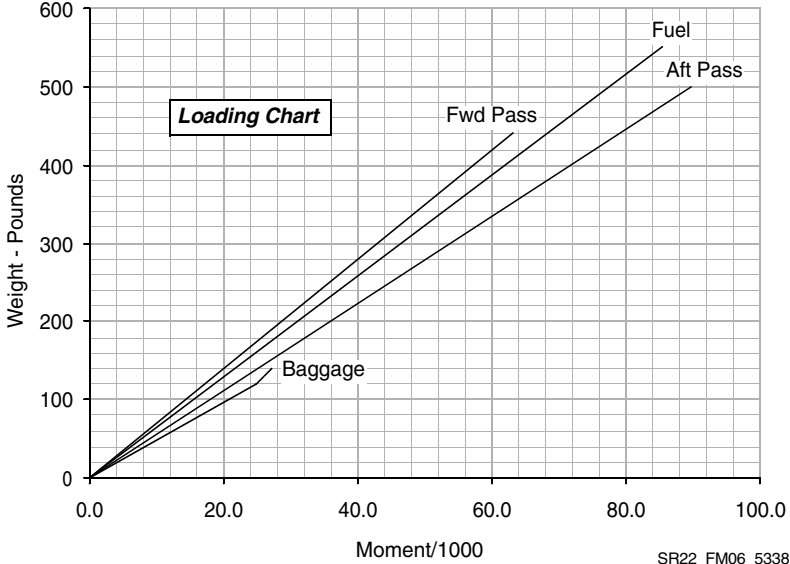

SR22_FM06_5338

Weight LB	Fwd Pass FS 143.5	Aft Pass FS 180.0	Baggage FS 208.0	Fuel FS 154.9	Weight LB	Fwd Pass FS 143.5	Aft Pass FS 180.0	Fuel FS 154.9
20	2.9	3.6	4.2	3.1	300	43.1	54.0	46.5
40	5.7	7.2	8.3	6.2	320	45.9	57.6	49.6
60	8.6	10.8	12.5	9.3	340	48.8	61.2	52.7
80	11.5	14.4	16.6	12.4	360	51.7	64.8	55.8
100	14.4	18.0	20.8	15.5	380	54.5	68.4	58.9
120	17.2	21.6	25.0	18.6	400	57.4	72.0	62.0
140	20.1	25.2	27.04*	21.7	420	60.3	75.6	65.1
160	23.0	28.8		24.8	440	63.1	79.2	68.2
180	25.8	32.4		27.9	460		82.8	71.3
200	28.7	36.0		31.0	480		86.4	74.4
220	31.6	39.6		34.1	500		90.0	77.5
240	34.4	43.2		37.2	520			80.5
260	37.3	46.8		40.3	552**			85.5
280	40.2	50.4		43.4				
*130 lb Maximum					**92 U. S. Gallons Usable			

Serials w/ IPS: Deicing Fluid Moment Values

Use the following table to determine the Moment/1000 for deicing fluid to complete the Loading Form in (Figure 6-2).

- Total fluid tank capacity is 8.5 gallons (32 L).
- Deicing fluid weight is 9.2 pounds per gallon.

*Minimum Dispatch Fluid Qty

**Usable Tank Capacity

Gallons	Weight LB	Mom/1000@ Tank (FS148.0)
0.1	0.9	0.14
0.2	1.8	0.27
0.3	2.8	0.41
0.4	3.7	0.54
0.5	4.6	0.68
0.6	5.5	0.82
0.7	6.4	0.95
0.8	7.4	1.09
0.9	8.3	1.23
1.0	9.2	1.36
1.1	10.1	1.50
1.2	11.0	1.63
1.3	12.0	1.77
1.4	12.9	1.91
1.5	13.8	2.04
1.6	14.7	2.18
1.7	15.6	2.31
1.8	16.6	2.45
1.9	17.5	2.59
2.0	18.4	2.72
2.1	19.3	2.86
2.2	20.2	3.00

Gallons	Weight LB	Mom/1000@ Tank (FS148.0)
2.3	21.2	3.13
2.4	22.1	3.27
2.5	23.0	3.40
2.6	23.9	3.54
2.7	24.8	3.68
2.8	25.8	3.81
2.9	26.7	3.95
3.0	27.6	4.08
3.1	28.5	4.22
3.2	29.4	4.36
3.3	30.4	4.49
3.4	31.3	4.63
3.5	32.2	4.77
3.6	33.1	4.90
3.7	34.0	5.04
3.8	35.0	5.17
3.9	35.9	5.31
4.0	36.8	5.45
4.1	37.7	5.58
4.2	38.6	5.72
4.3	39.6	5.85
4.4	40.5	5.99


Gallons	Weight LB	Mom/1000@ Tank (FS148.0)
4.5	41.4	6.13
4.6	42.3	6.26
4.7	43.2	6.40
4.8	44.2	6.54
4.9	45.1	6.67
5.0*	46.0	6.81
5.1	46.9	6.94
5.2	47.8	7.08
5.3	48.8	7.22
5.4	49.7	7.35
5.5	50.6	7.49
5.6	51.5	7.62
5.7	52.4	7.76
5.8	53.4	7.90
5.9	54.3	8.03
6.0	55.2	8.17
6.1	56.1	8.31
6.2	57.0	8.44
6.3	58.0	8.58
6.4	58.9	8.71
6.5	59.8	8.85
6.6	60.7	8.99
6.7	61.6	9.12
6.8	62.6	9.26
6.9	63.5	9.40
7.0	64.4	9.53
7.1	65.3	9.67
7.2	66.2	9.80
7.3	67.2	9.94

Gallons	Weight LB	Mom/1000@ Tank (FS148.0)
7.4	68.1	10.08
7.5	69.0	10.21
7.6	69.9	10.35
7.7	70.8	10.48
7.8	71.8	10.62
7.9	72.7	10.76
8.0**	73.6	10.89
8.1	74.5	11.03
8.2	75.4	11.17
8.3	76.4	11.30
8.4	77.3	11.44
8.5	78.2	11.57

Moment Values

Use the following chart or table to determine if the weight and moment from the completed Weight and Balance Loading Form (Figure 6-2) are within limits.

Figure 6-4: Moment Limits Chart

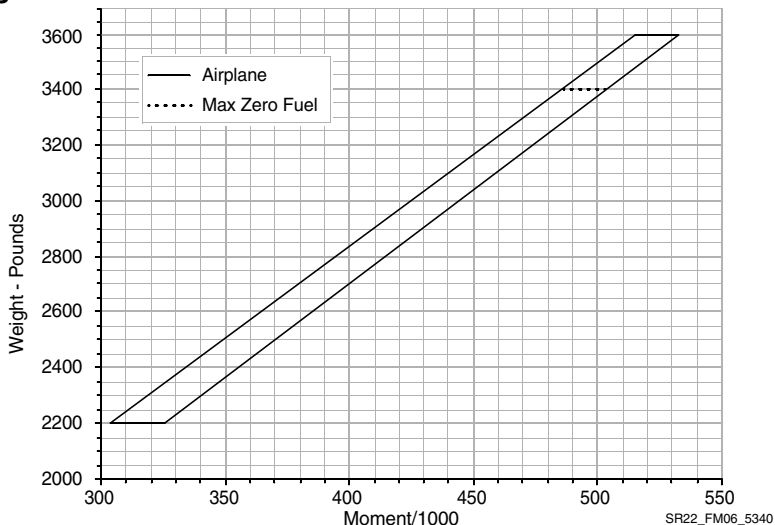

Weight LB	Moment/1000		Weight LB	Moment/1000	
	Minimum	Maximum		Minimum	Maximum
2200	304	326	2950	414	437
2250	311	333	3000	422	444
2300	318	341	3050	430	452
2350	326	348	3100	438	459
2400	333	355	3150	445	467
2450	340	363	3200	453	474
2500	347	370	3250	461	481
2550	354	378	3300	469	489
2600	362	385	3350	477	496
2650	369	392	*3400	484	504
2700	375	400	3450	494	511
2750	383	407	3500	501	519
2800	390	415	3550	508	526
2850	398	422	3600	515	533
2900	406	430			

*NOTE: Maximum zero fuel weight.

Weight & Balance Record

Use this form to maintain a continuous history of changes and modifications to airplane structure or equipment affecting weight and balance:

Figure 6-5: Weight & Balance Record Form

Serial Num:			Reg. Num:			Page ___ of ___		
Date	Item No.		Description of Article or Modification	Weight Change Added (+) or Removed (-)			Running Basic Empty Weight	
	In	Out		WT LB	ARM IN.	MOM/ 1000	WT LB	MOM/ 1000
			As-Delivered					

Equipment List

This list will be determined after the final equipment has been installed in the aircraft.

Intentionally Left Blank

Section 7: Systems Description

Table of Contents

• NOTE •

Content for Section 7: Systems Description is located in the Pilot's Information Manual (PIM).

Intentionally Left Blank

Section 8: Handling and Servicing

Table of Contents

Introduction.....	3
Operator’s Publications	3
Service Publications	3
Obtaining Publications.....	4
Airplane Records and Certificates.....	4
Airworthiness Directives	5
Airplane Inspection Periods.....	5
Annual Inspection.....	5
100-Hour Inspection	6
Cirrus Progressive Inspection Program.....	6
Ground Handling	7
Application of External Power	7
Towing.....	8
Taxiing.....	9
Parking	9
Tie Down	11
Leveling	11
Jacking	11
Servicing.....	12
Landing Gear Servicing.....	12
Brake Servicing	12
Brake Maintenance	12
Tire Inflation.....	13
Propeller Servicing	13
Serials w/ Hartzell Propeller w/Composite Blades:	13
Engine Oil Servicing	13
Fuel System Servicing.....	15
Battery Service	17
Oxygen System Servicing	18
Key Fob Battery Replacement	18
ELT Servicing.....	18
Serials w/ IPS: IPS Storage and Service.....	20
Cleaning Exterior Surfaces.....	22
Painted Surfaces	22
Exterior Windshield and Windows.....	23
Enhanced Vision System Sensor Lenses (Optional).....	23

Engine Compartment.....	24
Landing Gear.....	24
Recommended Exterior Cleaning Products	25
Care of Graphics	26
Cleaning Interior Surfaces	30
Interior Windshield and Windows	30
Instrument Panel and Electronic Display Screens.....	31
Headliner and Trim Panels	31
Leather Upholstery and Seats	32
Carpets.....	32

Introduction

This section provides general guidelines for handling, servicing, and maintaining your aircraft. In order to ensure continued safe and efficient operation of your airplane, keep in contact with your Authorized Cirrus Service Center to obtain the latest information pertaining to your aircraft.

Operator's Publications

The FAA Approved Airplane Flight Manual is provided at delivery. Additional or replacement copies may be obtained from Cirrus.

Service Publications

The following service publications are available for purchase from Cirrus:

- Airplane Maintenance Manual (AMM) – Maintenance Manual divided into chapters as specified by GAMA and ATA covering inspection, servicing, maintenance, troubleshooting, and repair of the airplane structure, systems, and wiring. Revision Service for this manual is also available. A current copy of the AMM is provided at delivery.
- Wiring Manual – Manual covering maintenance, troubleshooting, testing, and repair of the airplane electrical wiring.
- Illustrated Parts Catalog (IPC) – Catalog prepared to aid operators and mechanics to identify and procure replacement airplane parts.
- CAPS Component Maintenance Manual (CMM) – Maintenance Manual with Illustrated Parts List prepared to enable an authorized Cirrus CAPS technician to restore the system to a functional condition.
- Engine Operators and Maintenance Manual – Cirrus provides a Continental Motors Engine Operator's and Maintenance Manual at the time of delivery. Engine and engine accessory overhaul manuals can be obtained from the original equipment manufacturer.
- Avionics Component Operator and Maintenance Manuals – Cirrus provides all available operator's manuals at the time of delivery. Maintenance manuals, if available, may be obtained from the original equipment manufacturer.

Cirrus publishes Service Bulletins, Service Advisories, and Service Information Letters. Copies can be obtained from Cirrus at www.cirrusaircraft.com.

- Service Bulletins – are of special importance. When a Service Bulletin affecting your plane is published, comply with it promptly.
- Service Advisory Notices – are used to notify you of optional Service Bulletins, supplier Service Bulletins or Service Information Letters affecting your airplane, and maintenance data or corrections not

requiring a Service Bulletin. Pay careful attention to the Service Advisory information.

Obtaining Publications

Airplane Flight Manuals and aircraft service publications can be obtained from Cirrus at www.cirrusaircraft.com, or the Cirrus Connection at www.cirrusconnection.com.

Airplane Records and Certificates

The Federal Aviation Administration (FAA) requires that certain data, certificates, and licenses be displayed or carried aboard the airplane at all times. Additionally, other documents must be made available upon request. The mnemonic acronym “ARROW” is often used to help remember the required documents.

RELATED TABLE/FIGURE:

Refer to “Table 1: Required Documents”.

• NOTE •

Owners of aircraft not registered in the United States should check with the registering authority for additional requirements.

Table 1: Required Documents

Required Documents		Note
A	Airworthiness Certificate FAA Form 8100-2	Must be displayed at all times.
R	Registration Certificate FAA Form 8050-3	Must be in the aircraft for all operations.
R	Radio Station License FCC Form 556	Required only for flight operations outside the United States.
O	Operating Instructions	FAA Approved Airplane Flight Manual and associated aircraft placards fulfill this requirement.
W	Weight & Balance Data	Included in FAA Approved Airplane Flight Manual. Data must include current empty weight, CG, and equipment list.

Other Documents	Note
Airplane Logbook	Must be made available upon request.
Engine Logbook	Must be made available upon request.
Pilot's Checklist	Available in cockpit at all times.

Airworthiness Directives

The Federal Aviation Administration (FAA) publishes Airworthiness Directives (ADs) that apply to specific aircraft and aircraft appliances or accessories. ADs are mandatory changes and must be complied with within a time limit set forth in the AD. Operators should periodically check with Cirrus Service Centers or A&P mechanic to verify receipt of the latest issued AD for their airplane.

Airplane Inspection Periods

• NOTE •

14 CFR 1.1 defines time in service, with respect to maintenance time records, as “the time from the moment an aircraft leaves the surface of the earth until it touches it at the next point of landing.”

The Flight hours meter is displayed on the Status & Info synoptic page and should be used for tracking maintenance time intervals.

The inspection items specified in the Annual/100 Inspection have been determined by the average aircraft use rate of the typical owner. Non-commercially operated aircraft that are flown significantly more than 100 hours per year should consider additional inspections commensurate with the hours flown. 100-Hour

Inspection or enrollment in a Progressive Inspection Program should be considered in addition to the normally required Annual Inspection. The Annual Inspection interval may also be shortened to accommodate high utilization rate.

Annual Inspection

Unless enrolled in a Progressive Inspection Program, The U.S. Federal Aviation Regulations require all civil aircraft must undergo a thorough Annual Inspection every twelve calendar months. Annual Inspections are due on the last day of the twelfth month following the last Annual Inspection. For example: If an Annual Inspection was performed on 19 November 2015, the next Annual Inspection will be due 30 November 2016. Annual Inspections must be accomplished regardless of the number of hours flown

the previous year and can only be performed by a licensed Airframe and Powerplant (A&P) mechanic holding an Inspection Authorization (IA). Annual inspections can only be performed by facilities approved by Cirrus. The inspection is listed, in detail, in Chapter 5 of the Airplane Maintenance Manual.

100-Hour Inspection

If the airplane is used to carry persons or provide flight instruction for hire, the Federal Aviation Regulations require that the airplane undergo a 100-Hour Inspection every 100 hours of flight operation in addition to the Annual Inspection requirement. The scope of the 100-Hour Inspection is identical to the Annual Inspection, except that it can be accomplished by a licensed A&P mechanic. The 100-hour interval may be exceeded by not more than 10 flight hours in order to reach a place where the inspection can be accomplished. Any flight hours used to reach an inspection station must be deducted from the next 100-Hour Inspection interval. The inspection is listed, in detail, in Chapter 5 of the Airplane Maintenance Manual.

Cirrus Progressive Inspection Program

In lieu of the above requirements, an airplane may be inspected using a Progressive Inspection Program in accordance with the Federal Aviation Regulation Part 91.409(d).

The Cirrus Progressive Inspection Program provides for the complete inspection of the airplane utilizing a five-phase cyclic inspection program.

400 flight hours: A total of eight inspections are accomplished over the course of 400 flight hours, with an inspection occurring every 50 flight hours.

800 flight hours: A total of sixteen inspections are accomplished over the course of 800 flight hours, with an inspection occurring every 50 flight hours.

The inspection items to be covered in the Progressive Inspection are very similar to the Annual Inspection items. The Progressive Inspection will accomplish a full Inspection of the airplane at 400 (or 800) flight hours or at 12 calendar months.

The inspections are listed, in detail, in Chapter 5 of the Airplane Maintenance Manual.

Ground Handling

Application of External Power

An external power receptacle, located just aft of the cowl on the left side of the airplane, permits the use of an external power unit for cold weather starting and maintenance procedures.

• WARNING •

If external power will be used to start engine, keep yourself, others, and power unit cables well clear of the propeller rotation plane.

To Apply External Power to Airplane

• CAUTION •

In accordance with the manufacturer's recommendation, external power should not be used to start the airplane with a dead battery or to charge a dead or weak battery in the airplane. The battery must be removed from the airplane and battery maintenance performed in accordance with the appropriate AMM procedures.

1. Ensure external power unit is regulated to 28 VDC.
2. Verify BAT power switches are set to OFF.
3. Plug external power unit into the receptacle.
4. Set BAT 1 switch to ON. 28 VDC from the external power unit will energize the main distribution and essential distribution buses. The airplane may now be started or electrical equipment operated.

• CAUTION •

If maintenance on avionics systems is to be performed, it is recommended that external power be used.

To Remove External Power from Airplane

1. If battery power is no longer required, set BAT 1 switch 'off.'
2. Pull external power unit plug.

Towing

The airplane may be moved on the ground by the use of the nose wheel steering bar that is stowed in the rear baggage compartment or by power equipment that will not damage or excessively strain the nose gear assembly. The steering bar is engaged by inserting it into lugs just forward of the nose wheel axle.

• CAUTION •

While pushing the aircraft backward, the tow bar must be installed to keep the nose wheel from turning abruptly.

Do not use the vertical or horizontal control surfaces or stabilizers to move the airplane. If a tow bar is not available, use the wing roots as push points.

Do not push or pull on control surfaces or propeller to maneuver the airplane.

Do not tow the airplane when the main gear is obstructed with mud or snow.

If the airplane is to be towed by vehicle, do not turn the nose wheel more than 90 degrees either side of center or structural damage to the nose gear could result.

To Tow Airplane

• CAUTION •

Be especially cognizant of hangar door clearances.

1. Refer to [Section 1: General, "Airplane Three View"](#) for turning radius clearances.
2. Insert tow bar into the lugs just forward of the nose wheel axle.
3. Release parking brake.
4. Remove chocks.
5. Move airplane to desired location.
6. Set parking brake in accordance with [Parking](#) procedure in this section.
7. Install chocks.
8. Remove tow bar.

To obtain a minimum radius turn during ground handling, the airplane may be rotated around either main landing gear by pressing down on the fuselage just forward of the horizontal stabilizer to raise the nose wheel off the ground.

Taxiing

Before attempting to taxi the airplane, ground personnel should be instructed and authorized by the owner to taxi the airplane. Instruction should include engine starting and shutdown procedures in addition to taxi and steering techniques.

• **CAUTION** •

Verify that taxi and propeller wash areas are clear before beginning taxi.

Do not operate the engine at high RPM when running up or taxiing over ground containing loose stones, gravel, or any loose material that may cause damage to the propeller blades.

Taxi with minimum power needed for forward movement. Excessive braking may result in overheated or damaged brakes.

To Taxi Airplane

1. Remove chocks.
2. Start engine in accordance with [Engine Start](#) procedure.
3. Release parking brake.
4. Advance throttle to initiate taxi. Immediately after initiating taxi, apply the brakes to determine their effectiveness. To ascertain steering effectiveness during taxi, use differential braking to make slight turns.

• **CAUTION** •

Observe wing clearance when taxiing near buildings or other stationary objects. If possible, station an observer outside the airplane.

Avoid holes and ruts when taxiing over uneven ground.

5. Taxi airplane to desired location.
6. Shut down engine in accordance with [Shutdown](#) procedure.
7. Set parking brake in accordance with [Parking](#) procedure in this section.
8. Install chocks.
9. In gusty or stormy weather, moor airplane.

Parking

The airplane should be parked to protect the airplane from weather and to prevent it from becoming a hazard to other aircraft. The parking brake may release or exert excessive pressure because of heat buildup after heavy braking or during wide temperature swings. Therefore, if the airplane is to be left unattended or is to be left overnight, chock and tie down the airplane.

If the airplane will be parked for 30 days or more, pull the CONV SYS 1 and CONV SYS 2 circuit breakers to prevent excessive discharge from battery 1.

To Park Airplane

1. Position airplane on level surface and headed into the wind.
2. Retract flaps.

• CAUTION •

Do not set parking brake during cold weather, when accumulated moisture may freeze brakes, or when brakes are overheated.

3. Set parking brake by first applying brake pressure using the toe brakes and then pulling the PARK BRAKE knob aft.
4. Install chocks.
5. In gusty or stormy weather, tie down airplane in accordance with [Tie Down](#) procedure in this section.
6. Install a pitot probe cover.
7. Ensure cabin and baggage doors are locked when the airplane is left unattended.

Tie Down

The airplane should be moored for immovability, security, and protection. FAA Advisory Circular AC 20-35C, Tie-down Sense, contains additional information regarding preparation for severe weather, tie down, and related information.

To Tie Down (Moor) Airplane

1. Position airplane on level surface and headed into the wind.
2. Retract flaps.

• CAUTION •

Do not set parking brake during cold weather, when accumulated moisture may freeze brakes, or when brakes are overheated.

3. Set parking brake in accordance with [Parking](#) procedure in this section.
4. Install chocks.
5. Secure tie-down ropes to the wing tie-down rings and to the tail ring at approximately 45-degree angles to the ground.

• CAUTION •

Anchor points for wing tiedowns should not be more than 18 feet apart to prevent eyebolt damage in heavy winds.

Use bowline knots, square knots, or the midshipman's hitch (also known as a taut line hitch or half-hitch). Do not use plain slip-knots.

Regardless of which tie-down style is employed, ensure that the lines are taut and any slack is eliminated.

Leveling

Refer to AMM Chapter 8: Leveling & Weighing, Weighing the Airplane procedures for instructions and illustration.

Jacking

Refer to AMM Chapter 7: Lifting & Shoring, Jacking the Airplane procedures for list of required tools and for illustration.

Servicing

Landing Gear Servicing

The main landing gear wheel assemblies use 15 x 6.00 x 6 tubeless tires. The nose wheel assembly uses a 5.00 x 5 tubeless tire.

Always keep tires inflated to the rated pressure to obtain optimum performance and maximum service. The landing gear struts do not require servicing. With the exception of replenishing brake fluid, wheel and brake servicing must be accomplished in accordance with AMM procedures.

Brake Servicing

To Replenish Brake Fluid

The brake system is filled with MIL-PRF-87257 hydraulic brake fluid. The fluid level should be checked at every oil change and at the annual/100-hour inspection, replenishing the system when necessary. The brake reservoir is located on the right side of the battery support frame.

• **NOTE** •

If the entire system must be refilled, refer to AMM Chapter 12:
Servicing, Brake Fluid Replenishing.

1. Install chocks.
2. Release parking brake.
3. Remove top engine cowling to gain access to hydraulic fluid reservoir.
4. Clean reservoir cap and area around cap before opening reservoir cap.
5. Remove cap and add MIL-PRF-87257 hydraulic fluid as necessary to fill reservoir.
6. Install cap, inspect area for leaks, and then install and secure engine cowling.

Brake Maintenance

The brake assemblies and linings should be checked at every oil change (50 hours) for general condition, evidence of overheating, and deterioration.

The aircraft should not be operated with overheated, damaged, or leaking brakes. Conditions include, but are not limited to:

- Leaking brake fluid at the caliper. This can be observed by checking for evidence of fluid on the ground or deposited on the underside of the wheel fairing. Wipe the underside of the fairing with a clean, white cloth and inspect for red colored fluid residue.
- Overheated components, indicated by discoloration or warping of the disk rotor. Excessive heat can cause the caliper components to discolor or cause yellowing of the part identification label.

Tire Inflation

For maximum service from the tires, keep them inflated to the proper pressure. When checking tire pressure, examine the tires for wear, cuts, nicks, bruises and excessive wear.

To Inflate Tires

1. Open access doors on wheel pants to gain access to valve stems. It may be necessary to move airplane to get valve stem aligned with the access hole.
2. Remove valve stem cap and verify tire pressure with a dial-type tire pressure gauge.
3. Inflate nose tire to 30 - 35 psi (207 - 241 kPa) and main wheel tires to 60 - 65 psi (414 - 448 kPa).
4. Replace valve stem cap and close access doors.

Propeller Servicing

The spinner and backing plate should be cleaned and inspected for cracks frequently. Before each flight, the propeller should be inspected for nicks, scratches, and corrosion. If found, they should be repaired as soon as possible by a rated mechanic, since a nick or scratch causes an area of increased stress which can lead to serious cracks or the loss of a propeller tip. The back face of the blades should be painted when necessary with flat black paint to retard glare. To prevent corrosion, the surface should be cleaned and waxed periodically.

Refer to the shot peening requirement described in [Section 2: Limitations, "Propeller"](#).

Serials w/ Hartzell Propeller w/Composite Blades:

Propeller blades are painted with a durable specialized coating that is resistant to abrasion. If this coating becomes eroded, it is necessary to repaint the blades to provide proper erosion protection. Painting should be performed by an authorized propeller repair station.

It is permissible to perform a blade touch-up with aerosol paint in accordance with Hartzell Propeller Owner's Manual, p/n 145, revision 1 or later.

Engine Oil Servicing

The oil capacity of the Continental Motors IO-550-N engine is 8 quarts.

It is recommended that the oil be changed every 50 hours and sooner under unfavorable operating conditions.

For first 25 hours of operation or until oil consumption stabilizes, use straight mineral oil conforming to MIL-C-6529. If engine oil must be added to the factory installed oil, add only MIL-C-6529 straight mineral oil.

• NOTE •

Mineral oil conforming to MIL-C-6529 Type II contains a corrosion preventive additive and must not be used for more than 25 hours or six months, whichever occurs first. If oil consumption has not stabilized in this time, drain the mineral oil, replace the oil filter and replace the discarded mineral oil with SAE J1966 aviation oil.

After Engine Break-In: Use only oils conforming to SAE J 1899 (Ashless Dispersant Lubrication Oil).

Refer to Section 2, [Powerplant Limitations](#), for approved oil grades.

An oil filler cap and dipstick are located at the left rear of the engine and are accessible through an access door on the top left side of the engine cowling.

• CAUTION •

The engine should not be operated with less than six quarts of oil. Seven quarts (dipstick indication) is recommended for extended flights.

To Check and Add Oil

1. Open access door on upper left-hand side of cowl. Pull dipstick and verify oil level.
2. If oil level is below 6 quarts (5.7 liters), remove filler cap and add oil through filler as required to reach 6 - 8 quarts (5.7 - 7.6 liters).
3. Verify oil level and install dipstick and filler cap.
4. Close and secure access panel.

For Engine Break-In

For first 25 hours of operation or until oil consumption stabilizes, use straight mineral oil conforming to MIL-C-6529. If engine oil must be added to the factory installed oil, add only MIL-C-6529 straight mineral oil. Mineral oil conforming to MIL-C-6529 Type II contains a corrosion preventive additive and must not be used for more than 25 hours or six months, whichever occurs first. If oil consumption has not stabilized in this time, drain the mineral oil, replace the oil filter and replace the discarded mineral oil with SAE J1966 aviation oil.

For engine break-in, cruise at a minimum of 75% power until the engine has been operated for at least 25 hours or until oil consumption has stabilized. Operation at this higher power will ensure proper seating of the rings, is applicable to new engines, and engines in service following cylinder replacement or top overhaul of one or more cylinders.

Fuel System Servicing

Observe all safety precautions required when handling gasoline. Fuel fillers are located on the forward slope of the wing. Each wing holds a maximum of 46.0 U.S. gallons. When using less than the standard 92.0 gallon capacity, fuel should be distributed equally between each side.

• **WARNING** •

During fueling, have a fire extinguisher available.

Ground fuel nozzle and fuel truck to airplane exhaust pipe and ground fuel truck or cart to suitable earth ground.

Do not fill tank within 100 feet (30.5 meters) of any energized electrical equipment capable of producing a spark.

Smoking or open flames are prohibited within 100 ft (30.5 m) of airplane or refuel vehicle.

Do not operate radios or electrical equipment during refuel operations.

Do not operate any electrical switches.

To Refuel Airplane

• **CAUTION** •

Aviation grade 100 LL (blue) or 100 (green) fuel is the minimum octane approved for use in this airplane.

1. Place fire extinguisher near fuel tank being filled.
2. Connect ground wire from refuel nozzle to airplane exhaust, from airplane exhaust to fuel truck or cart, and from fuel truck or cart to a suitable earth ground.
3. Place rubber protective cover over wing around fuel filler.

• NOTE •

Do not permit fuel nozzle to come in contact with bottom of fuel tanks. Keep fuel tanks at least half full at all times to minimize condensation and moisture accumulation in tanks. In extremely humid areas, the fuel supply should be checked frequently and drained of condensation to prevent possible distribution problems.

4. Remove fuel filler cap and fuel airplane to desired level.

• NOTE •

If fuel is going to be added to only one tank, the tank being serviced should be filled to the same level as the opposite tank. This will aid in keeping fuel loads balanced.

Refer to [Section 2: Limitations, "Fuel"](#) for maximum fuel imbalance information.

5. Remove nozzle, install filler cap, and remove protective cover.
6. Repeat refuel procedure for opposite wing.
7. Remove ground wires.
8. Remove fire extinguisher.

Fuel Filtration Screen/Element

After the first 25 hours of operation, then every 50-hours or as conditions dictate, the fuel filtration screen in the gascolator must be cleaned. After cleaning, a small amount of grease applied to the gascolator bowl gasket will facilitate reassembly.

Refer to AMM Chapter 28: Fuel, Fuel Screen/Element servicing procedures.

Fuel Contamination and Sampling

Typically, fuel contamination results from foreign material such as water, dirt, rust, and fungal or bacterial growth. Additionally, chemicals and additives that are incompatible with fuel or fuel system components are also a source of fuel contamination. To ensure that the proper grade of fuel is used and that contamination is not present, the fuel must be sampled prior to each flight.

Each fuel system drain must be sampled by draining a cupful of fuel into a clear sample cup. Fuel drains are provided for the fuel gascolator, wing tanks, and collector tank drains. The gascolator drain exits the lower engine cowl just forward of the firewall near the airplane centerline. Fuel tank and collector tank drains are located at the low spot in the respective tank.

If sampling reveals contamination, the gascolator and tank drains must be sampled again repeatedly until all contamination is removed. It is helpful to gently rock the wings and lower the tail slightly to move contaminants to the drain points for sampling. If after repeated samplings (three or more), evidence of significant contamination remains, do not fly the airplane until a mechanic is consulted, the fuel system is drained and purged, and the source of contamination is determined and corrected.

If sampling reveals the airplane has been serviced with an improper fuel grade, do not fly the airplane until the fuel system is drained and refueled with an approved fuel grade.

To help reduce the occurrence of contaminated fuel coming from the supplier or fixed based operator, pilots should ensure that the fuel supply has been checked for contamination and that the fuel is properly filtered. Also, between flights, the fuel tanks should be kept as full as operational conditions permit to reduce condensation on the inside of fuel tanks. In extremely humid areas, the fuel supply should be checked frequently and drained of condensation to prevent possible contamination.

De-Fueling

The bulk of the fuel may be drained from the wing fuel tanks by the use of a siphon hose placed in the cell or tank through the filler neck. The remainder of the fuel may be drained by opening the drain valves. Use the same precautions as when refueling airplane. Refer to the AMM for specific procedures.

• NOTE •

Refer to AMM Chapter 12: Servicing, Airplane De-Fueling procedures for more information.

Battery Service

The aircraft is delivered with a maintenance-free, rechargeable, sealed, lithium-ion primary battery. Battery #1 is mounted to the bottom right side of the instrument panel and access is gained by removing the lower kick panel. The battery vent is connected to a tube that vents gases overboard.

If Battery #1 is completely discharged, the battery must be recharged within 60 days. Failure to recharge the battery will result in permanent depletion and the battery may need to be replaced. Refer to "To Recharge Battery # 1"

Battery #2 is a maintenance-free, rechargeable, sealed, lead acid battery. Mounted in the empennage just aft of bulkhead 222, there is no need to check the specific gravity of the electrolyte or add water to these batteries during their service life. Refer to AMM Chapter 5: Time Limits And Maintenance Checks, Overhaul and Replacement Schedule.

The external power receptacle is located on the left side of the fuselage just aft of the firewall. Refer to AMM Chapter 24: Electrical Power, External Power for servicing procedures.

To Recharge Battery # 1

1. Turn BAT 1 and BAT 2 switches OFF.
 2. Connect appropriately rated ground power.
 3. Turn BAT 1 switch ON.
 4. Navigate to the Electrical page on the MFD.
 5. Verify BAT 1 state of charge begins to increase.
 6. Continuing charging battery until state of charge is greater than 75%.
 7. Disconnect ground power.
-

Oxygen System Servicing

• CAUTION •

To preclude the possibility of fire by spontaneous combustion, oil, grease, paint, hydraulic fluid, and other flammable material should be kept away from oxygen equipment.

Service the oxygen system per the appropriate revision of the Precise Flight Instructions for Continued Airworthiness for the Cirrus SR22/SR22T Built-In Oxygen System, STC number SA01708SE, document number 102NPMAN0003.

Key Fob Battery Replacement

Serials w/ Convenience Lighting:

If the key fob does not function properly at normal range, the battery should be replaced. To replace the key fob battery:

To Replace Key Fob Battery

1. Using a thin flat object, pry the top and bottom halves of the key fob apart.
2. Remove and replace the battery with a new CR2032, or equivalent, 3-volt battery. Install the new battery with the positive side (+) facing up, away from the circuit board.
3. Press the top and bottom halves of the key fob back together.

ELT Servicing

The ELT batteries must be inspected in accordance with the Airplane Maintenance Manual, 5-20 - Scheduled Maintenance Checks.

The ELT batteries must be replaced upon reaching the date stamped on the batteries, after an inadvertent activation of unknown duration, or whenever the batteries have been in use for one cumulative hour.

Inspection / Test

After setting transmitter switch to TEST position, the ELT automatically enters a self-test mode. The self-test transmits a 406 MHz test coded pulse that monitors certain system functions before shutting off. The test pulse is ignored by any satellite that receives the signal, but the ELT uses this pulse to check output power and frequency. Other parameters of the ELT are checked and a set of error codes is generated if a problem is found. The error codes are indicated by a series of pulses on the transmitter LED, the Remote Switch and Control Panel Indicator (RCPI) LED, and alert buzzer.

• NOTE •

FAA regulations require that transmitter tests only be done during the first 5 minutes of each hour and must not last for more than 3 audio sweeps (1.5 seconds). If you are at a location where there is an FAA control tower or other monitoring facility, notify the facility before beginning the tests. Never activate the ELT while airborne for any reason.

Operators may wish to use a low quality AM broadcast receiver to determine if energy is being transmitted from the antenna. When the antenna of the radio (tuning dial on any setting) is held about 6 inches from the activated ELT antenna, the ELT aural tone will be heard on the AM broadcast receiver. This is not a measured check, but it does provide confidence that the antenna is radiating sufficient power to aid search and rescue. The aircraft's VHF receiver, tuned to 121.5 MHz, may also be used. This receiver, however, is more sensitive and could pick up a weak signal even if the radiating ELT's antenna is disconnected. Therefore, it does not check the integrity of the ELT system or provide the same level of confidence as does an AM radio.

To Service ELT

1. Tune aircraft receiver to 121.5 MHz.
2. Push switch lever to TEST position for approximately 1 second, and then release.
3. Results of the test are displayed by a series of indications (flash codes), where the local LED, remote switch LED and buzzer(s) activate for $\frac{1}{2}$ second ON, followed by $\frac{1}{2}$ second OFF. Error codes, indicated by multiple flashes separated by 1-second periods, will begin to display after approximately 1 second.
4. Flash Codes displayed with the associated conditions are as follows:
 - a. 1-Flash: Indicates that the system is operational and that no error conditions were found.
 - b. 2-Flashes: Not used. If displayed, correct condition before further flight.

- c. 3-Flashes: Not used. If displayed, correct condition before further flight.
- d. 4-Flashes: Indicates low output power. If displayed, correct condition before further flight.
- e. 5-Flashes: Indicates no position data present. If displayed, correct condition before further flight.

• NOTE •

BAT1 must be powered on to provide position data to the ELT.

- f. 6-Flashes: Indicates G-switch loop is not present. If displayed, correct condition before further flight.
- g. 7-Flashes: Battery check. If displayed, correct condition before further flight.
- h. 8-Flashes: Indicates programming data missing. If displayed, correct condition before further flight.

Serials w/ IPS: IPS Storage and Service

• CAUTION •

During long periods of non-use, the porous panel membranes may dry out which could cause uneven fluid flow during subsequent operation. Perform the Pre-Flight Inspection every 30 days to keep porous panel membranes wetted.

Use only approved deicing fluid. See Section 2, Limitations. To prevent fluid contamination, maintain a clean, dedicated measuring container and ensure mouth of fluid container is clean before dispensing. Secure the filler cap immediately after filling.

Certain solvents may damage the panel membrane. Use only soap and water, isopropyl alcohol, or ethyl alcohol to clean panels. Do not wax leading edge porous panels.

Storage

To prepare the Ice Protection System for flyable storage, fill the deicing fluid tanks and perform the Pre-Flight Inspection to verify evidence of ice protection fluid along the length of all porous panels. The tanks may then be drained until the next service interval (30 days minimum) or operation of the system is desired.

To Service IPS

Deicing Fluid Tank

The deicing fluid tanks are serviced through filler caps in the upper wing skins. Each tank is individually drained and vented by lock-open/lock-close valves in the lower wing skins.

Porous Panels

Periodically clean porous panels with soap and water using a clean, lint-free cloth. Isopropyl alcohol may be used to remove oil or grease.

Metering Pump Priming

If air entered the system due to the fluid tank(s) running dry during system operation, it may require several cycles of the windshield/priming pump to prime the metering pumps.

In the event that the metering pumps cannot prime themselves, the windshield/priming pump may be cycled, 3s ON, 3s OFF, to draw fluid from the tank to prime the metering pump manifolds and to remove any entrapped air between the metering pumps and the fluid tank(s).

Cleaning Exterior Surfaces

• CAUTION •

Airplane serials with Ice Protection System: Do not wax leading edge porous panels. Refer to Section 9: Log of Supplements of this handbook for instructions and limitations for airplanes equipped with the Ice Protection System.

Prior to cleaning, place the airplane in a shaded area to allow the surfaces to cool.

The airplane should be washed with a mild soap and water. Harsh abrasives or alkaline soaps or detergents could make scratches on painted or plastic surfaces or could cause corrosion of metal. Cover static ports and other areas where cleaning solution could cause damage. Be sure to remove the static port covers before flight.

Painted Surfaces

• NOTE •

Any good silicone-free automotive wax may be used to preserve painted surfaces. Soft cleaning cloths or a chamois should be used to prevent scratches when cleaning or polishing. A heavier coating of wax on the leading surfaces will reduce the abrasion problems in these areas.

To Clean Painted Surfaces

1. Flush away loose dirt with water.
2. Apply cleaning solution with a soft cloth, a sponge, or a soft bristle brush.
3. To remove exhaust stains, allow the solution to remain on the surface longer.
4. To remove stubborn oil and grease, use a cloth dampened with naphtha.
5. Rinse all surfaces thoroughly.

Exterior Windshield and Windows

Before cleaning an acrylic window, rinse away all dirt particles before applying cloth or chamois. Never rub dry acrylic. Dull or scratched window coverings may be polished using a special acrylic polishing paste.

• CAUTION •

Clean acrylic windows with a solvent-free, non-abrasive, antistatic acrylic cleaner. Do not use gasoline, alcohol, benzene, carbon tetrachloride, thinner, acetone, or glass window cleaning sprays.

Use only a non-abrasive cotton cloth or genuine chamois to clean acrylic windows. Paper towel or newspaper are highly abrasive and will cause hairline scratches.

To Clean Exterior Windshield and Windows

1. Remove grease or oil using a soft cloth saturated with kerosene then rinse with clean, fresh water.

• NOTE •

Wiping with a circular motion can cause glare rings. Use an up and down wiping motion on the windshield in the direction of the airflow to prevent this.

To prevent scratching from dirt that has accumulated on the cloth, fold cloth to expose a clean area after each pass.

2. Using a moist cloth or chamois, gently wipe the windows clean of all contaminants.
3. Apply acrylic cleaner to one area at a time, then wipe away with a soft, cotton cloth.
4. Dry the windows using a dry non-abrasive cotton cloth or chamois.

Enhanced Vision System Sensor Lenses (Optional)

The Enhanced Vision System Sensor is located on the underside of the LH wing. The three sensor lenses are made of Germanium. In contrast to visible light energy, infrared energy typically passes through dirt on the lens. As such, the Sensor lenses require only occasional cleaning.

• CAUTION •

If an EVS Sensor Lens breaks, use gloves and masks when handling broken Germanium lens material.

Do not use abrasive cleansers or cleaning pads on the Germanium lens. Abrasive cleaning can damage the sensor lens coating.

Do not use any cleansers containing ammonia. Ammonia will remove the sensor lens coating.

To Clean EVS Sensor Lenses

1. Apply mild liquid soap and water or isopropyl alcohol, then wipe away with a soft, cotton cloth.
2. Dry the sensor lenses using a dry non-abrasive cotton cloth.

Engine Compartment

Before cleaning the engine compartment, place a strip of tape on the magneto vents to prevent any solvent from entering these units.

The engine exterior and compartment may be cleaned with a dry cleaning solvent, MIL-PRF-680 Type II.

To Clean Engine Compartment

1. Place a large pan under the engine to catch waste.
2. Remove induction air filter and seal off induction system inlet.
3. With the engine cowling removed, spray or brush the engine with solvent or a mixture of solvent and degreaser. In order to remove especially heavy dirt and grease deposits, it may be necessary to brush areas that were sprayed.

• CAUTION •

Do not spray solvent into the alternator, vacuum pump, starter, or induction air intakes.

4. Allow the solvent to remain on the engine from 5 to 10 minutes. Then rinse engine clean with additional solvent and allow it to dry.

• CAUTION •

Do not operate the engine until excess solvent has evaporated or otherwise been removed.

5. Remove the protective tape from the magnetos.
6. Open induction system air inlet and install filter.
7. Lubricate in accordance with AMM Chapter 12: Servicing.

Landing Gear

Before cleaning the landing gear, place a plastic cover or similar material over the wheel and brake assembly.

To Clean Landing Gear

1. Place a pan under the gear to catch waste.
2. Spray or brush the gear area with solvent or a mixture of solvent and degreaser, as desired. Where heavy grease and dirt deposits have

collected, it may be necessary to brush areas that were sprayed, in order to clean them.

3. Allow the solvent to remain on the gear from five to ten minutes. Then rinse the gear with additional solvent and allow to dry.
4. Remove the cover from the wheel and remove the catch pan.
5. Lubricate the gear in accordance with AMM Chapter 12: Servicing.

Recommended Exterior Cleaning Products

Cleaning Application	Cleaning Product	Supplier
Painted Exterior	Pure Carnauba Wax	Any Source
	Mothers California Gold Pure Carnauba Wax	Mothers Polish
	RejeX High Gloss Protective Finish	Corrosion Technologies
	WX/Block System	Wings and Wheels
	AeroShell Flight Jacket Plexicoat	Aeroshell
Painted Exterior and Landing Gear	XL-100 Heavy-Duty Cleaner/Degreaser	Buckeye International
Engine Compartment	Stoddard Solvent PD-680 Type II	Any Source
Exterior Windshield and Windows	Kerosene	Any Source
	Klear-To-Land	D.W. Davies & Co
	Plastic and Glass Cleaner	Prist Aerospace
	Acrylic Polish & Sealant	LP Aero Plastics

Care of Graphics

Graphics require care similar to any fine paint finish. Use high quality products ed specifically for use on automobile finishes. Use products in accordance with the manufacturer's instructions.

Graphics, like paint, are degraded by prolonged exposure to sun and atmospheric pollutants. Store aircraft in a hangar, under a cloth cover, or shaded area whenever possible. Protect aircraft from dew and rain which may contain acidic pollutants (commonly found in large metropolitan areas).

• CAUTION •

If graphics start to discolor or turn brown as a result of exposure to acidic pollution, immediately have a professional remove the graphic from the aircraft to avoid staining the underlying paint.

To Wash and Clean Graphics

Wash graphics whenever the aircraft appears dirty. Contaminants allowed to remain on the exterior may be more difficult to remove.

1. Rinse off as much dirt and grit as possible with a spray of water.
2. Clean graphic with a wet, non-abrasive detergent such as 3M™ Car Wash Soap 39000, Meguiar's NXT Generation® Car Wash, or Deep Crystal® Car Wash, and a soft, clean cloth or sponge.
3. Rinse thoroughly with clean water.
4. To reduce water spotting, immediately use a silicone squeegee to remove water.
5. Dry with a clean microfiber cloth.

To Pressure Wash Graphics

Although hand washing is preferred, pressure washing may be used when necessary to remove dirt and contaminants. Pressure washing must be performed in accordance with the following procedure:

1. Ensure water pressure is less than 2000 psi (14 MPa).
2. Ensure water temperature is less than 180 °F (82 °C).
3. Use a spray nozzle with a 40° wide angle spray pattern.

• CAUTION •

Holding the nozzle of a pressure washer at an angle less than 90° to the graphic may lift the edges of the graphic.

4. Keep the spray nozzle perpendicular to the graphic, and at a distance of at least 1 foot (30 cm).
5. To reduce water spotting, immediately use a silicone squeegee to remove water.
6. Dry with a clean microfiber cloth.

To Spot Clean Difficult Contaminants

Difficult contaminants such as bugs, bird droppings, or tree sap may require spot cleaning.

• CAUTION •

To prevent scratching the graphic, refrain from rough scrubbing and the use of abrasive tools.

1. Soften contaminants by soaking with hot, soapy water for several minutes.
2. Rinse thoroughly with clean water.
3. To reduce water spotting, immediately use a silicone squeegee to remove water.
4. Dry with a clean microfiber cloth.

• CAUTION •

Initially test cleaning products on an inconspicuous area of the graphic to verify they will not cause damage.

5. If further cleaning is needed, one of the following products may be used: Meguiar's Gold Class™ Bug and Tar Remover, 3M™ Citrus Base Cleaner, a mixture of two parts isopropyl alcohol to one part water (mix ratio 2:1), or denatured alcohol.
6. Immediately rinse off all residue with clean water.
7. To reduce water spotting, immediately use a silicone squeegee to remove water.
8. Dry with a clean microfiber cloth.

To Clean Fuel Spills

• CAUTION •

Immediately clean fuel spills to avoid degrading the vinyl and adhesive used in the graphic.

1. Wipe off spilled fuel.
2. Clean graphic with a wet, non-abrasive detergent such as 3M™ Car Wash Soap 39000, Meguiar's NXT Generation® Car Wash, or Deep Crystal® Car Wash, and a soft, clean cloth or sponge.
3. Rinse thoroughly with clean water.
4. To reduce water spotting, immediately use a silicone squeegee to remove water.
5. Dry with a clean microfiber cloth.

Graphic Restoration

If typical cleaning methods fail to produce satisfactory results, refer to the recommended restoration products and mixtures below to help preserve the condition of the graphics on your aircraft.

• CAUTION •

Do not use abrasive polishes or cutting compounds.

Do not use polish or wax on graphics with a matte or texture finish.

Initially test restoration products and mixtures on an inconspicuous area of the graphic to verify they will not cause damage.

• NOTE •

Use an all-purpose cleaner to remove wax or wax residue.

Recommended Graphic Restoration Products and Mixtures

Film or Finish Type	Cleaning Product or Mixture	Supplier
Smooth Gloss	3M™ Perfect-it™ Show Car Paste Wax 39526	3M Company
	Meguiar's Gold Class™ Carnuaba Plus Premium Liquid Wax	Meguiar's
Matte or Satin Texture	Mixture of two parts isopropyl alcohol to one part water (mix ratio 2:1)	Any Source
Matte White (1080-M10) Carbon Fiber White Texture (1080-CF10)	Depending on the type and degree of contamination to be removed, use one or more of the following solutions in the order shown: <ol style="list-style-type: none"> 1. Hot, soapy water solution 2. Mixture of two parts isopropyl alcohol to one part water (mix ratio 2:1) 3. Simple Green® All-Purpose Cleaner 4. Household chlorine bleach, followed by a mixture of two parts isopropyl alcohol to one part water (mix ratio 2:1) 5. Mineral spirits, followed by a mixture of two parts isopropyl alcohol to one part water (mix ratio 2:1) 	Any Source
Carbon Fiber or Brushed Metal Texture	3M™ Tire Restorer	3M Company
	Meguiar's Natural Shine Protectant	Meguiar's
Carbon Fiber Black Texture (1080-CF12)	Meguiar's Ultimate Black Plastic Restorer	Meguiar's

Cleaning Interior Surfaces

Seats, carpet, upholstery panels, and headliners should be vacuumed at regular intervals to remove surface dirt and dust. While vacuuming, use a fine bristle nylon brush to help loosen particles.

• CAUTION •

Remove any sharp objects from pockets or clothing to avoid damaging interior panels or upholstery.

Interior Windshield and Windows

Never rub dry acrylic. Dull or scratched window coverings may be polished using a special acrylic polishing paste.

• CAUTION •

Clean acrylic windows with a solvent-free, non-abrasive, antistatic acrylic cleaner. Do not use gasoline, alcohol, benzene, carbon tetrachloride, thinner, acetone, or glass window cleaning sprays.

Use only a non-abrasive cotton cloth or genuine chamois to clean acrylic windows. Paper towel or newspaper are highly abrasive and will cause hairline scratches.

• NOTE •

Wiping with a circular motion can cause glare rings. Use an up and down wiping motion on the windshield in the direction of the airflow to prevent this.

To prevent scratching from dirt that has accumulated on the cloth, fold cloth to expose a clean area after each pass.

To Clean Interior Windshield and Windows

1. Using a moist cloth or chamois, gently wipe the windows clean of all contaminants.
2. Apply acrylic cleaner to one area at a time, then wipe away with a soft, cotton cloth.
3. Dry the windows using a dry, non-abrasive cotton cloth or chamois.

Instrument Panel and Electronic Display Screens

The instrument panel, control knobs, and plastic trim need only to be wiped clean with a soft, damp cloth. The multifunction display, primary flight display, and other electronic display screens should be cleaned with Optimax - LCD Screen Cleaning Solution as follows:

• CAUTION •

To avoid solution dripping onto display and possibly migrating into component, apply the cleaning solution to cloth first, not directly to the display screen.

Use only a lens cloth or non-abrasive cotton cloth to clean display screens. Paper towels, tissue, or camera lens paper may scratch the display screen.

Clean display screen with power OFF.

To Clean Instrument Panel and Electronic Display Screens

1. Gently wipe the display with a dry, clean, cotton cloth.
2. Moisten clean cotton cloth with cleaning solution.
3. Wipe the soft cotton cloth across the display in one direction, moving from the top of the display to the bottom. Do not rub harshly.
4. Gently wipe the display with a dry, clean cotton cloth.

Headliner and Trim Panels

The airplane interior can be cleaned with a mild detergent or soap and water. Harsh abrasives or alkaline soaps or detergents should be avoided. Solvents and alcohols may damage or discolor vinyl or urethane parts. Cover areas where cleaning solution could cause damage.

• CAUTION •

Solvent cleaners and alcohol should not be used on interior parts. If cleaning solvents are used on cloth, cover areas where cleaning solvents could cause damage.

To Clean Headliner and Trim Panels

1. Clean headliner, and side panels, with a stiff bristle brush, and vacuum where necessary.
2. Soiled upholstery, may be cleaned with a good upholstery cleaner suitable for the material. Carefully follow the manufacturer's instructions. Avoid soaking or harsh rubbing.

Leather Upholstery and Seats

For routine maintenance, occasionally wipe leather upholstery with a soft, damp cloth. For deeper cleaning, start with mix of mild detergent and water and, if necessary, work your way up to the products available from Cirrus for more stubborn marks and stains. Do not use soaps as they contain alkaline which will alter the leather's pH balance and cause the leather to age prematurely. Cover areas where cleaning solution could cause damage.

• CAUTION •

Solvent cleaners and alcohol should not be used on leather upholstery.

To Clean Leather Upholstery and Seats

1. Clean leather upholstery with a soft bristle brush, and vacuum where necessary.
2. Wipe leather upholstery with a soft, damp cloth.
3. Soiled upholstery, may be cleaned with the approved products available from Cirrus. Avoid soaking or harsh rubbing.

Carpets

To clean carpets, first remove loose dirt with a whiskbroom or vacuum. For soiled spots and stubborn stains use a non-flammable, dry cleaning fluid. Floor carpets may be cleaned like any household carpet.

Recommended Interior Cleaning Products

Cleaning Application	Cleaning Product	Supplier
Interior Windshield and Windows	Plastic and Glass Cleaner	Prist Aerospace
Display Screens	Optimax	PhotoDon
Cabin Interior	Mild Dishwasher Soap (abrasive-free)	Any Source
Leather Upholstery	Leather Care Kit 50689-001	Hemisphere International
	Leather Cleaner 50684-001	Cirrus
	Ink Remover 50685-001	Cirrus
	Leather Conditioner 50686-001	Cirrus
	Spot and Stain Remover 50687-001	Cirrus
Vinyl Panels	Vinyl Finish Cleaner 50688-001	Cirrus
Vinyl and Leather Upholstery	Vinyl & Leather Cleaner	Sprayway, Inc.

Intentionally Left Blank

Section 9: Log of Supplements

Table of Contents

As Required

FAA Approved AFM Supplements must be in the airplane for flight operations when the subject optional equipment is installed or the special operations are to be performed.

This Log of Supplements shows all Cirrus Supplements available for the aircraft at the corresponding date of the revision level shown in the lower left corner. A check mark in the Part Number column indicates that the supplement is applicable to the AFM. Any installed supplements not applicable to the AFM are provided for reference only.

Section 10: Safety Information

Table of Contents

Introduction.....	3
Cirrus Airframe Parachute System (CAPS).....	3
Deployment Scenarios	4
Mid-Air Collision	4
Structural Failure	4
Loss of Control	4
Landing Required in Terrain not Permitting a Safe Landing.....	5
Pilot Incapacitation	5
General Deployment Information	5
Deployment Speed	5
Deployment Altitude	5
Deployment Attitude	6
Landing Considerations.....	6
Emergency Landing Body Position	6
Door Position	7
Water Landings	7
Post-Impact Fire	8
Ground Gusts	8

Intentionally Left Blank

Introduction

This aircraft is ed to operate safely and efficiently in a flight environment. However, like any other aircraft, pilots must maintain proficiency to achieve maximum safety, utility, and economy. Cirrus strongly recommends that all pilots seek regular recurrent training and that they operate in accordance with the Cirrus Flight Operations Manual and Envelope of Safety.

As the pilot, you must be thoroughly familiar with the contents of this Handbook, the Handbook Supplements, Flight Checklist, and operational guides and data provided by manufacturers of equipment installed in this airplane. You must operate the airplane in accordance with the applicable FAA operating rules and within the limitations specified in Section 2 of this Handbook.

• **NOTE** •

Refer to [Section 9: Log of Supplements](#) for applicable FAA operating rules.

The Normal Procedures section of this Handbook was ed to provide guidance for day-to-day operation of this airplane. The procedures given are the result of flight testing, FAA certification requirements, and input from pilots with a variety of operational experience. Become fully familiar with the procedures, perform all the required checks, and operate the airplane within the limitations and as outlined in the procedures.

Cirrus Airframe Parachute System (CAPS)

The Cirrus Airframe Parachute System (CAPS) is ed to lower the aircraft and its passengers to the ground in the event of a life-threatening emergency. CAPS deployment will likely result in damage to, or loss of, the airframe, and possible injury to the aircraft occupants. Its use should not be taken lightly. Instead, possible CAPS activation scenarios should be well thought out and mentally practiced by every Cirrus pilot. Pilots who regularly conduct CAPS training and think about using CAPS will often have a higher probability of deploying CAPS when necessary.

The following discussion is meant to guide your thinking about CAPS activation. Cirrus also recommends that pilots discuss CAPS deployment scenarios with instructors as well as fellow pilots through forums such as the Cirrus Owners and Pilots Association. In the event of a spin or loss of aircraft control, immediate CAPS activation is required. (See Section 3) In other situations, CAPS activation is at the informed discretion of the pilot in command. The following discussion is intended to be informative, not directive. It is the responsibility of you, the pilot, to determine when and how the CAPS will be used. It is important to understand, however, that numerous fatalities that have occurred in Cirrus aircraft accidents likely could have been avoided if pilots had made the timely decision to deploy

CAPS. It is also important to note that CAPS has been activated by pilots at speeds in excess of 180 knots on multiple occasions with successful outcomes. While the best speed to activate CAPS is below 140 knots indicated airspeed, a timely activation is most important for loss of control situations.

Deployment Scenarios

This section describes possible scenarios in which CAPS activation is appropriate. This list is not intended to be exhaustive, but merely illustrative of the type of circumstances when CAPS deployment could be the most appropriate means of saving the aircraft occupants.

Mid-Air Collision

A mid-air collision likely will render the airplane unflyable by damaging the control system or primary structure. If a mid-air collision occurs, immediately evaluate if the airplane is controllable and structurally capable of continued safe flight and landing. Unless it is apparent that structural and control system damage has not occurred, CAPS activation is recommended. If you are not sure of the condition of the aircraft following a mid-air collision, CAPS activation is recommended.

Structural Failure

Structural failure may result from many situations, such as: encountering severe gusts at speeds above the airplane's structural cruising speed, inadvertent full control movements above the airplane's maneuvering speed, or exceeding the load factor while maneuvering. If a structural failure occurs, CAPS activation is recommended.

Loss of Control

Loss of control may result from many situations, such as: a control system failure (disconnected or jammed controls); severe wake turbulence, severe turbulence causing upset, severe airframe icing, or pilot disorientation caused by vertigo or panic. If loss of control occurs, the CAPS should be activated immediately.

• WARNING •

In the event of a spin, immediate CAPS activation is mandatory. Under no circumstances should the pilot attempt recovery from a spin other than by CAPS activation.

Landing Required in Terrain not Permitting a Safe Landing

If a forced landing on an unprepared surface is required CAPS activation is recommended unless the pilot in command concludes there is a high likelihood that a safe landing can be accomplished. If a condition requiring a forced landing occurs over rough or mountainous terrain, over water out of gliding distance to land, over widespread ground fog or at night, CAPS activation is strongly recommended. Numerous fatalities that have occurred in Cirrus aircraft accidents likely could have been avoided if pilots had made the timely decision to deploy CAPS.

While attempting to glide to an airfield to perform a power off landing, the pilot must be continuously aware of altitude and ability to successfully perform the landing. Pilot must make the determination by 2000' AGL if the landing is assured or if CAPS will be required.

Pilot Incapacitation

Pilot incapacitation may be the result of anything from a pilot's medical condition to a bird strike that injures the pilot. If incapacitation occurs and the passengers are not trained to land the aircraft, CAPS activation by the passengers is highly recommended. This scenario should be discussed with passengers prior to flight and all appropriate passengers should be briefed on CAPS operation so they could effectively deploy CAPS if required.

General Deployment Information

Deployment Speed

The maximum speed at which deployment has been demonstrated is 140 KIAS. Deployment at higher speeds could subject the parachute and aircraft to excessive loads that could result in structural failure. Once a decision has been made to deploy the CAPS, make all reasonable efforts to slow to the minimum possible airspeed. However, if time and altitude are critical, and/or ground impact is imminent, the CAPS should be activated regardless of airspeed.

Deployment Altitude

The altitude loss during a particular deployment depends upon the airplane's airspeed, altitude and attitude at deployment as well as other environmental factors. In all cases, however, the chances of a successful deployment increase with altitude. In the event of a spin, immediate CAPS activation is mandatory regardless of altitude. In other situations, the pilot in command may elect to troubleshoot a mechanical problem or attempt to descend out of icing conditions if altitude and flight conditions permit. If circumstances permit, it is advisable to activate the CAPS at or above 2,000 feet AGL. The minimum recommend altitude for activating CAPS is 600

feet AGL. A low altitude deployment leaves little or no time for the aircraft to stabilize under the canopy or for the cabin to be secured and increases the risk of injury or death. At any altitude, once the CAPS is determined to be the only alternative available for saving the aircraft occupants, deploy the system without delay.

Deployment Attitude

The CAPS has been tested in all flap configurations at speeds ranging from V_{SO} to V_A . Most CAPS testing was accomplished from a level attitude. Deployment from a spin was also tested. From these tests it was found that as long as the parachute was introduced to the free air by the rocket, it would successfully recover the aircraft into its level descent attitude under parachute. However, it can be assumed that to minimize the chances of parachute entanglement and reduce aircraft oscillations under the parachute, the CAPS should be activated from a wings-level, upright attitude if at all possible.

Landing Considerations

After a CAPS deployment, the airplane will descend at less than 1700 feet per minute with a lateral speed equal to the velocity of the surface wind. The CAPS landing touchdown is equivalent to ground impact from a height of approximately 13 feet. While the airframe, seats, and landing gear are designed to accommodate the stress, occupants must be prepared for the landing. The overriding consideration in all CAPS deployed landings is to prepare the occupants for the touchdown in order to protect them from injury as much as possible.

Emergency Landing Body Position

The most important consideration for a touchdown with CAPS deployed is to protect the occupants from injury, especially back injury. Contacting the ground with the back offset attempting to open a door or secure items increases the likelihood of back injury. All occupants must be in the emergency landing body position well before touchdown. After touchdown, all occupants should maintain the emergency landing body position until the airplane comes to a complete stop.

The emergency landing body position is assumed with tightened seat belt and shoulder harness by placing both hands beside the legs, and holding the upper torso erect and against the seat backs. The seat cushions contain an aluminum honeycomb core designed to crush under impact to absorb downward loads and help protect the spine from compression injury.

Door Position

For most situations, it is best to leave the doors latched and use the time available to transmit emergency calls, shut down systems, and get into the Emergency Landing Body Position well before impact. The discussion below gives some specific recommendations, however, the pilot's decision will depend upon all factors, including time to impact, altitude, terrain, winds, condition of airplane, etc.

There is the possibility that one or both doors could jam at impact. If this occurs, to exit the airplane, the occupants will have to force open a partially jammed door or break through a door window using the Emergency Exit Hammer located in the lid of the center armrest. This can significantly delay the occupants from exiting the airplane.

If the pilot elects to touchdown with a door opened, there are several additional factors the pilot must consider: loss of door, possibility of head injury, or injury from an object coming through the open door.

- If a door is open prior to touchdown in a CAPS landing, the door will most likely break away from the airplane at impact.
- If the door is open and the airplane contacts the ground in a rolled condition, an occupant could be thrown forward and strike their head on the exposed door pillar. Contacting the ground in a rolled condition could be caused by terrain that is not level, contacting an obstacle such as a tree, or by transient aircraft attitude.
- With a door open, it is possible for an object such as a tree limb or flying debris to come through the opening and strike an occupant.

• WARNING •

If it is decided to unlatch a door, unlatch one door only. Opening only one door will provide for emergency egress as well as reduce risks associated with ground contact. Typically, this would be the copilot's door as this allows the other occupants to exit first after the airplane comes to rest.

Water Landings

The ability of the airplane to float after a water landing has not been tested and is unknown. However, since there is the possibility that one or both doors could jam and use of the emergency egress hammer to break out a window could take some time, the pilot may wish to consider unlatching a door prior to assuming the emergency landing body position in order to provide a ready escape path should the airplane begin to sink.

Post-Impact Fire

If there is no fire prior to touchdown and the pilot is able to shut down the engine, fuel, and electrical systems, there is less chance of a post impact fire. If the pilot suspects a fire could result from impact, unlatching a door immediately prior to assuming the emergency landing body position should be considered to assure rapid egress.

Ground Gusts

If it is known or suspected that ground gusts are present in the landing zone, there is a possibility that the parachute could drag the airplane after touchdown, especially if the terrain is flat and without obstacles. In order to ensure that the occupants can escape the airplane in the timeliest manner after the airplane comes to rest, the pilot may elect to unlatch the copilot's door for the CAPS landing. Occupants must be in the Emergency Landing Body Position for touchdown. Occupants must not loosen seat belts until the airplane comes to rest. When the airplane comes to rest, the occupants should exit the airplane and immediately move upwind to prevent a sudden gust from dragging the airplane in their direction.